




Flash Fire Motorized Blaster Alt 3 & Alt 4 47010


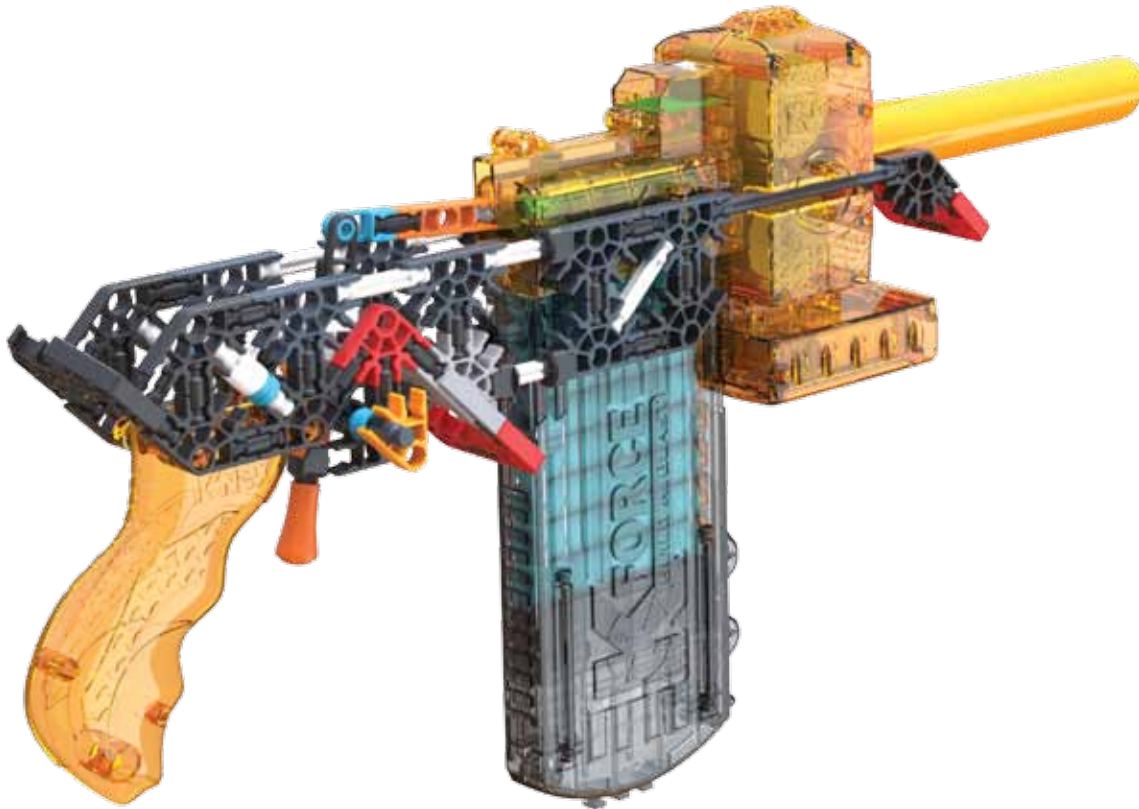


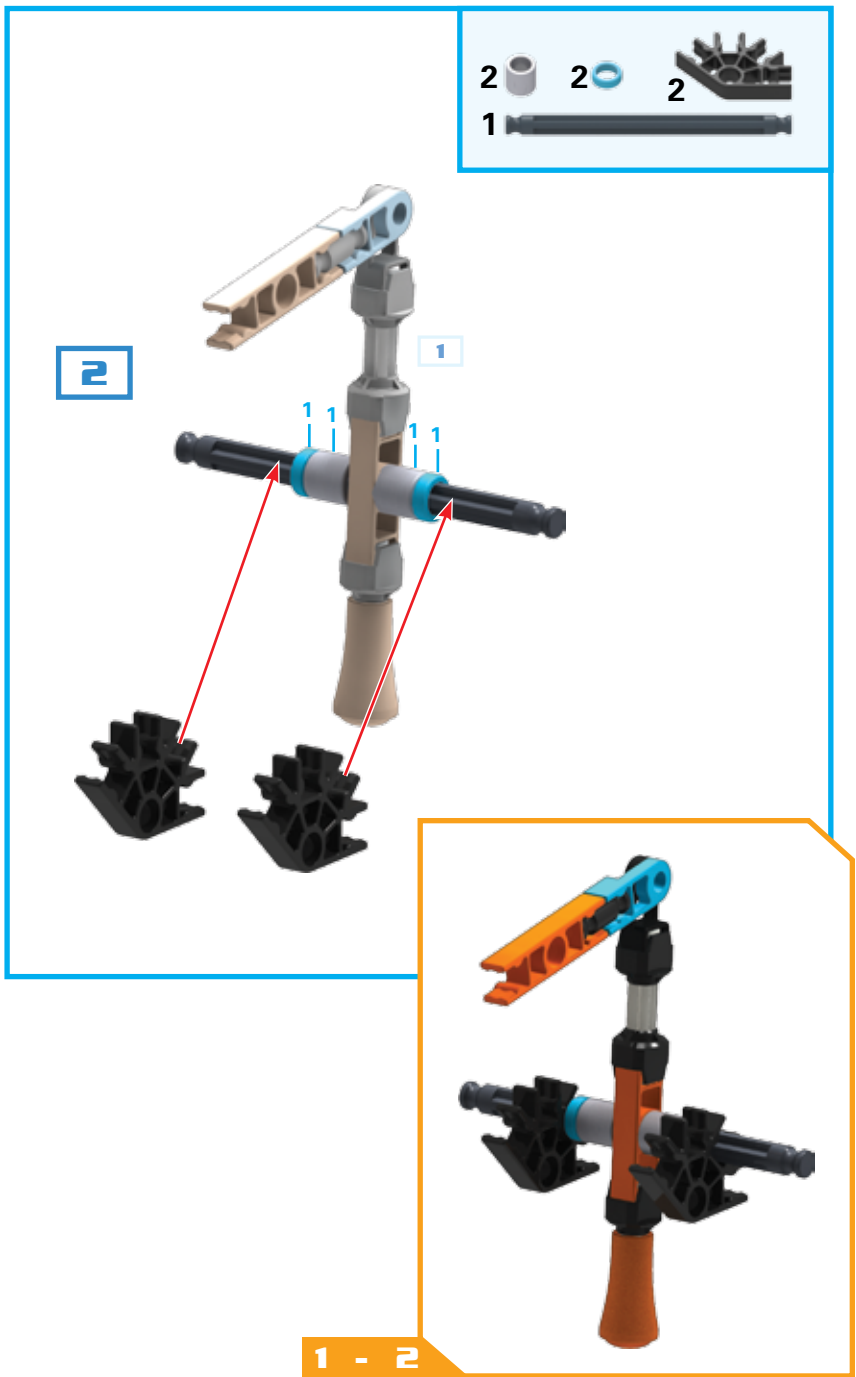


4 2

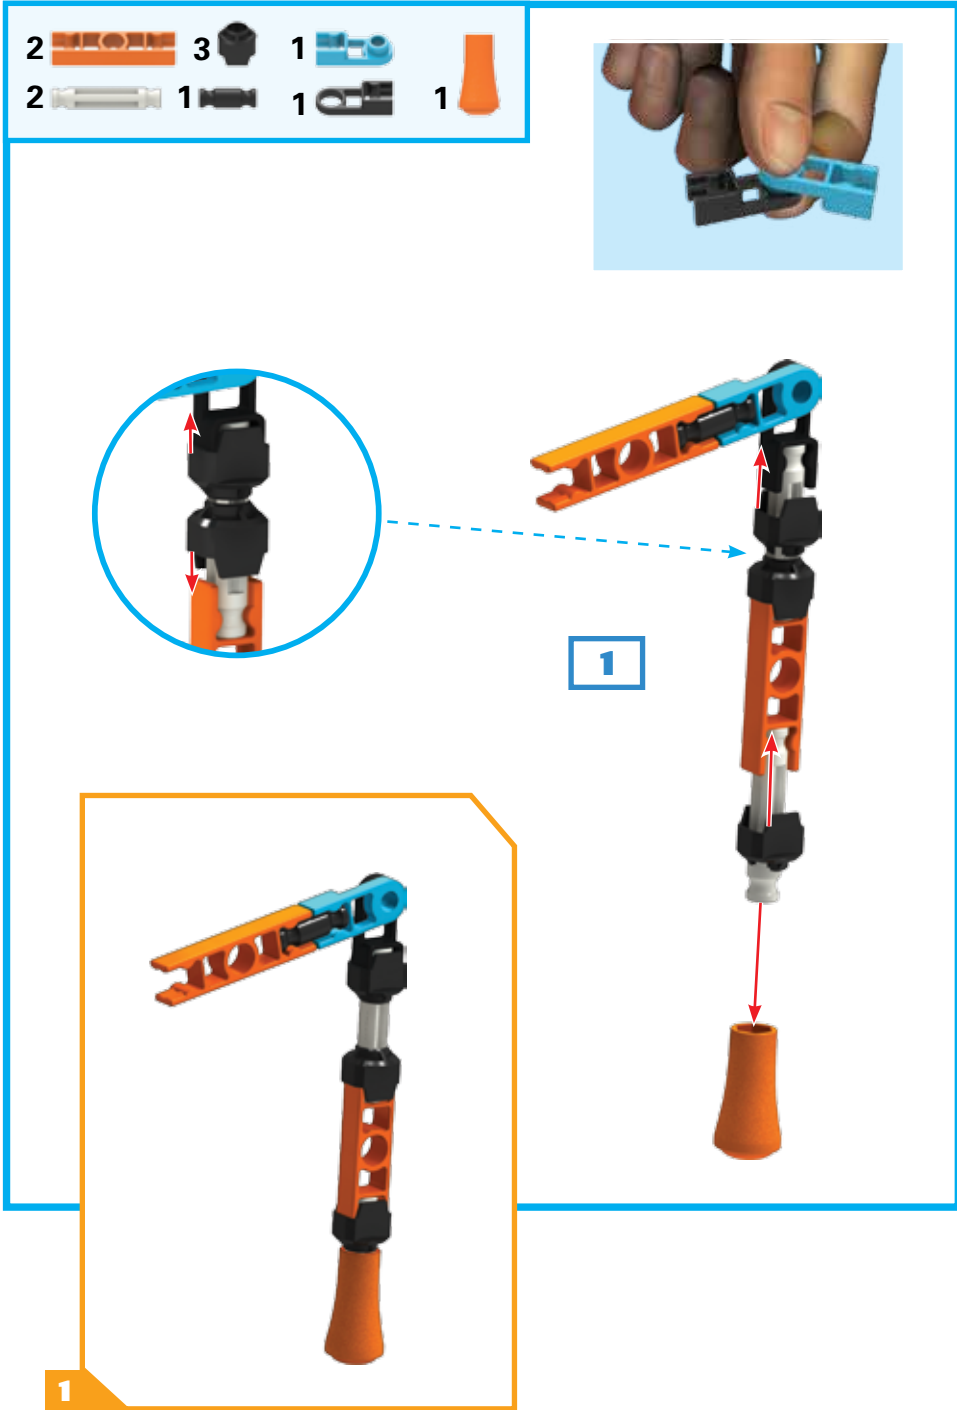

3

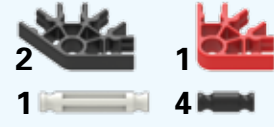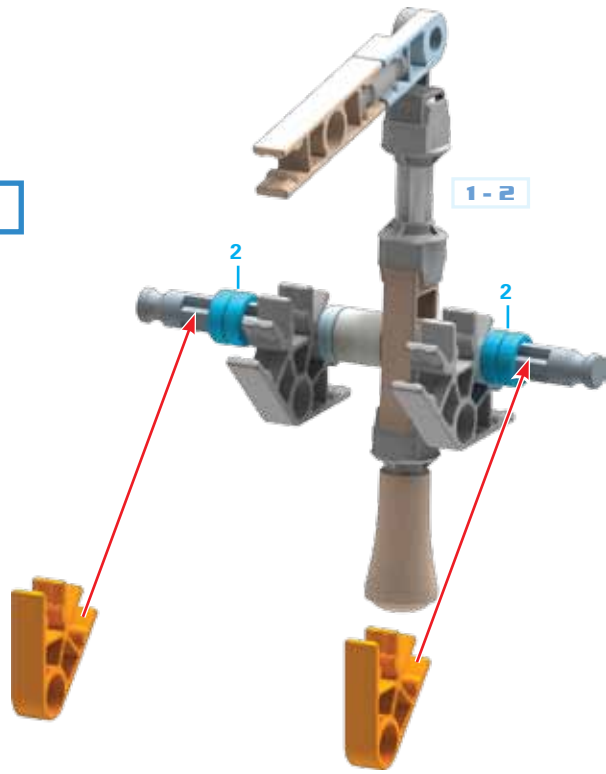


4

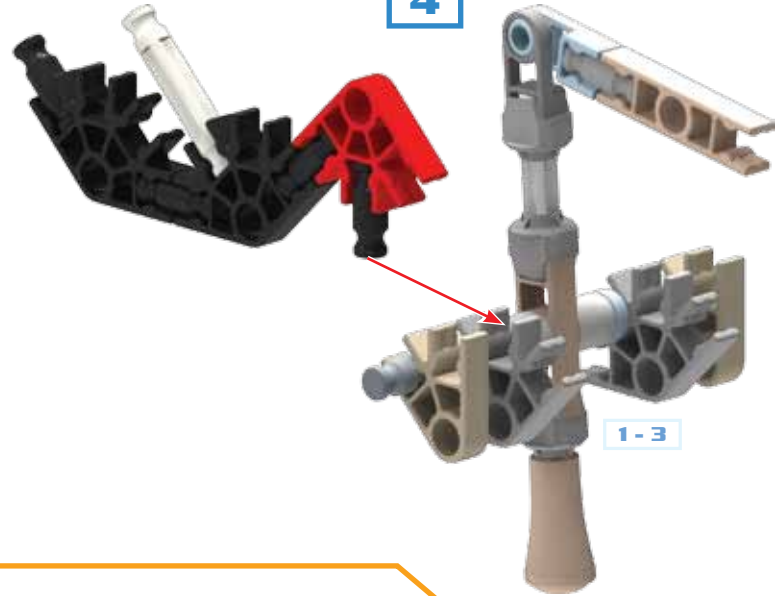



1-3

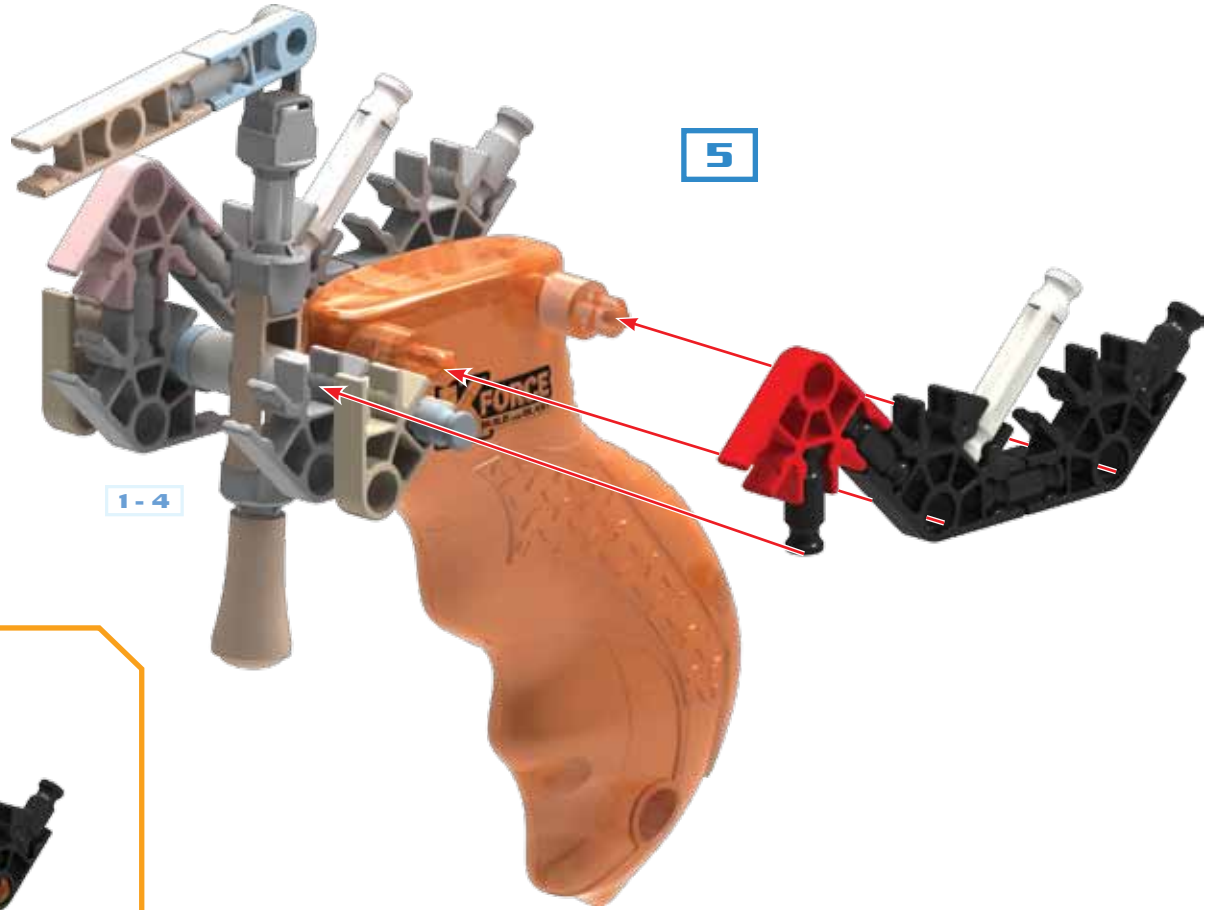



1-4





1-5


- 4 
- 1 

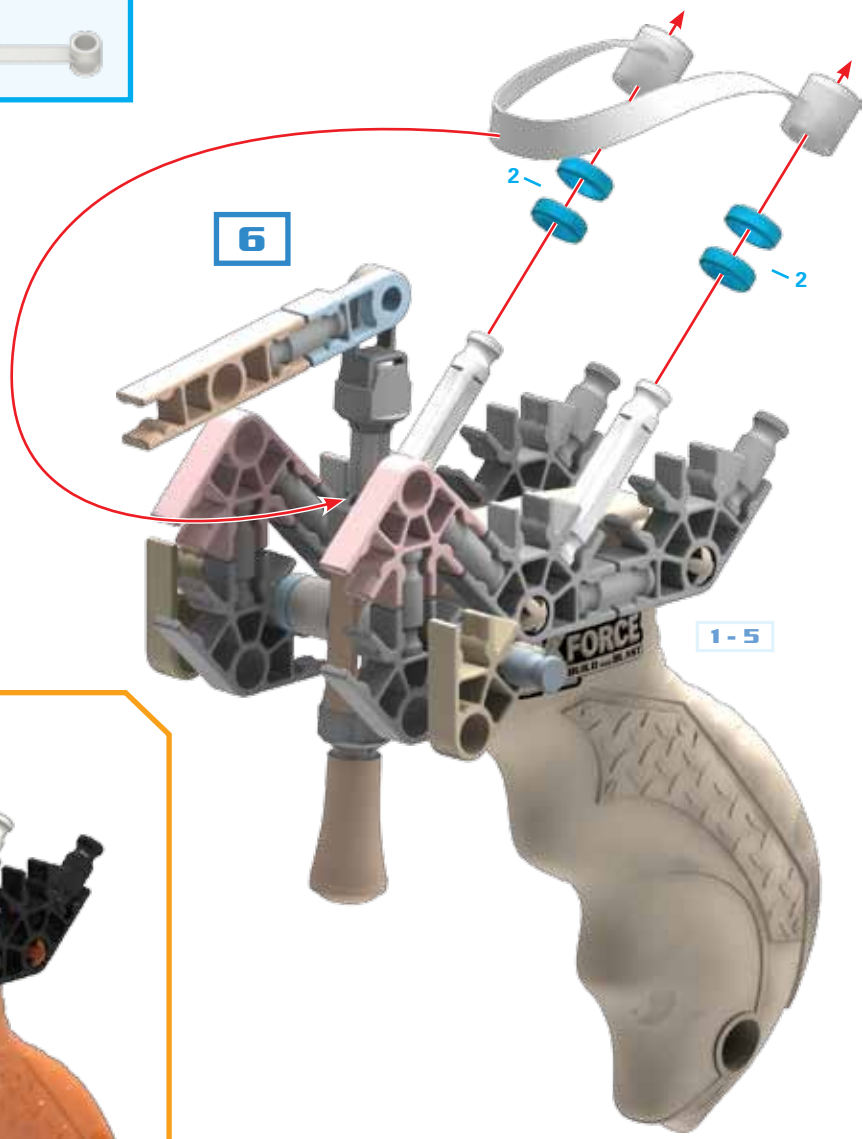


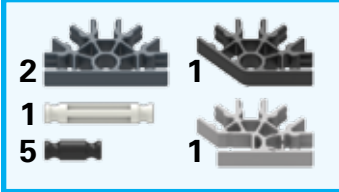

7

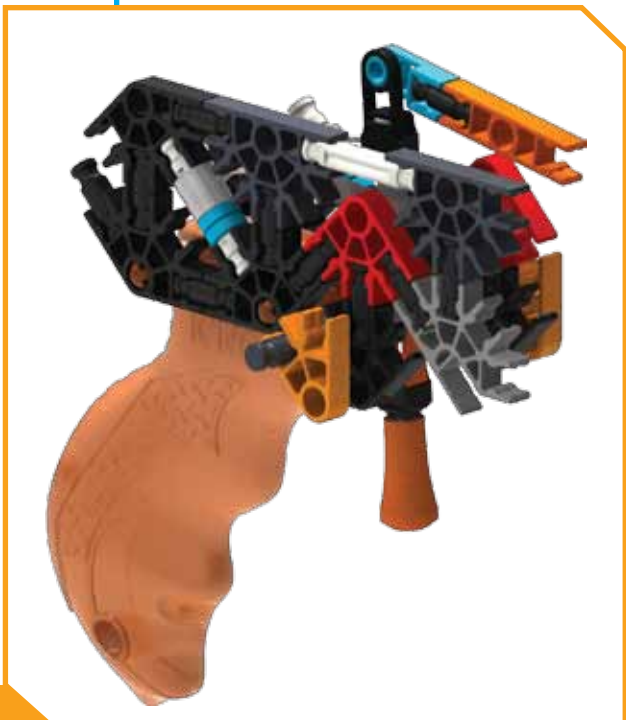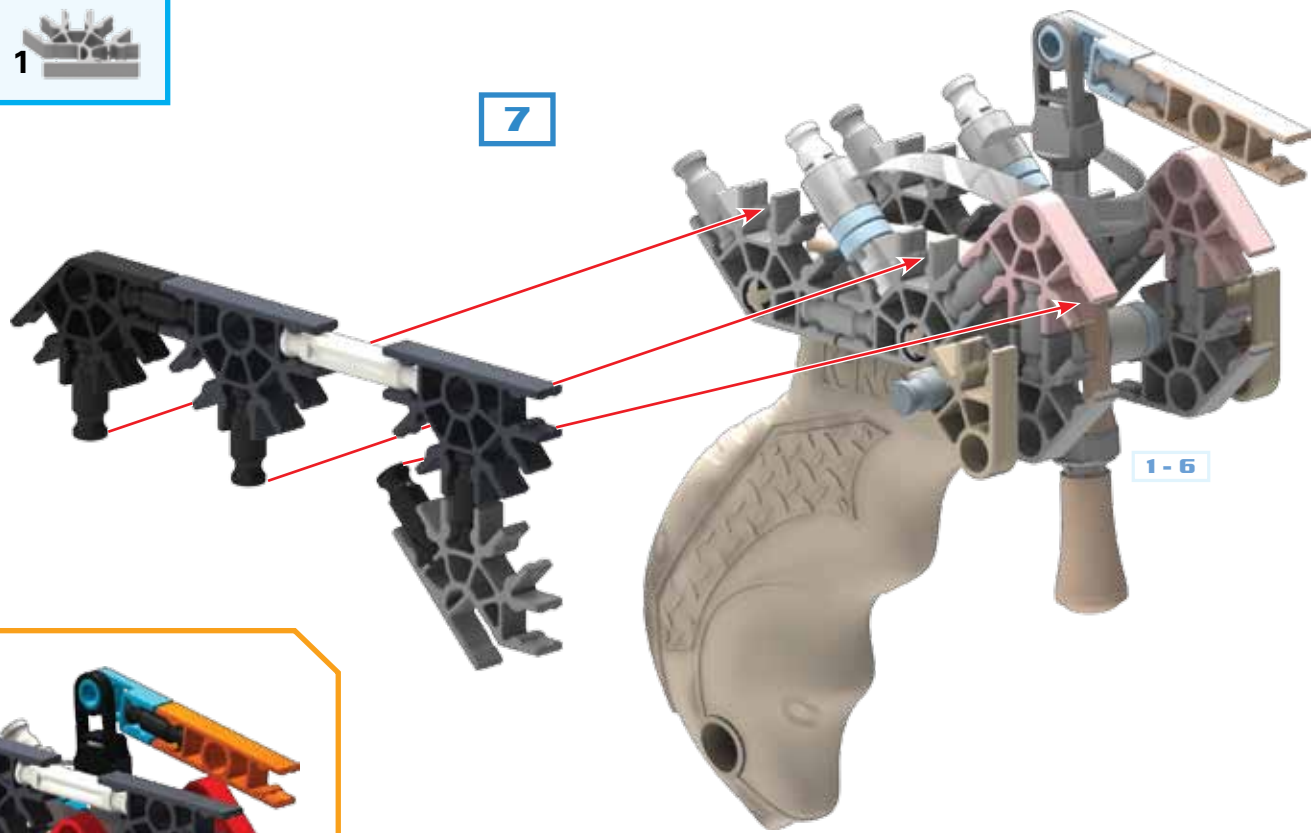

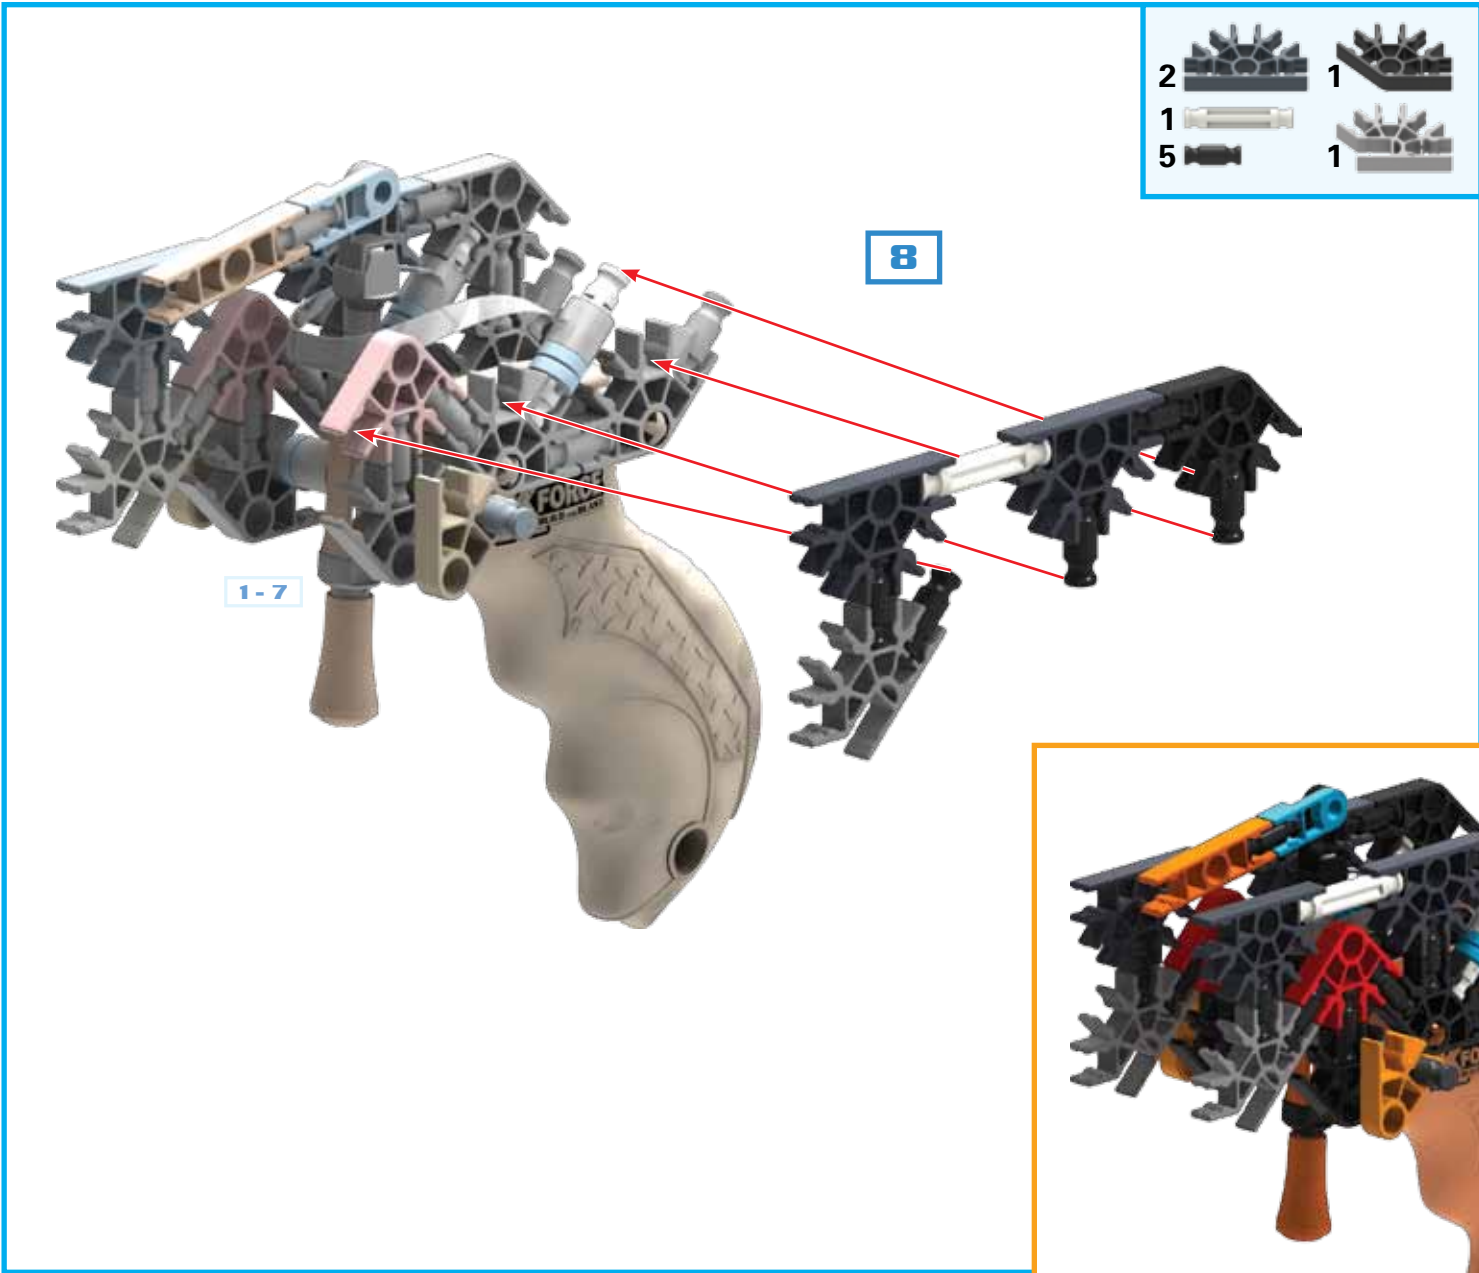


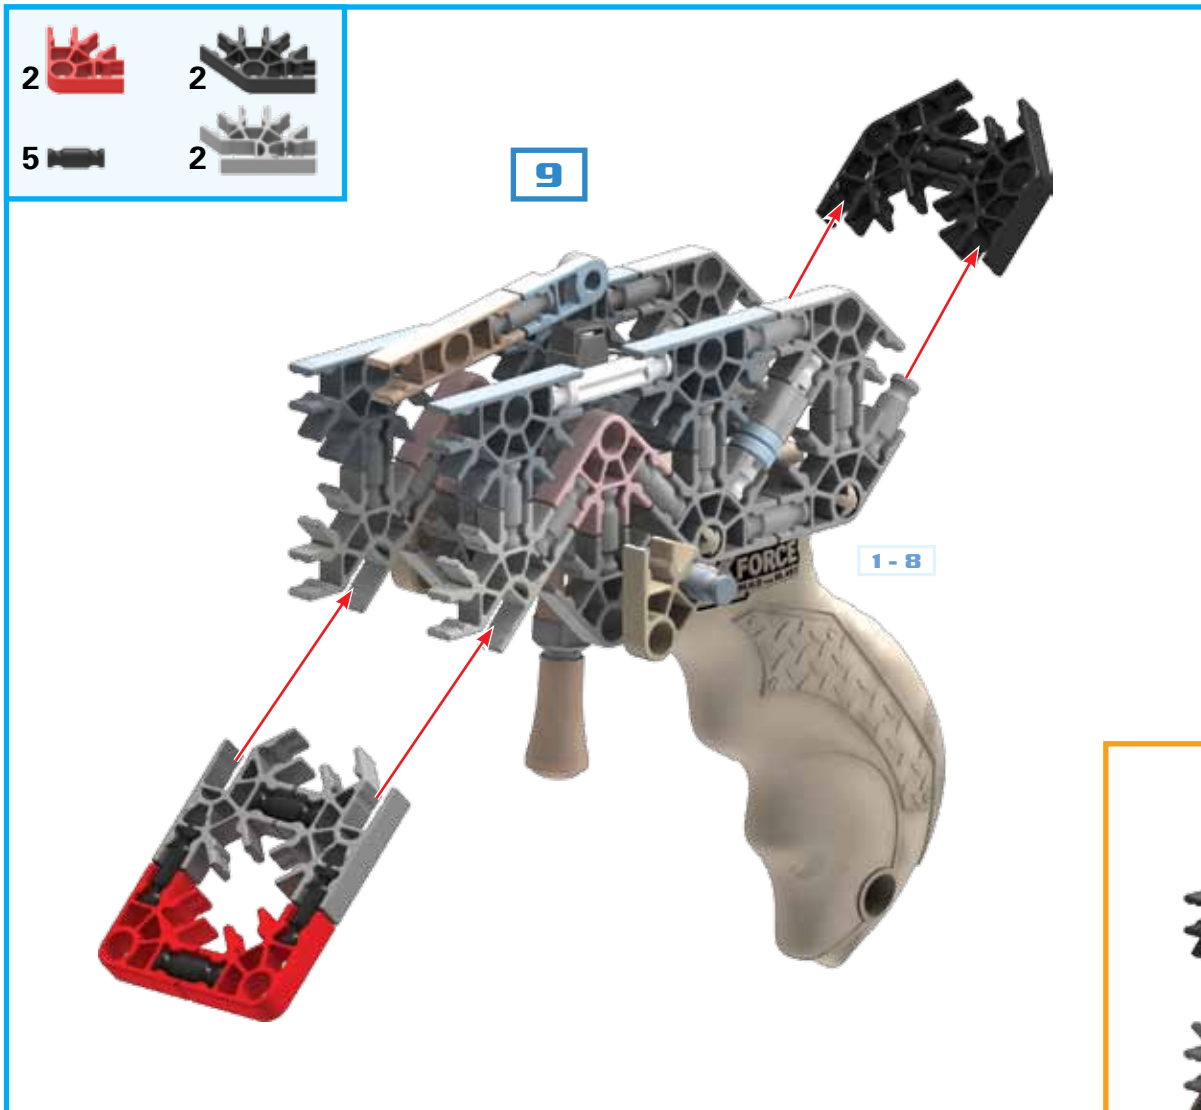




- 1
- 2
- 3
- 5
- 3
- 3
- 1

10

1-9

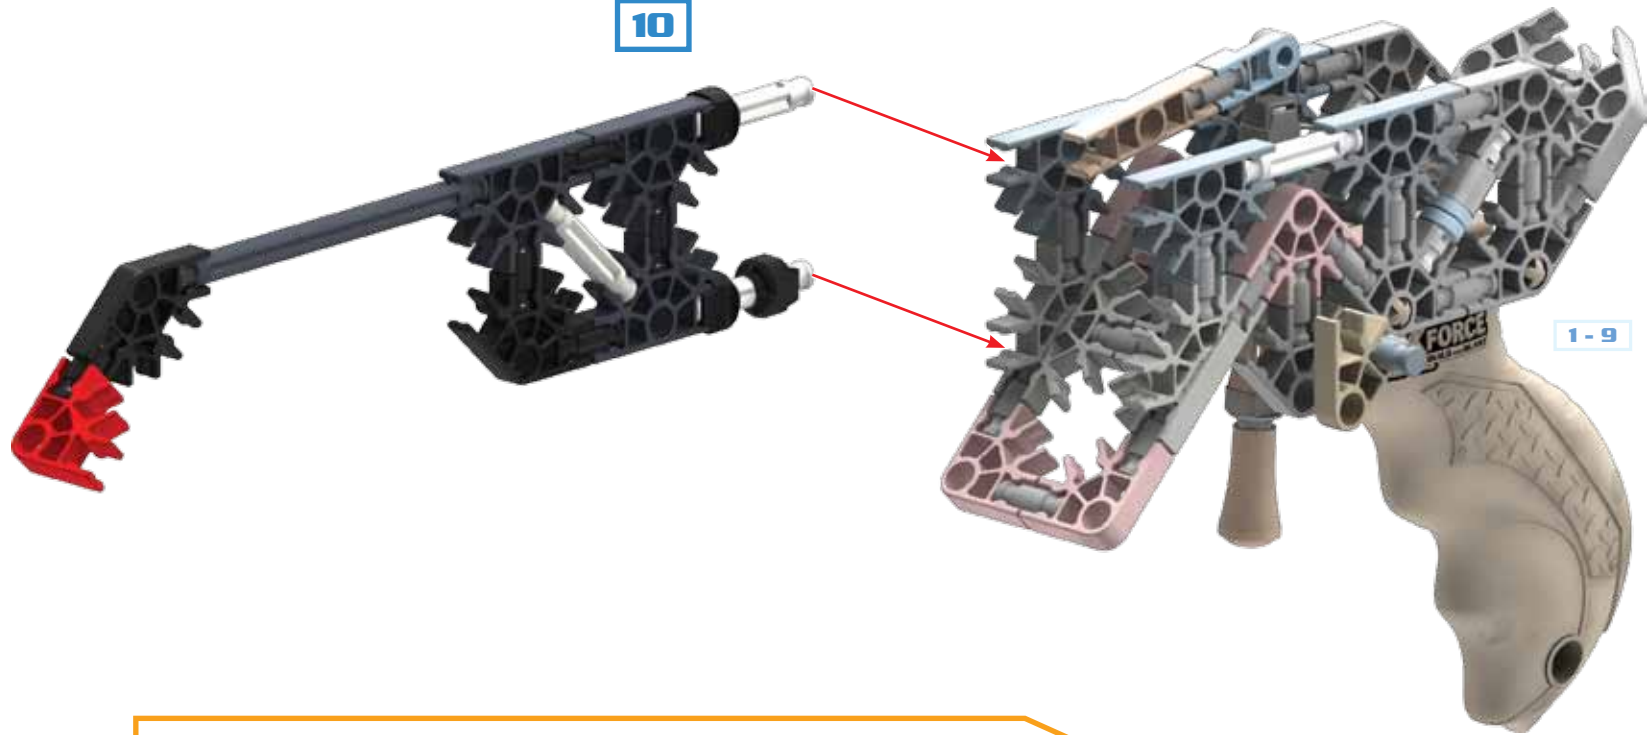

1 - 10

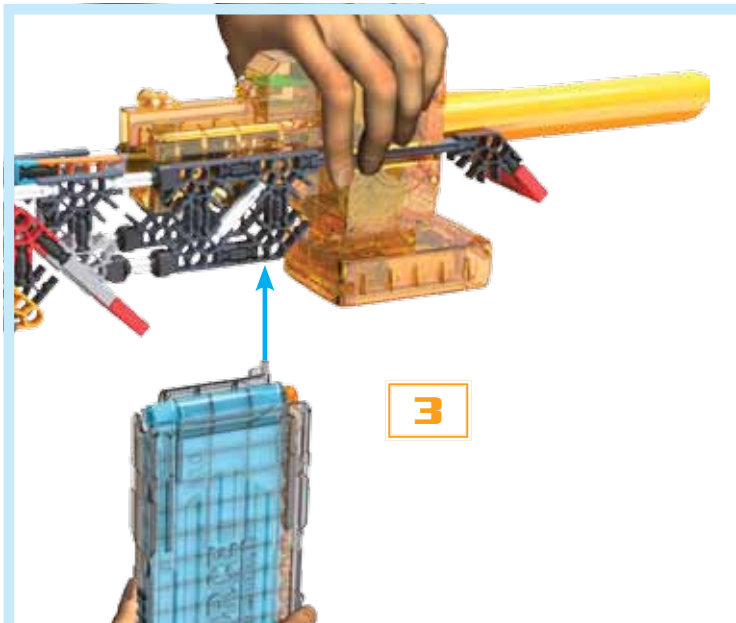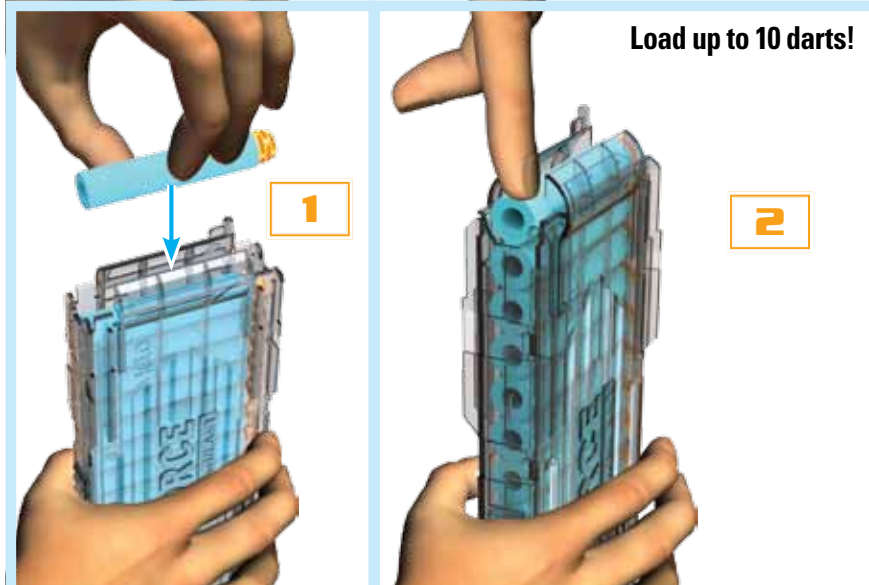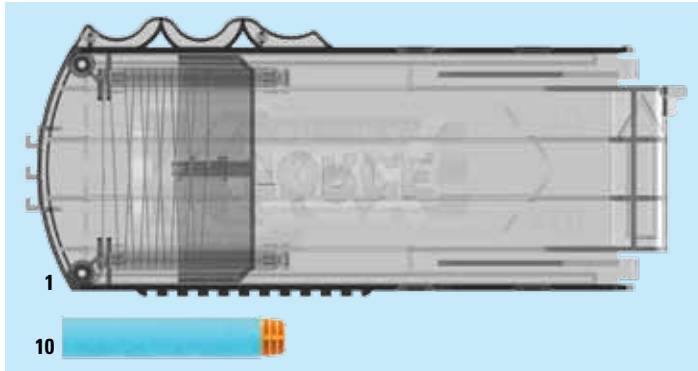

**Once the clip is loaded and
"clicks" in place,
DO NOT PULL TRIGGER
UNTIL TURNED ON!**

Tips and Troubleshooting

If the motor is not working properly:

- Check to see if you have fresh batteries and that they are installed correctly.
- Make sure the clip "clicks" into place or the motor won't turn on.


- Check to see if dart is stuck in blaster.




- If it is still not working, call our Consumer Hotline at 1-800-KID-KNEX (USA and Canada only). See the back cover of the instructions book for other ways to contact K'NEX.





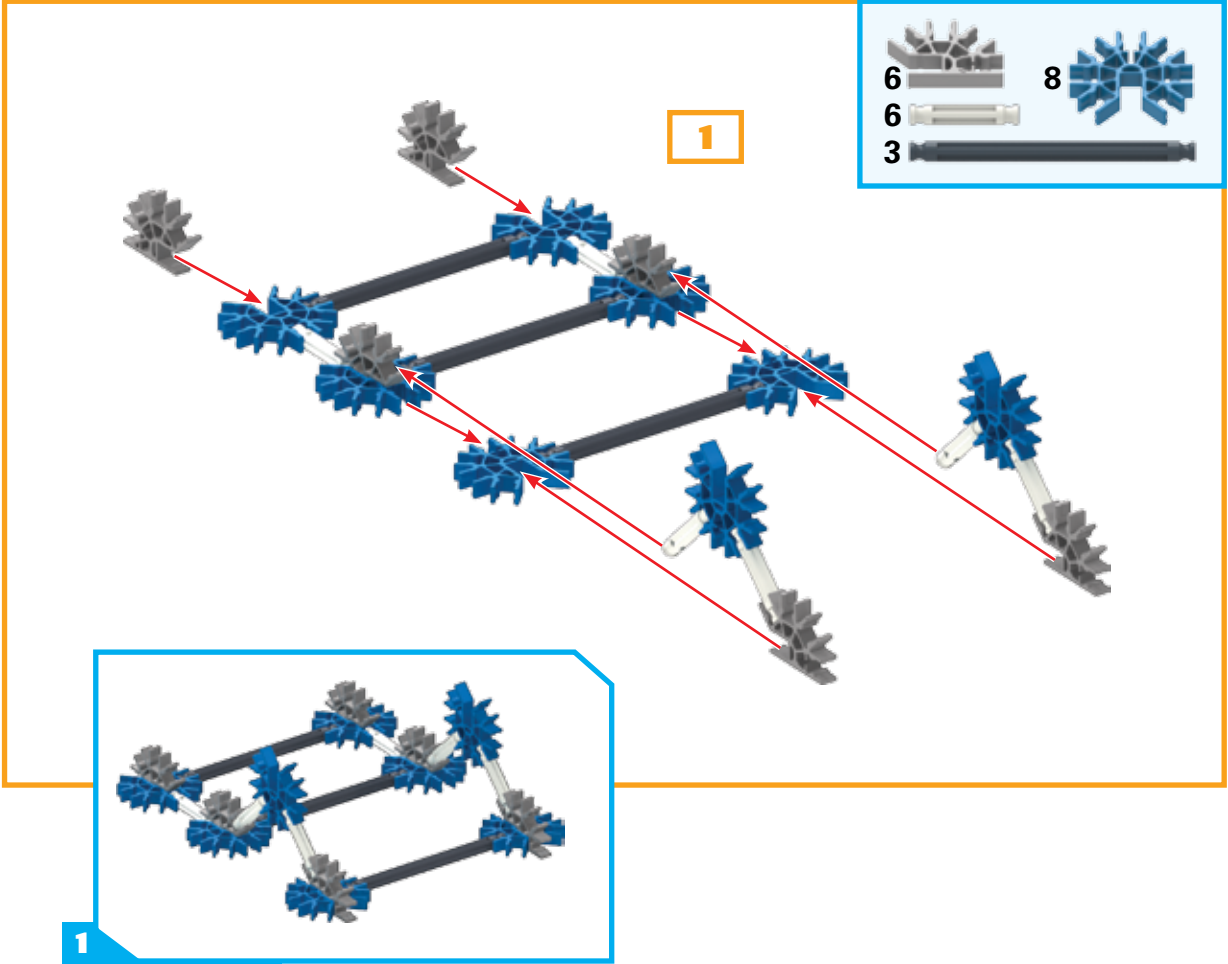

If a dart is stuck in the blaster:

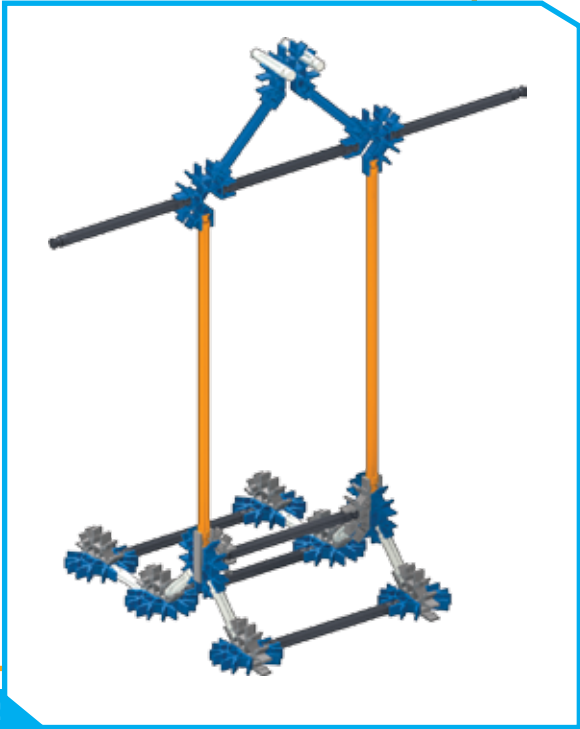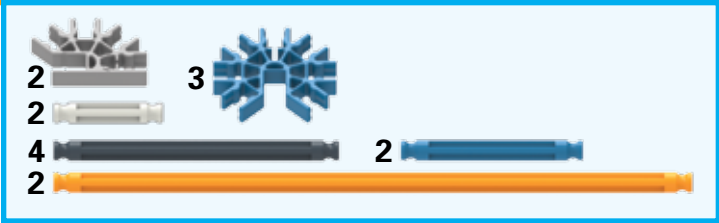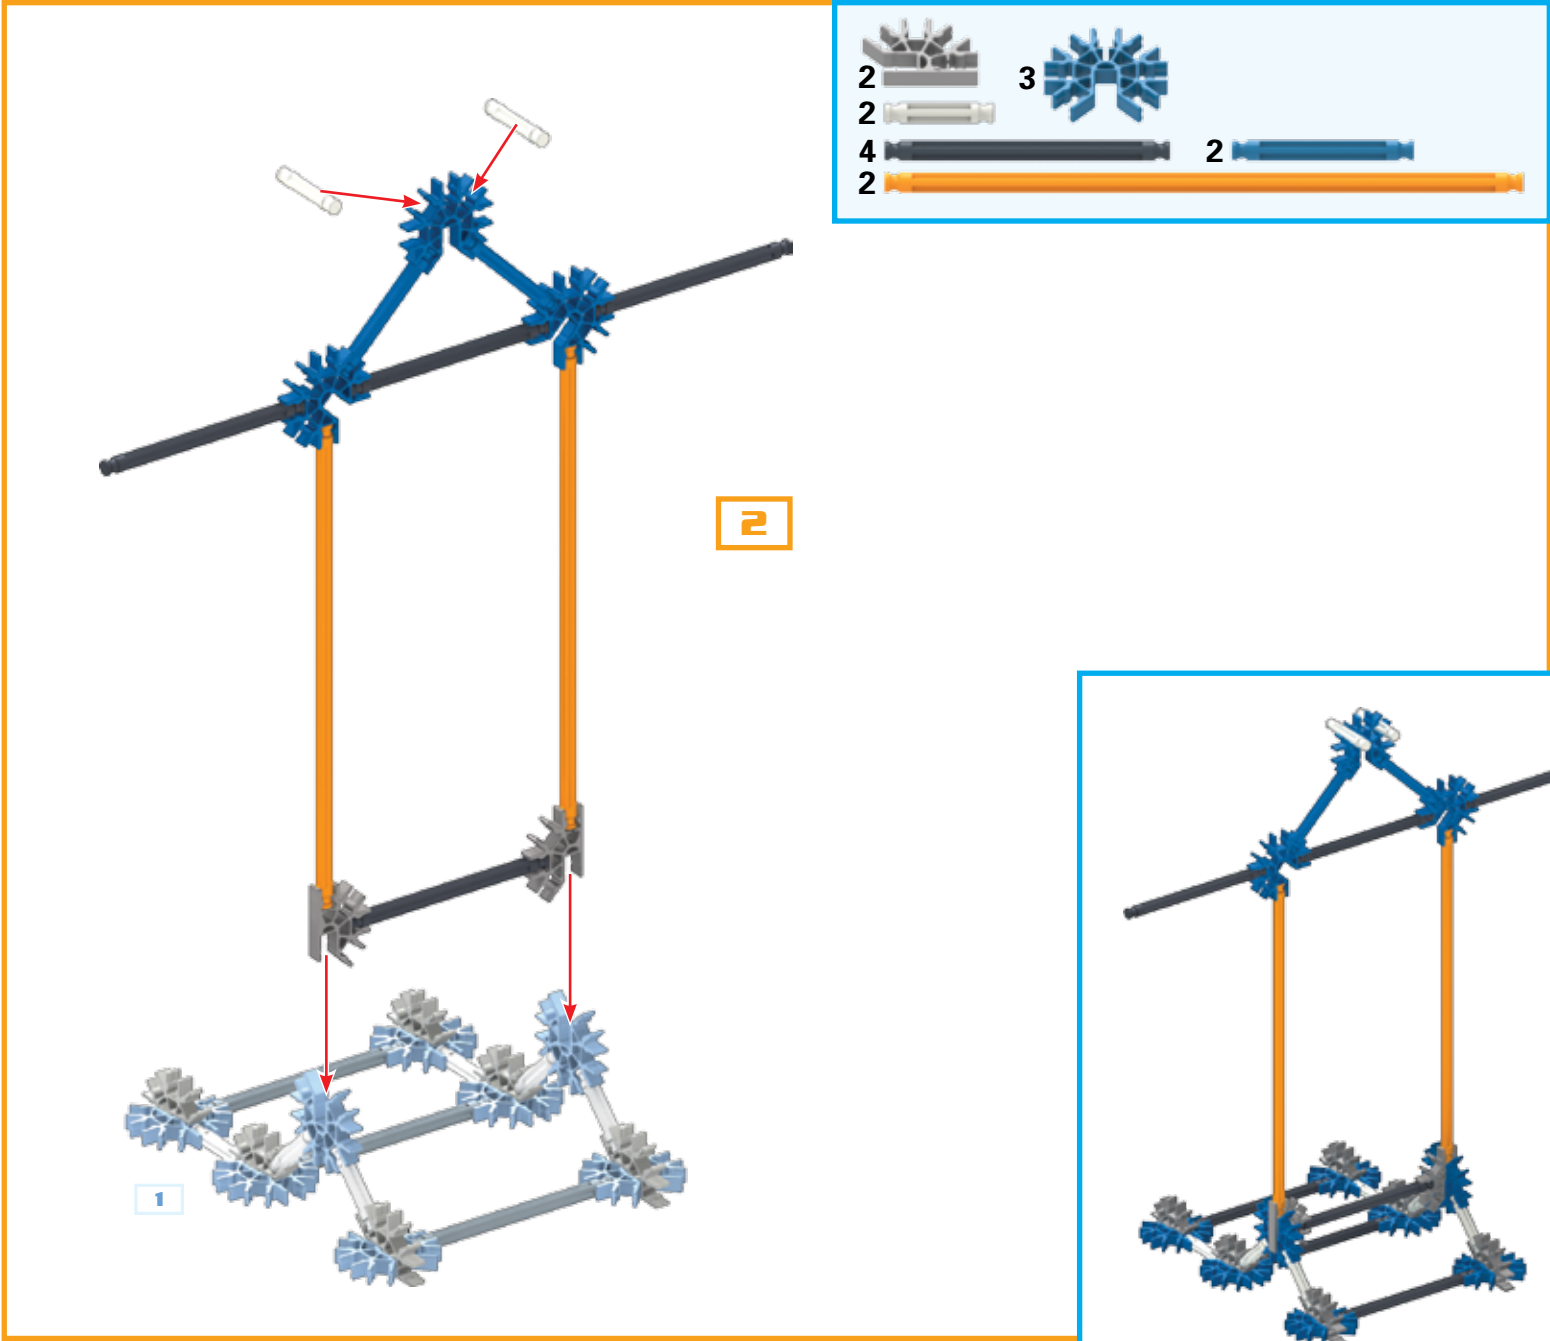
- Make sure the motor is turned off. Remove the clip and turn the model over. Carefully remove the dart by hand.








2		2		12	
4					
2		2			

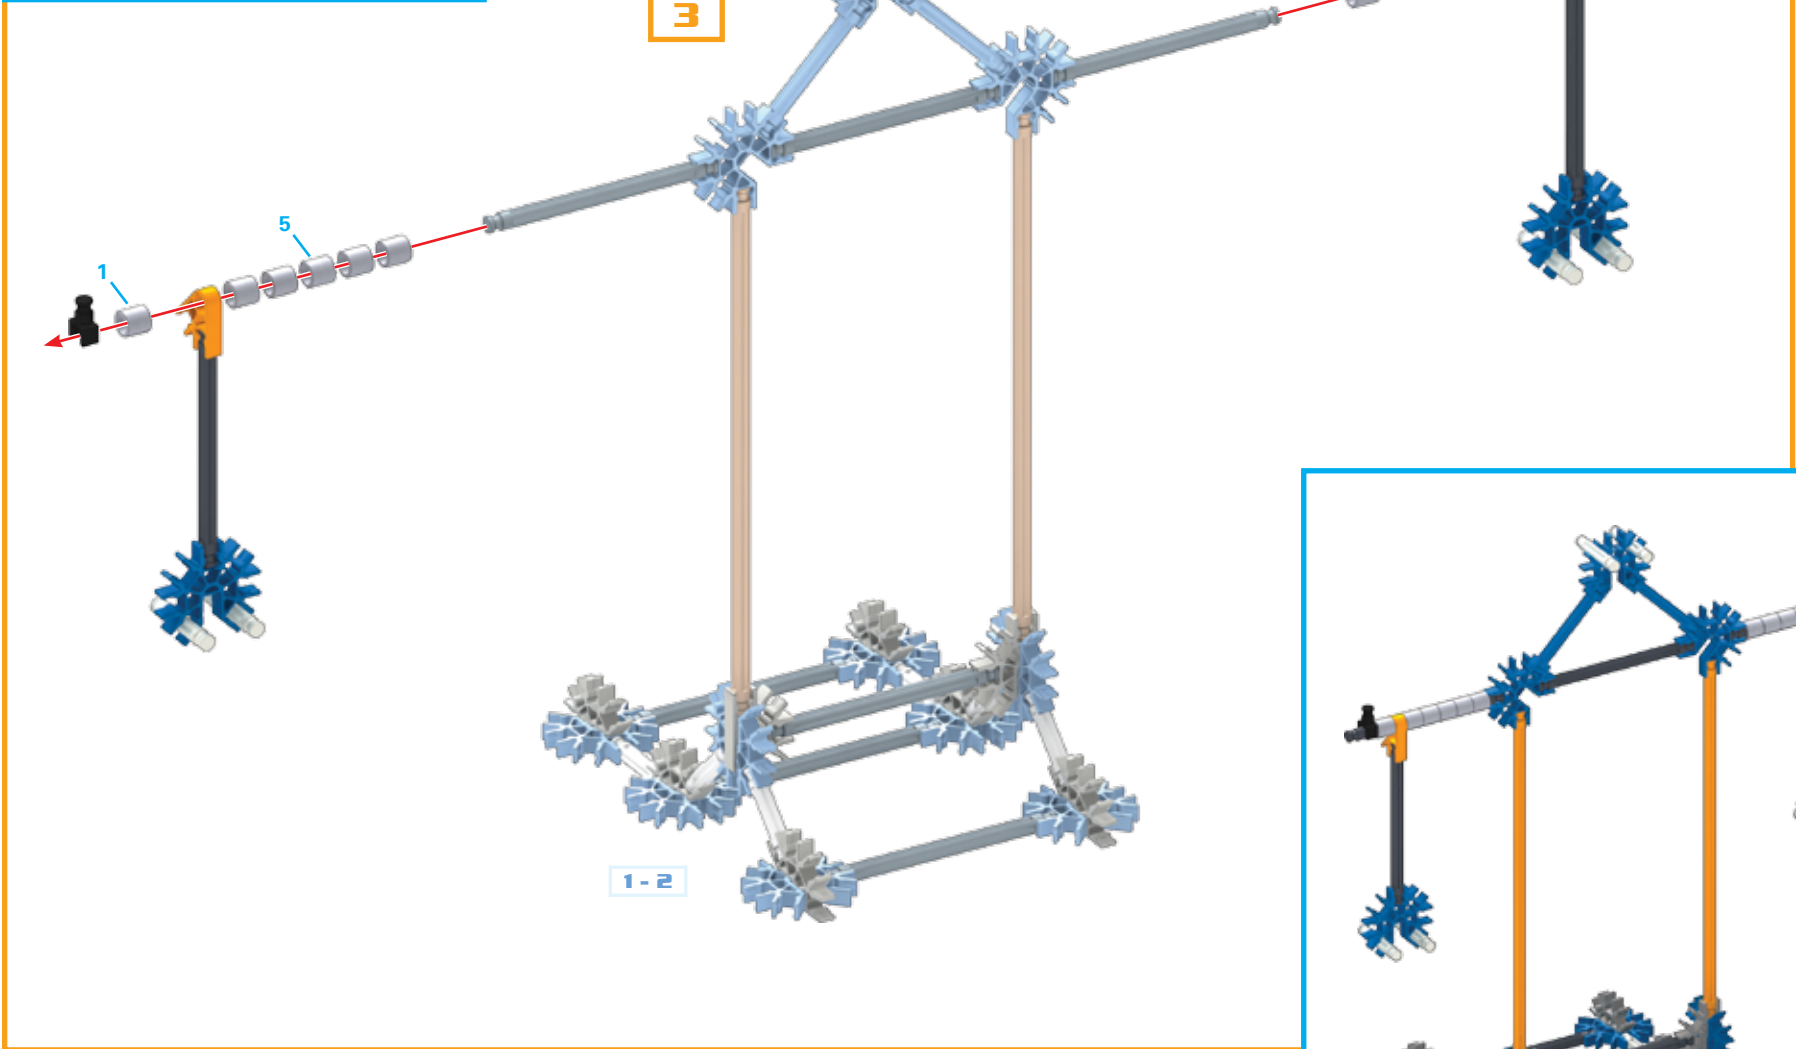


3

1-2

1-3

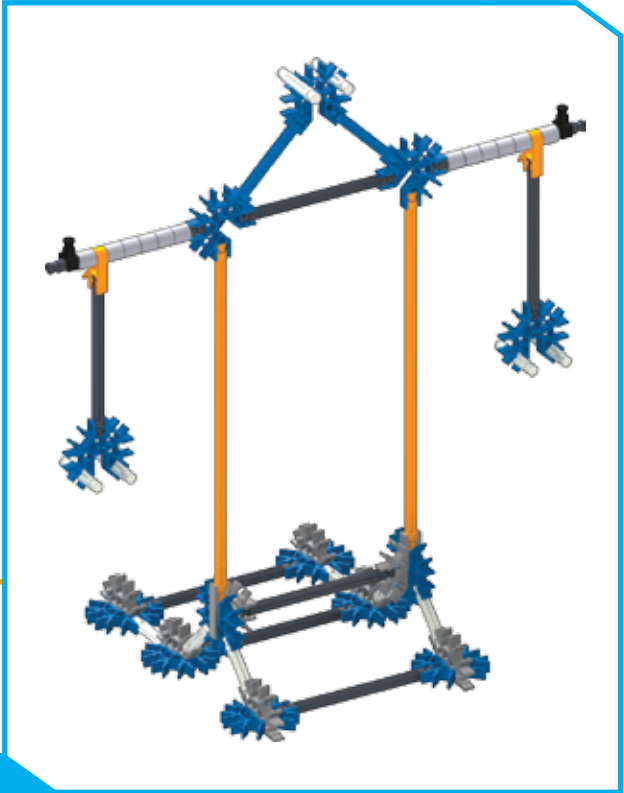

4

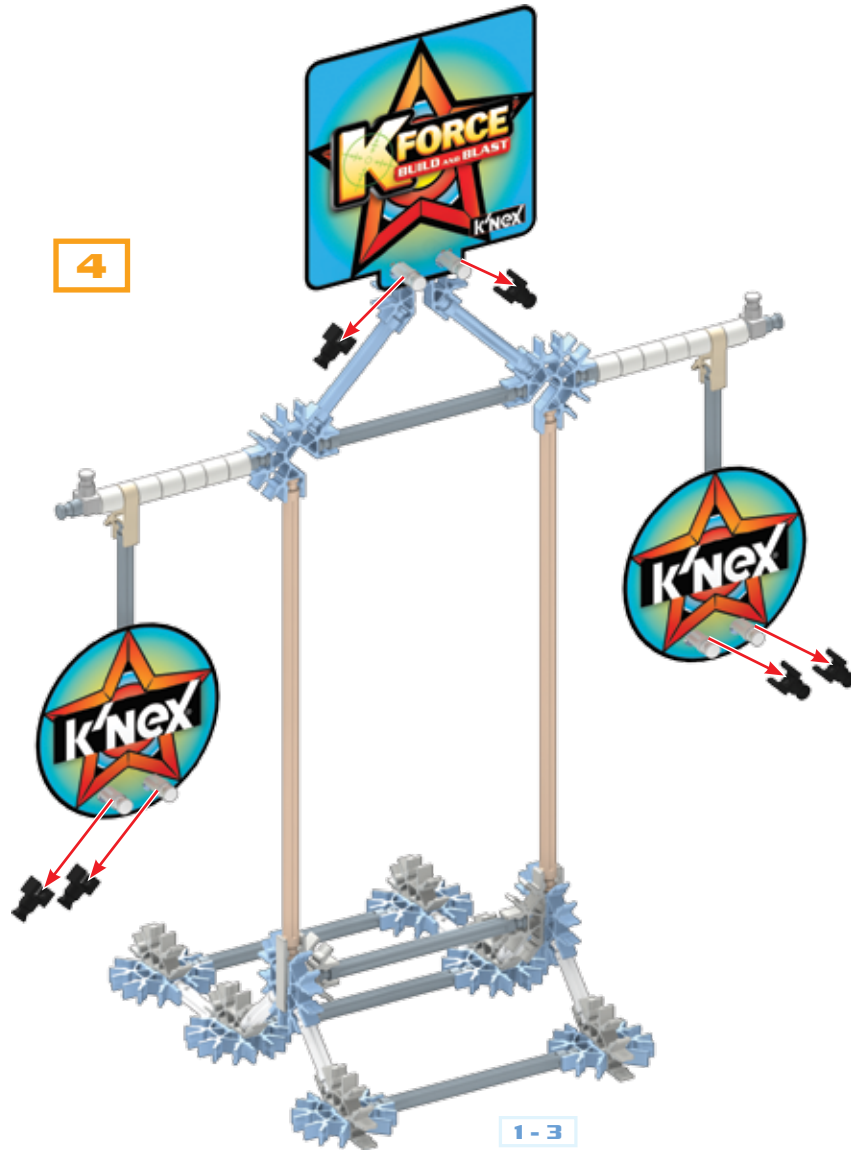

6



1-4