 
 


# SWINGING ROCKET RIDE

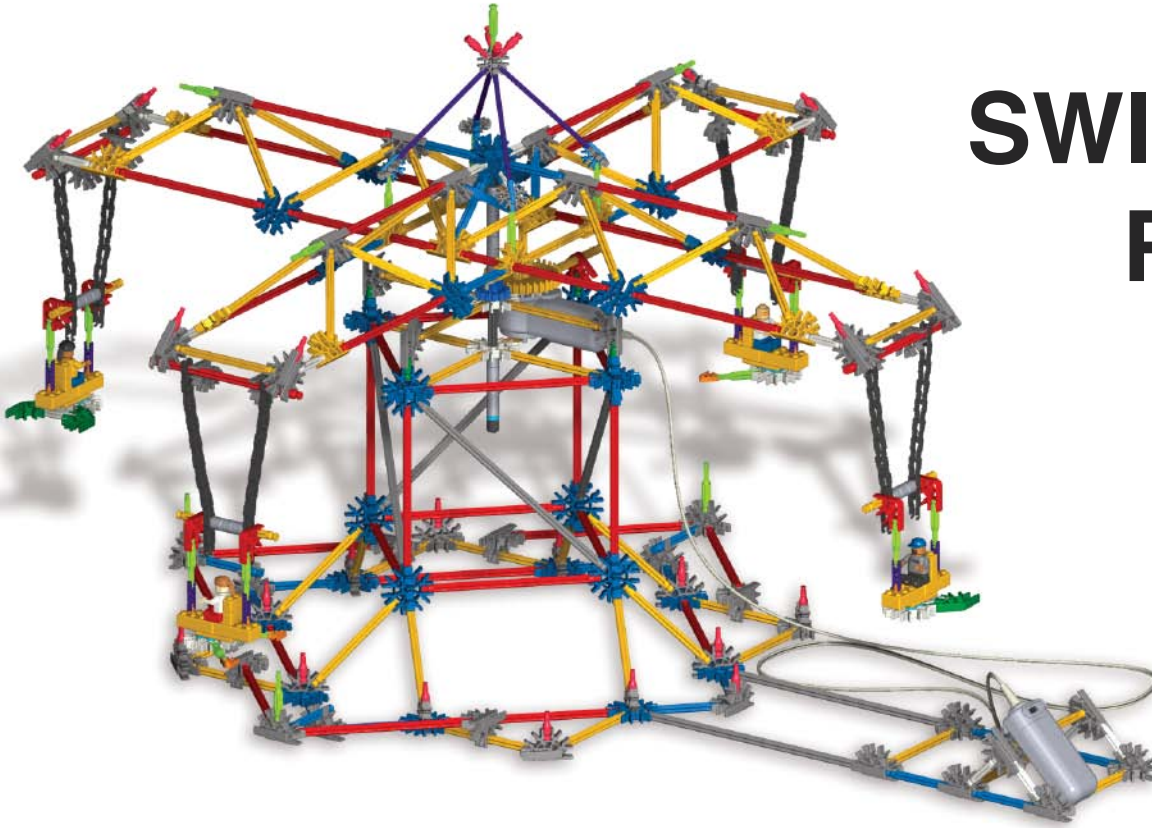

 
x4

 
 
1

 
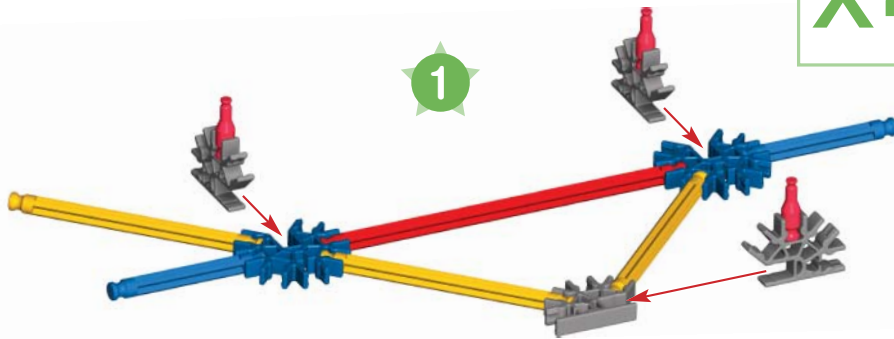 


 
x3

2

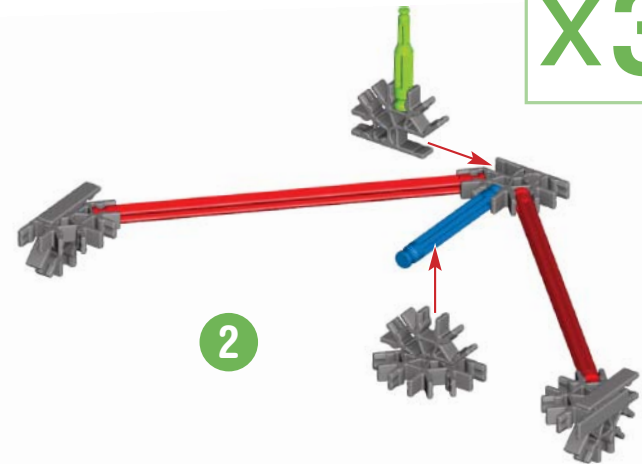


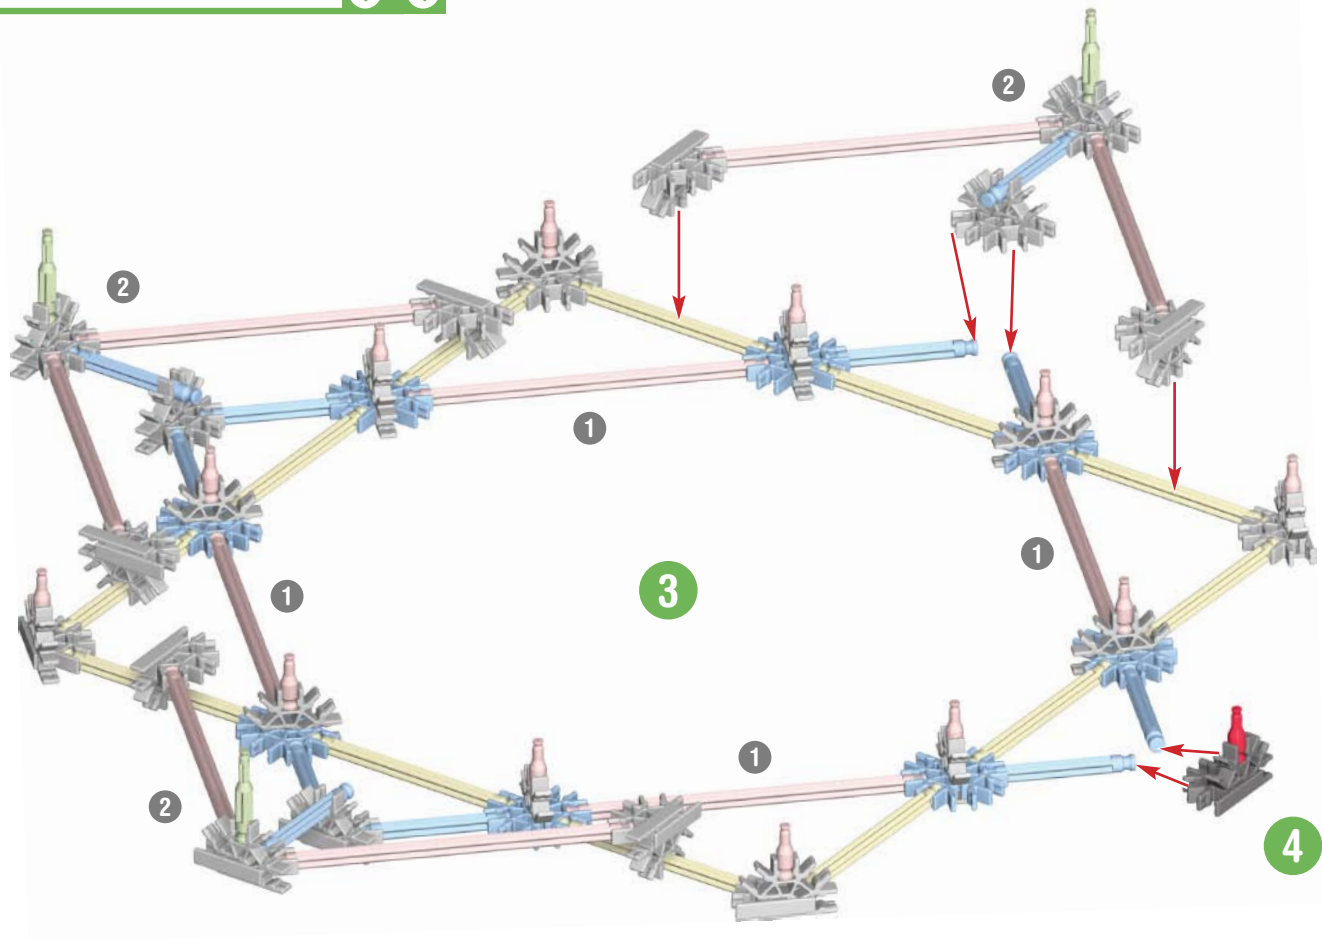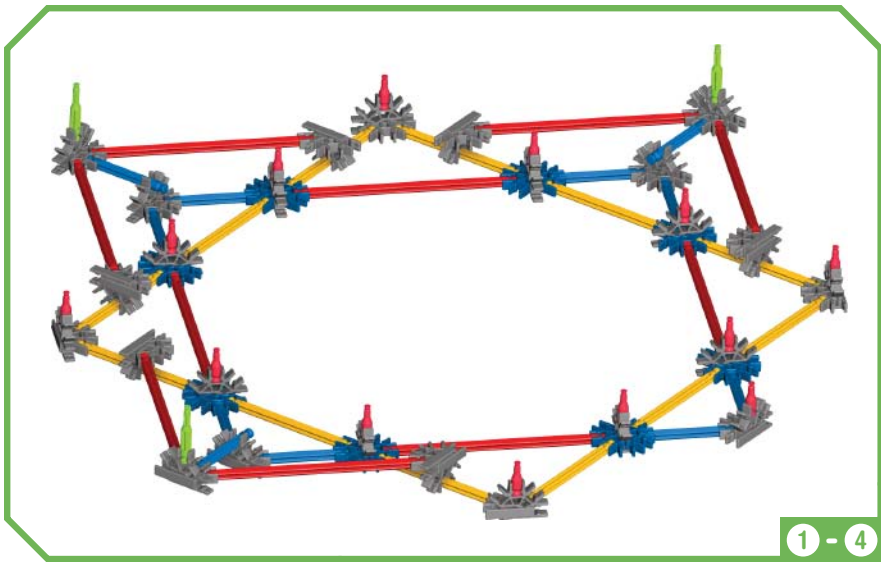

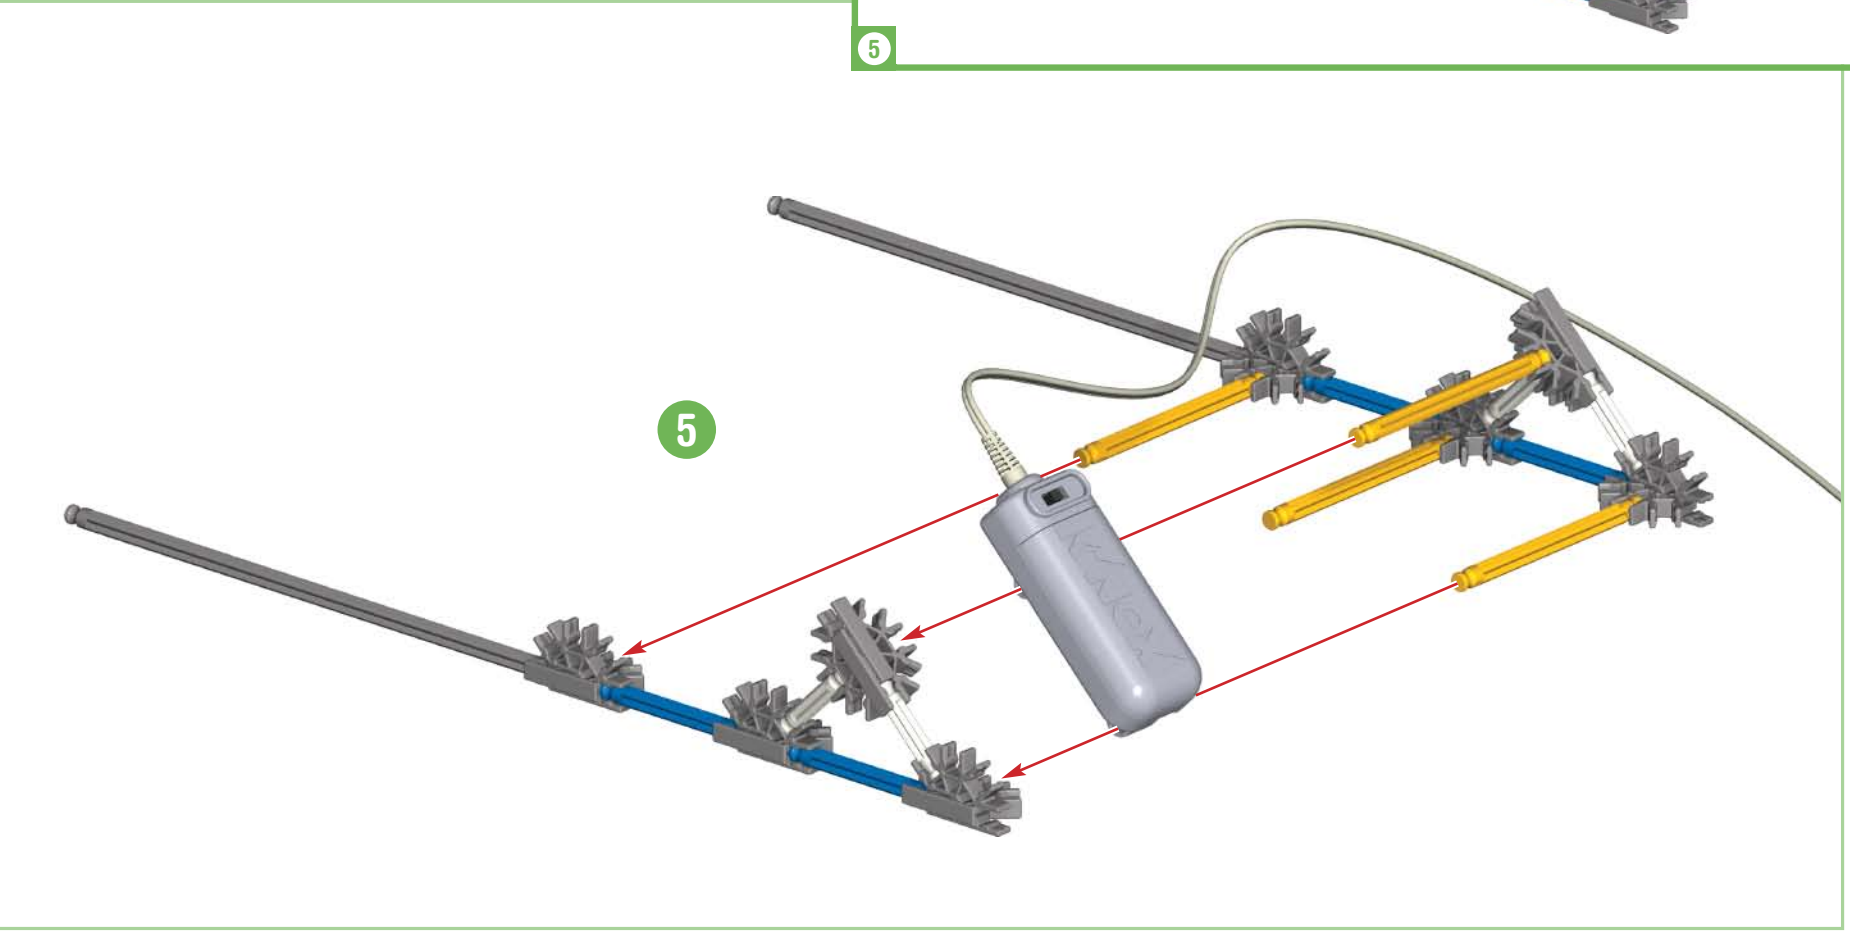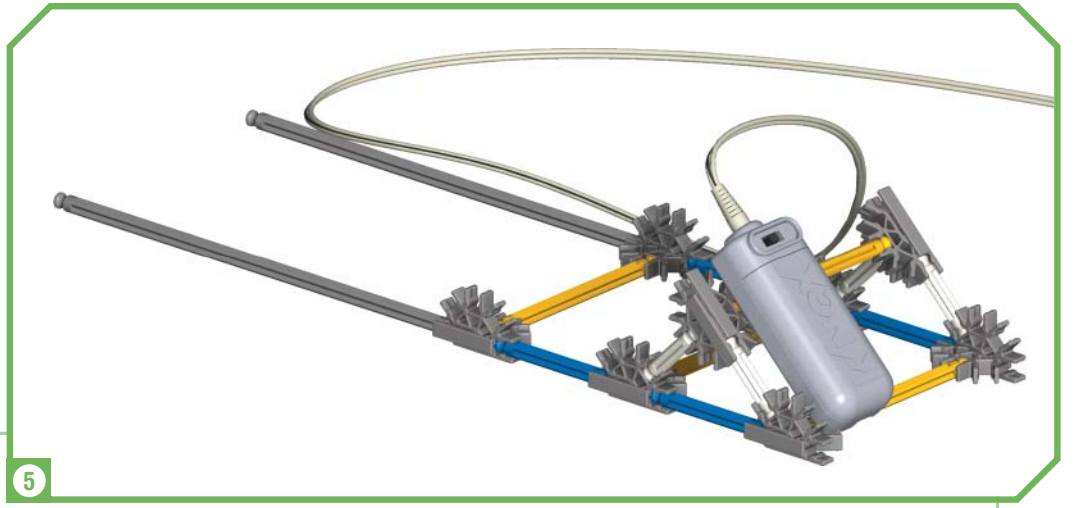

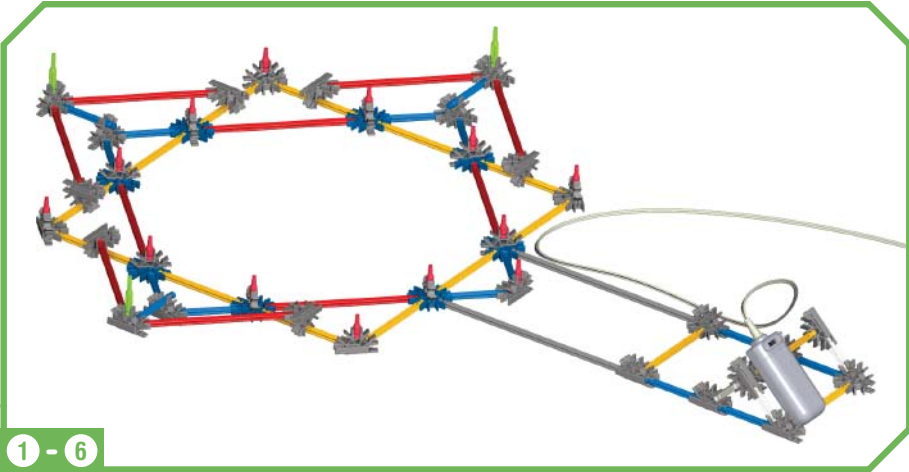



1 - 6

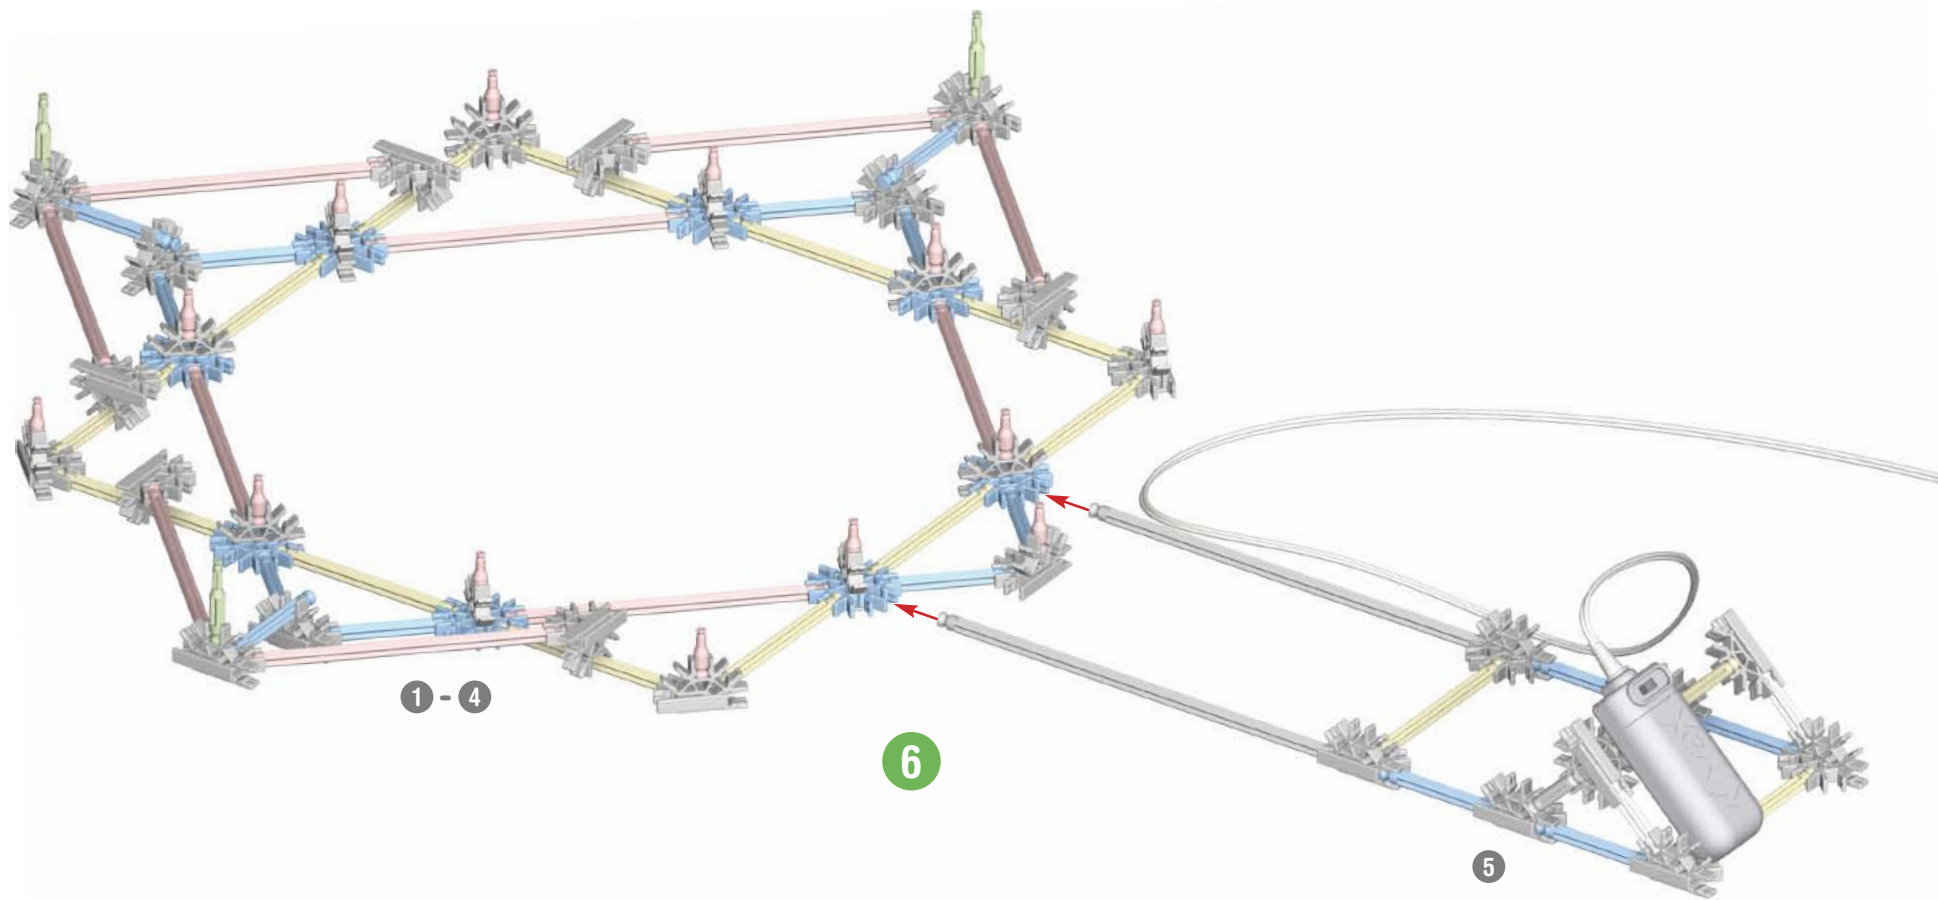 


1 - 4

6

   
5

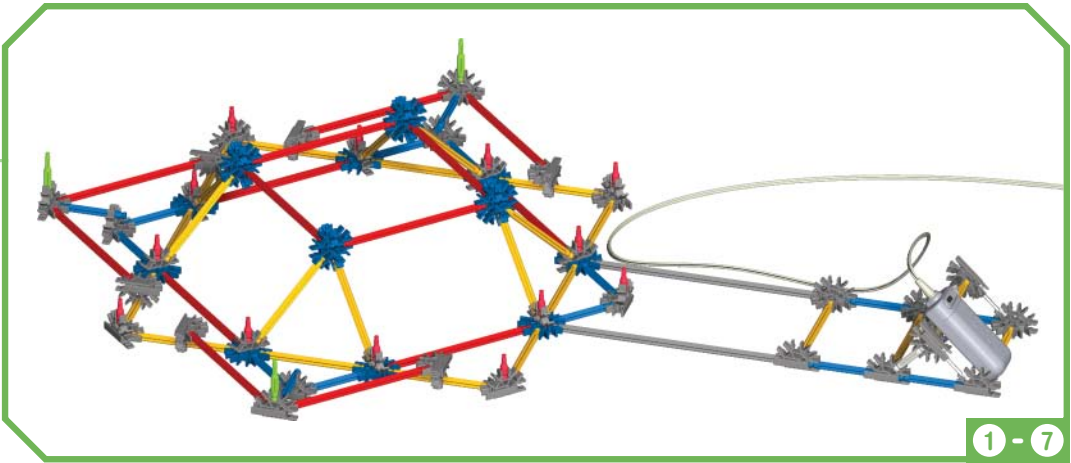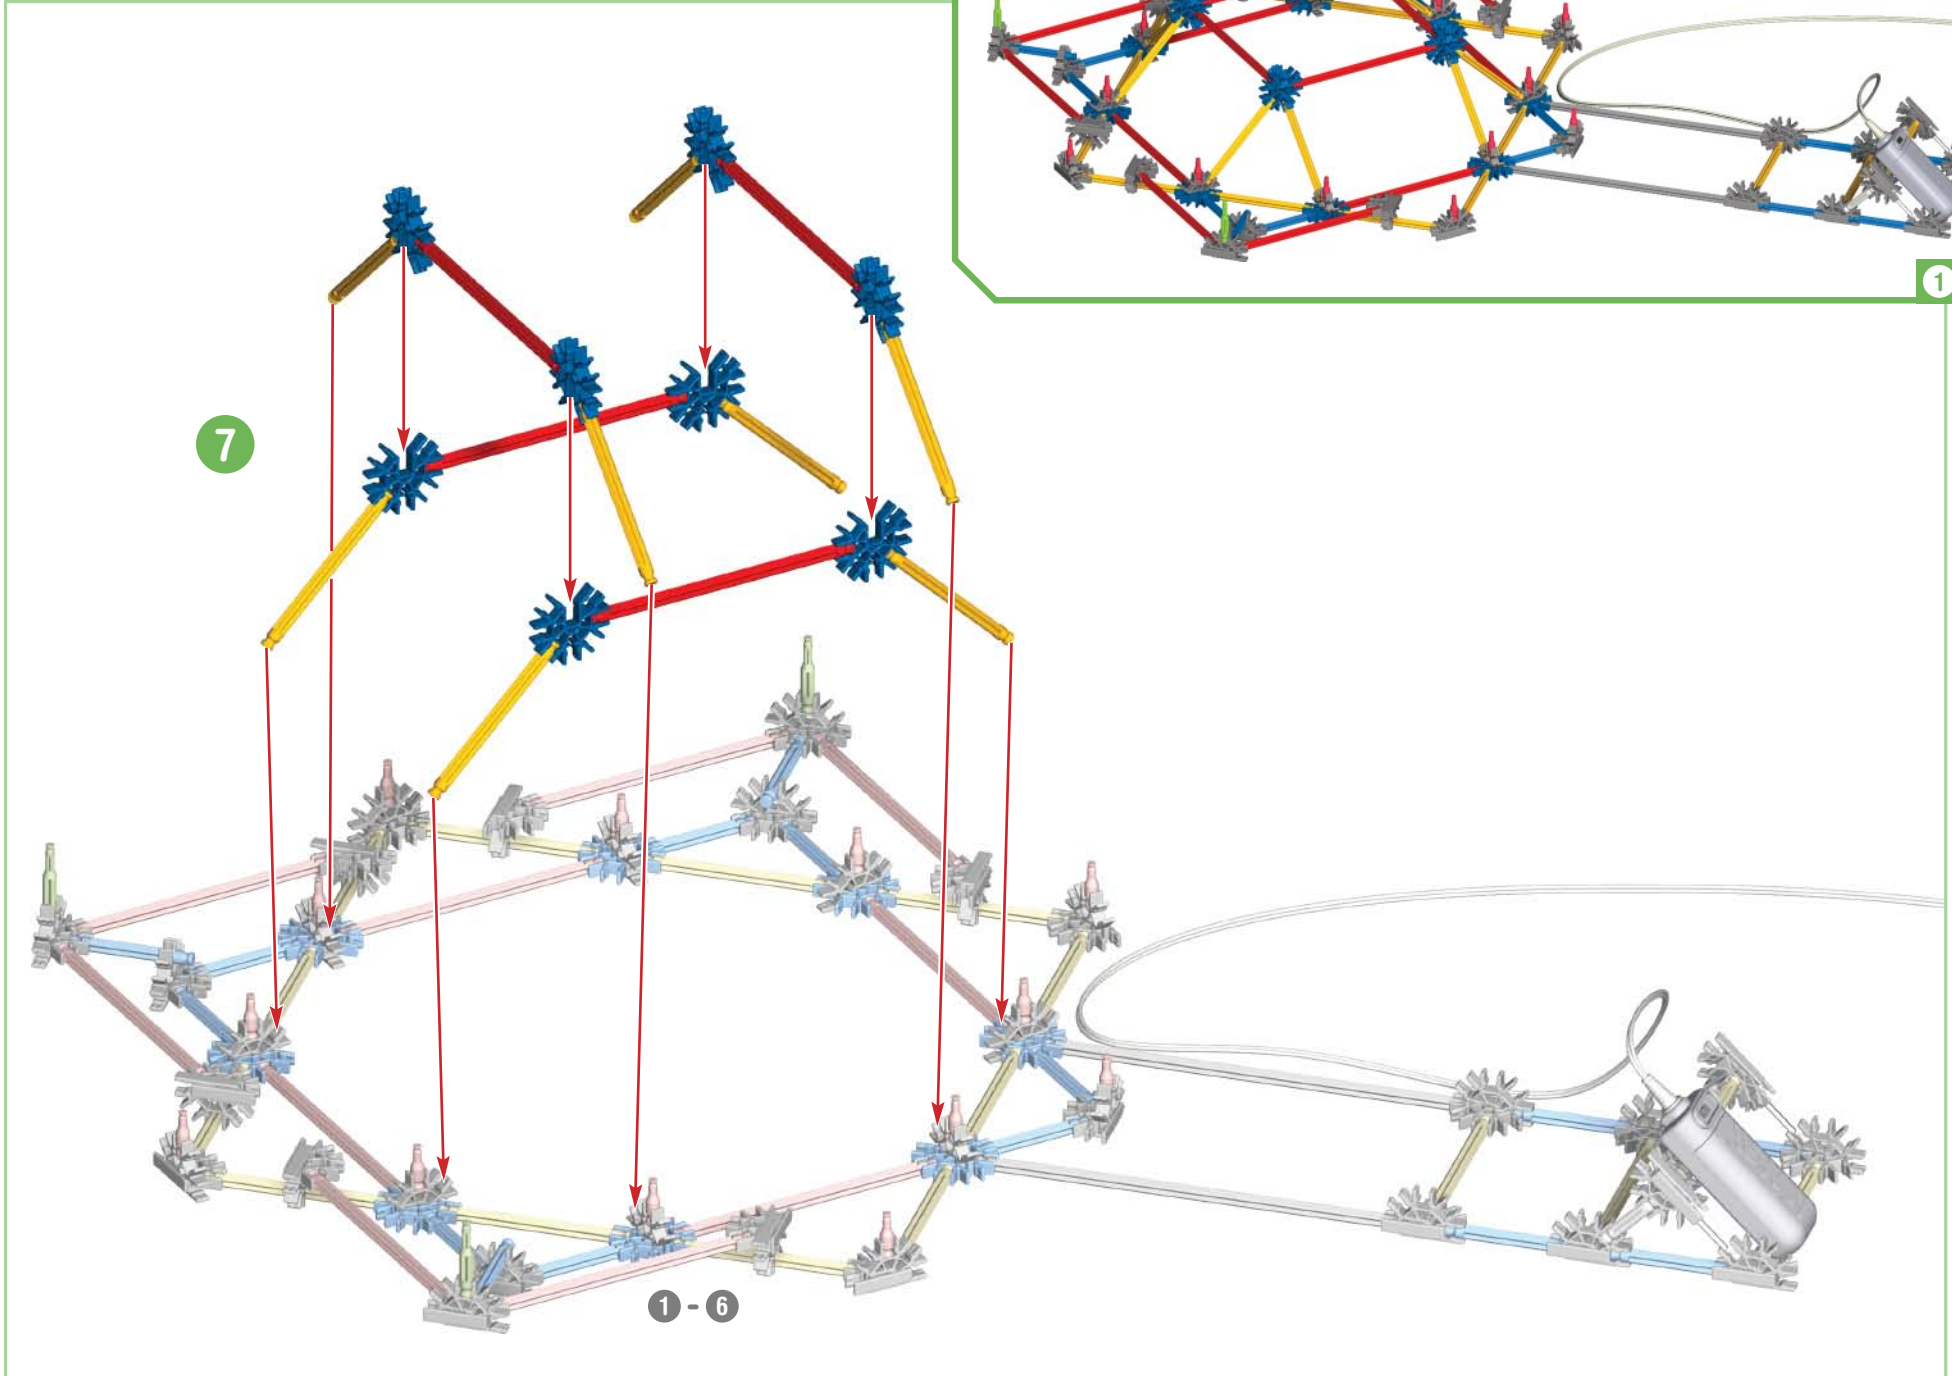


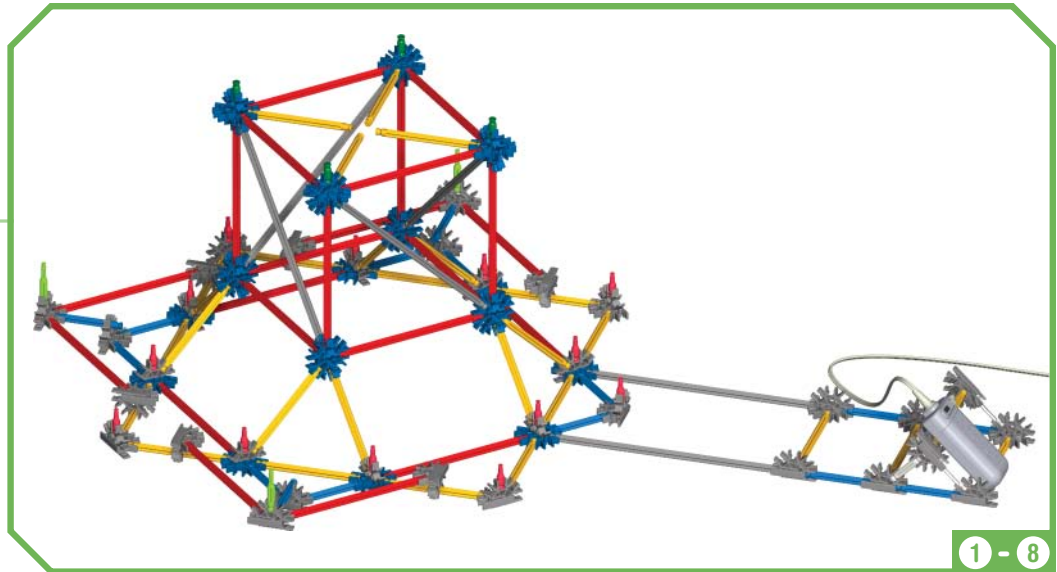



1 - 8

 
8

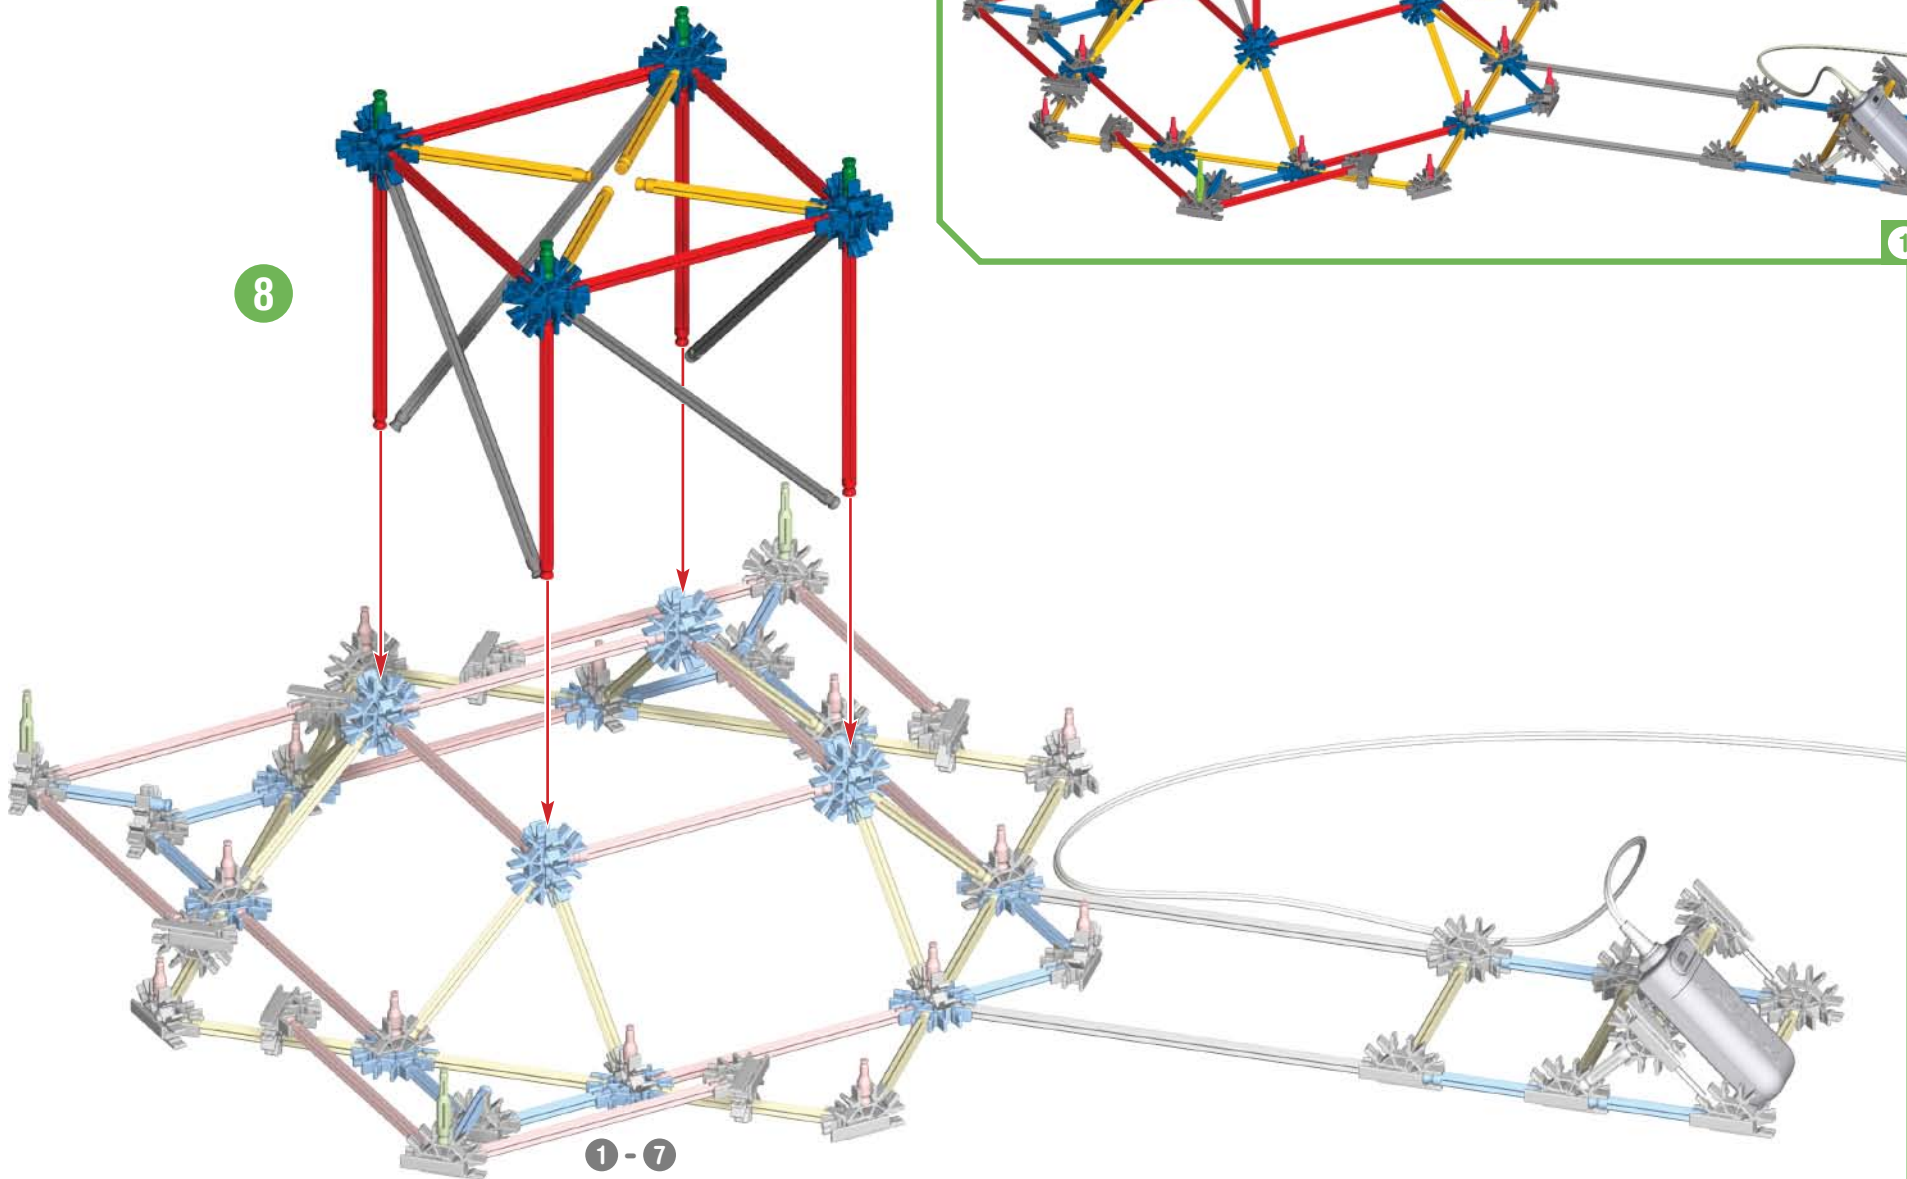


1 - 7

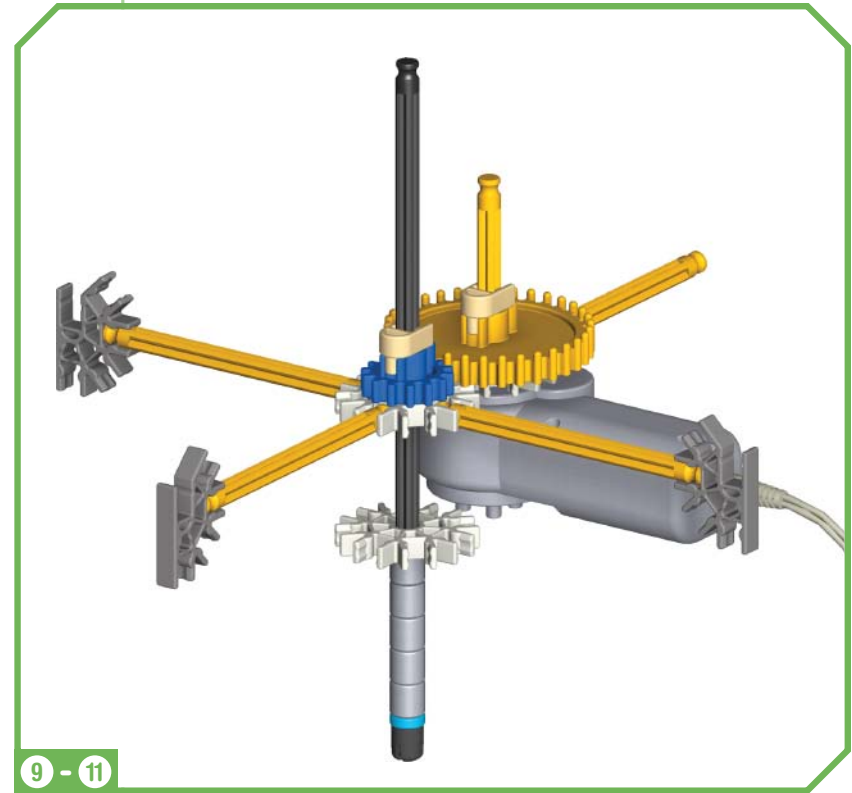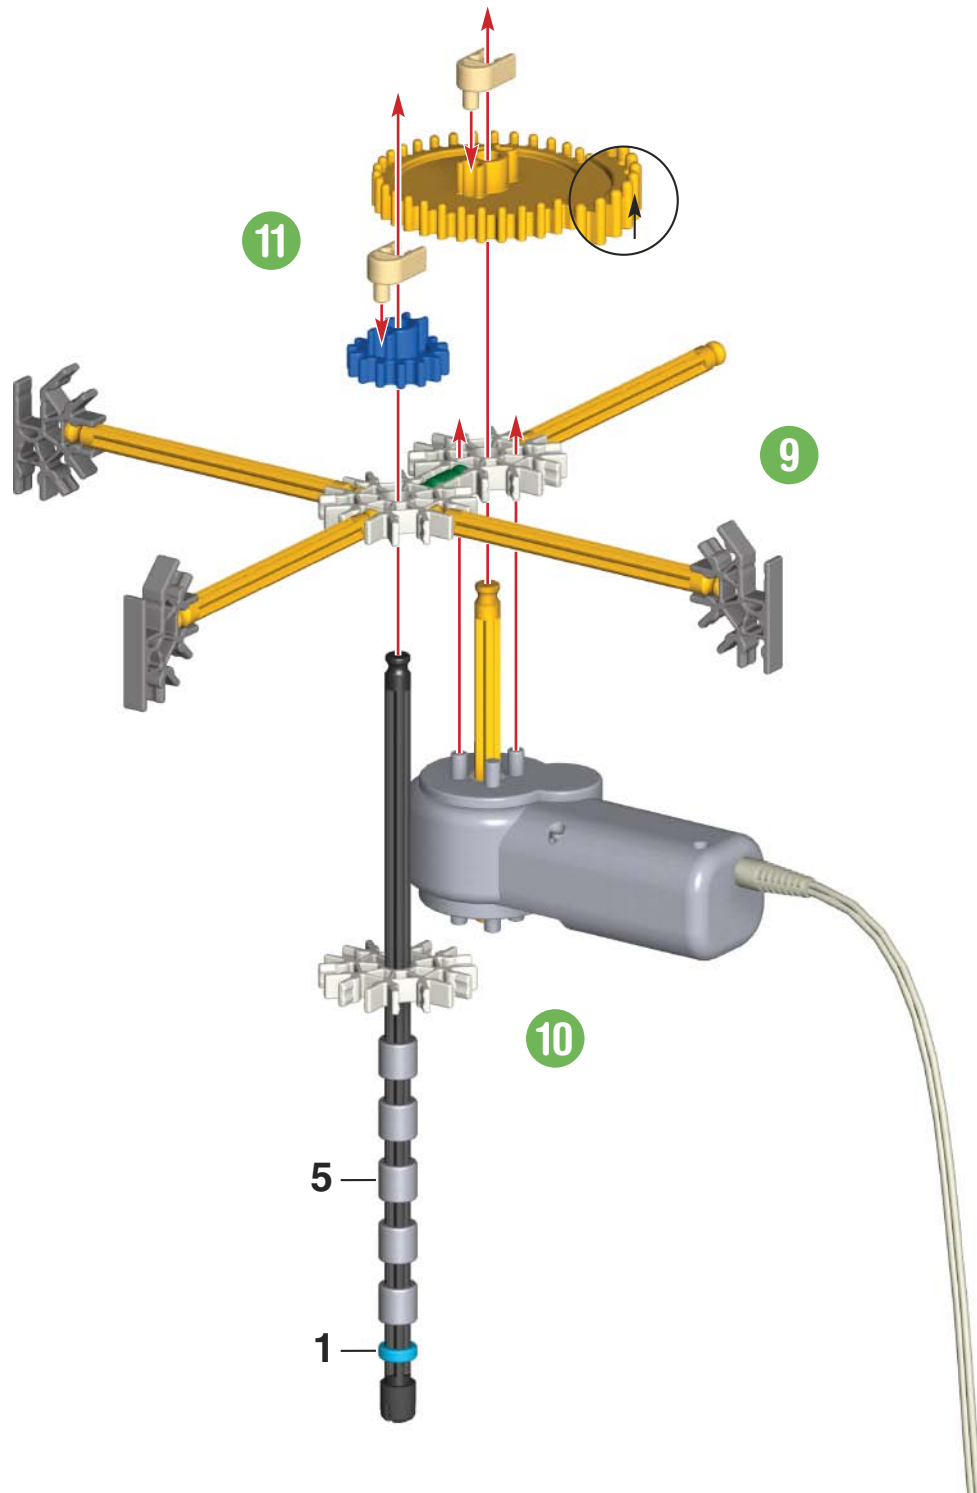  


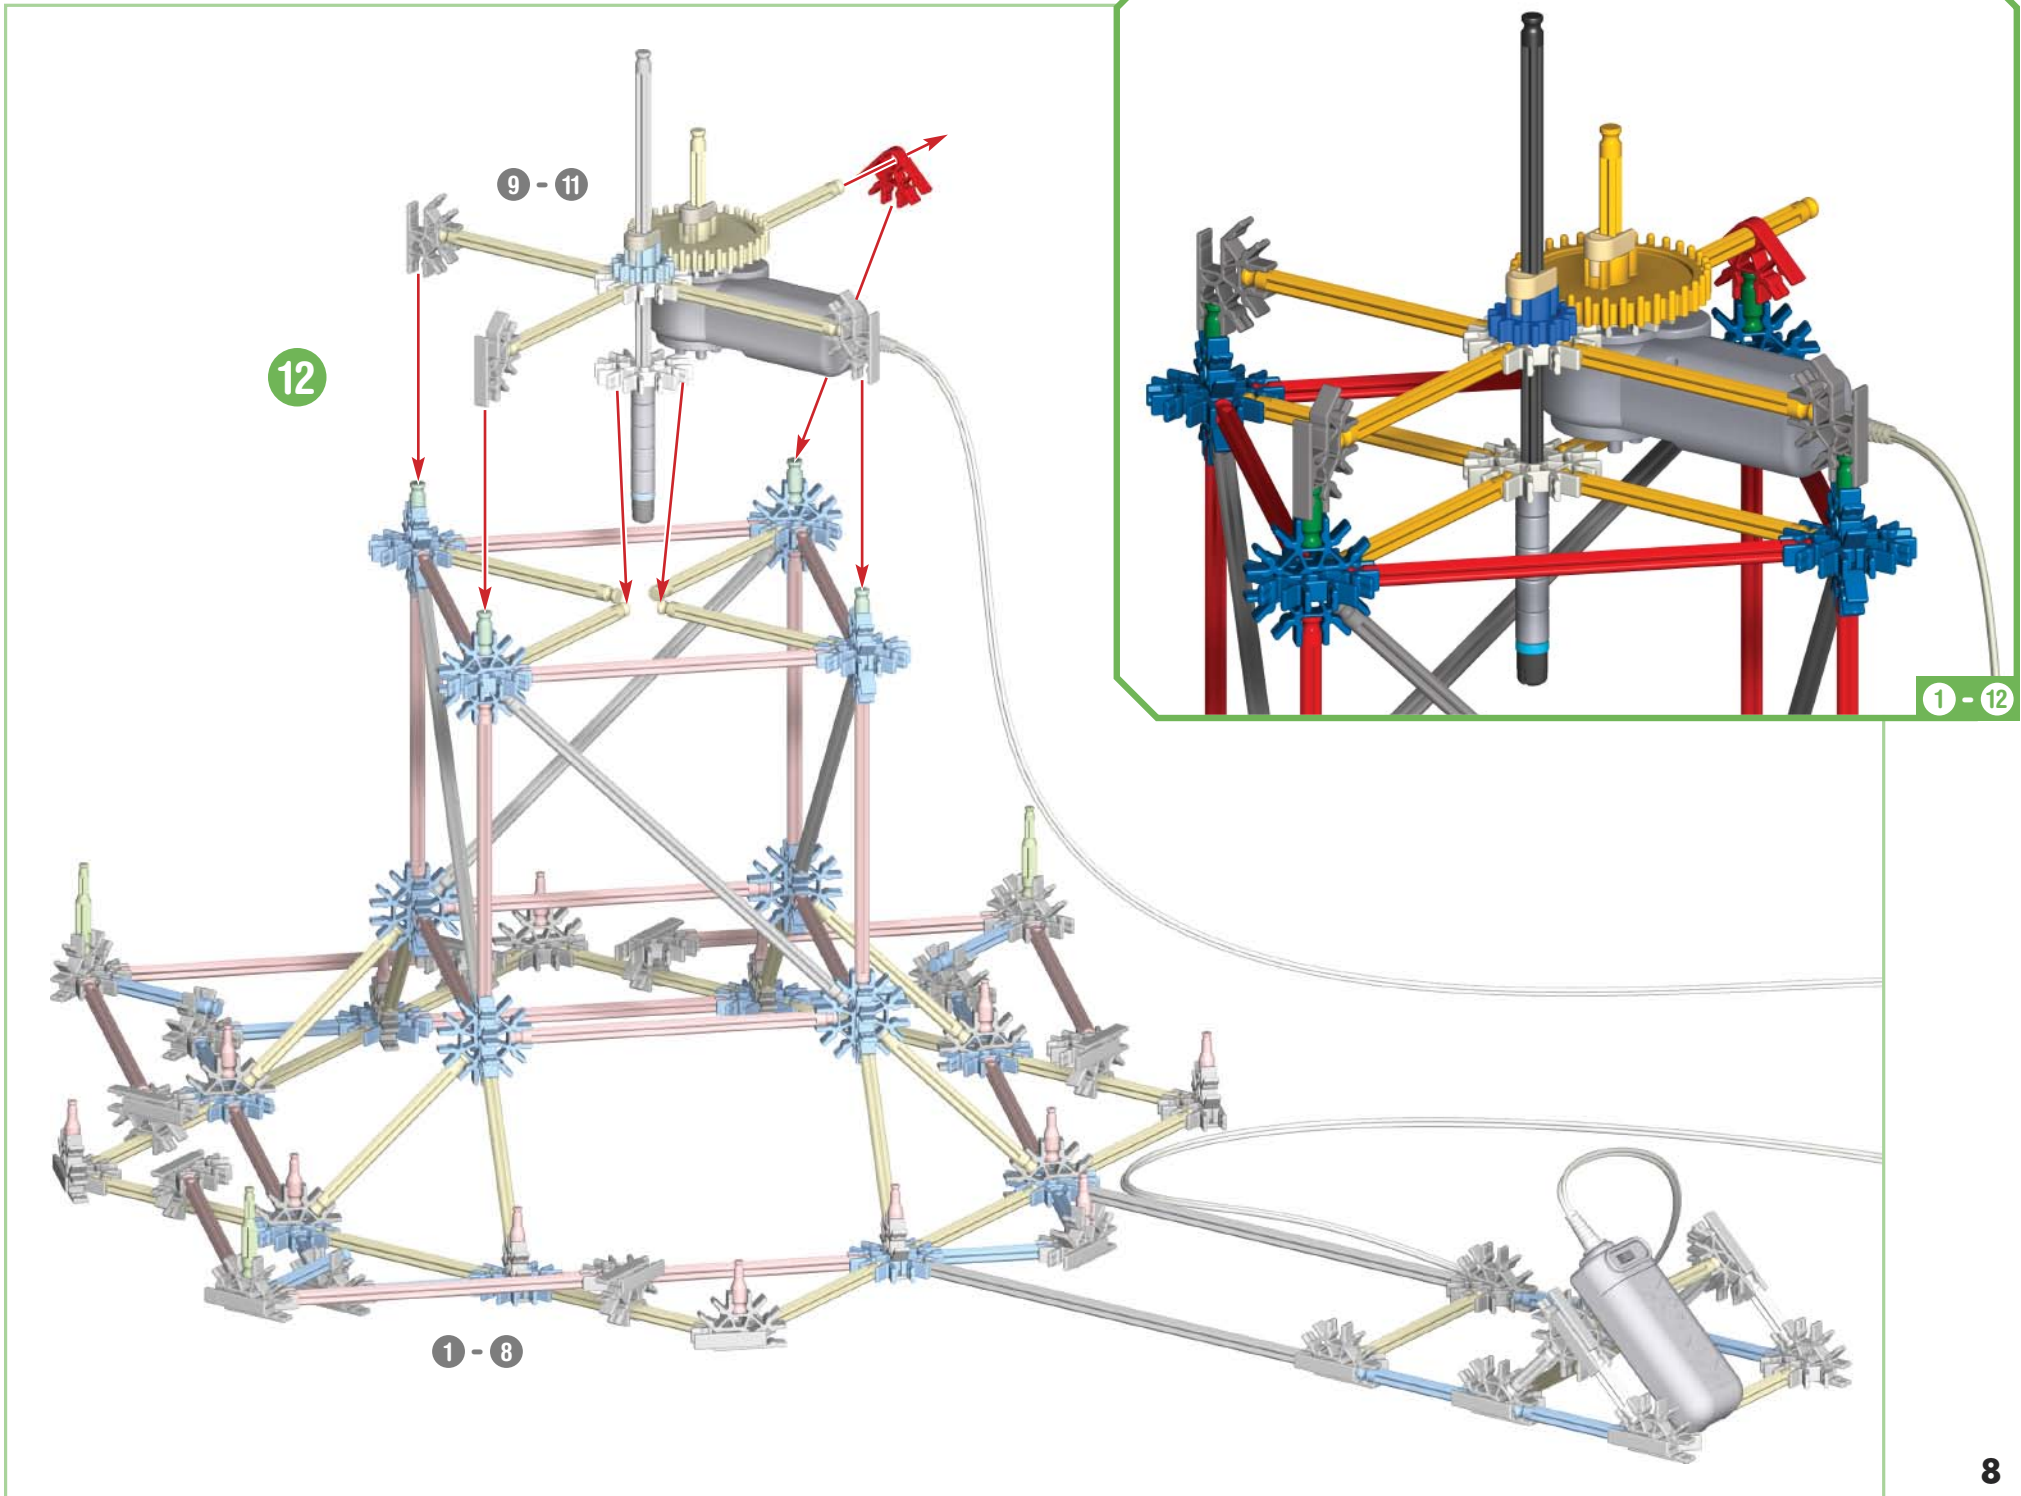 


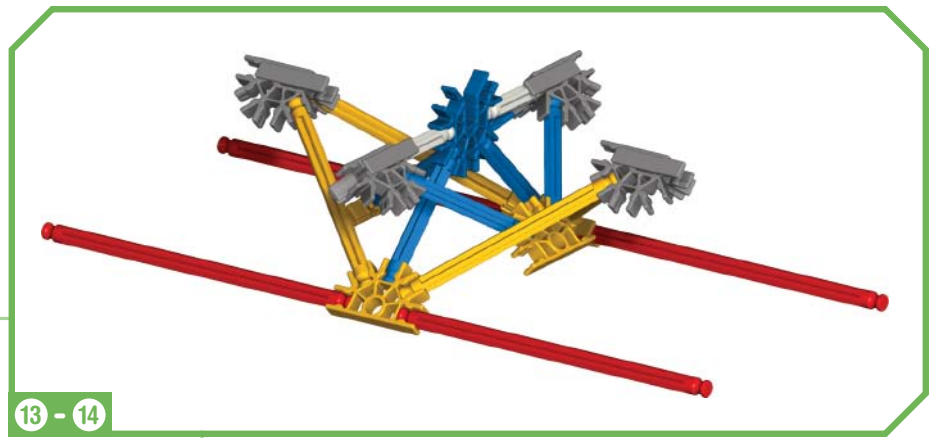 




13 - 14

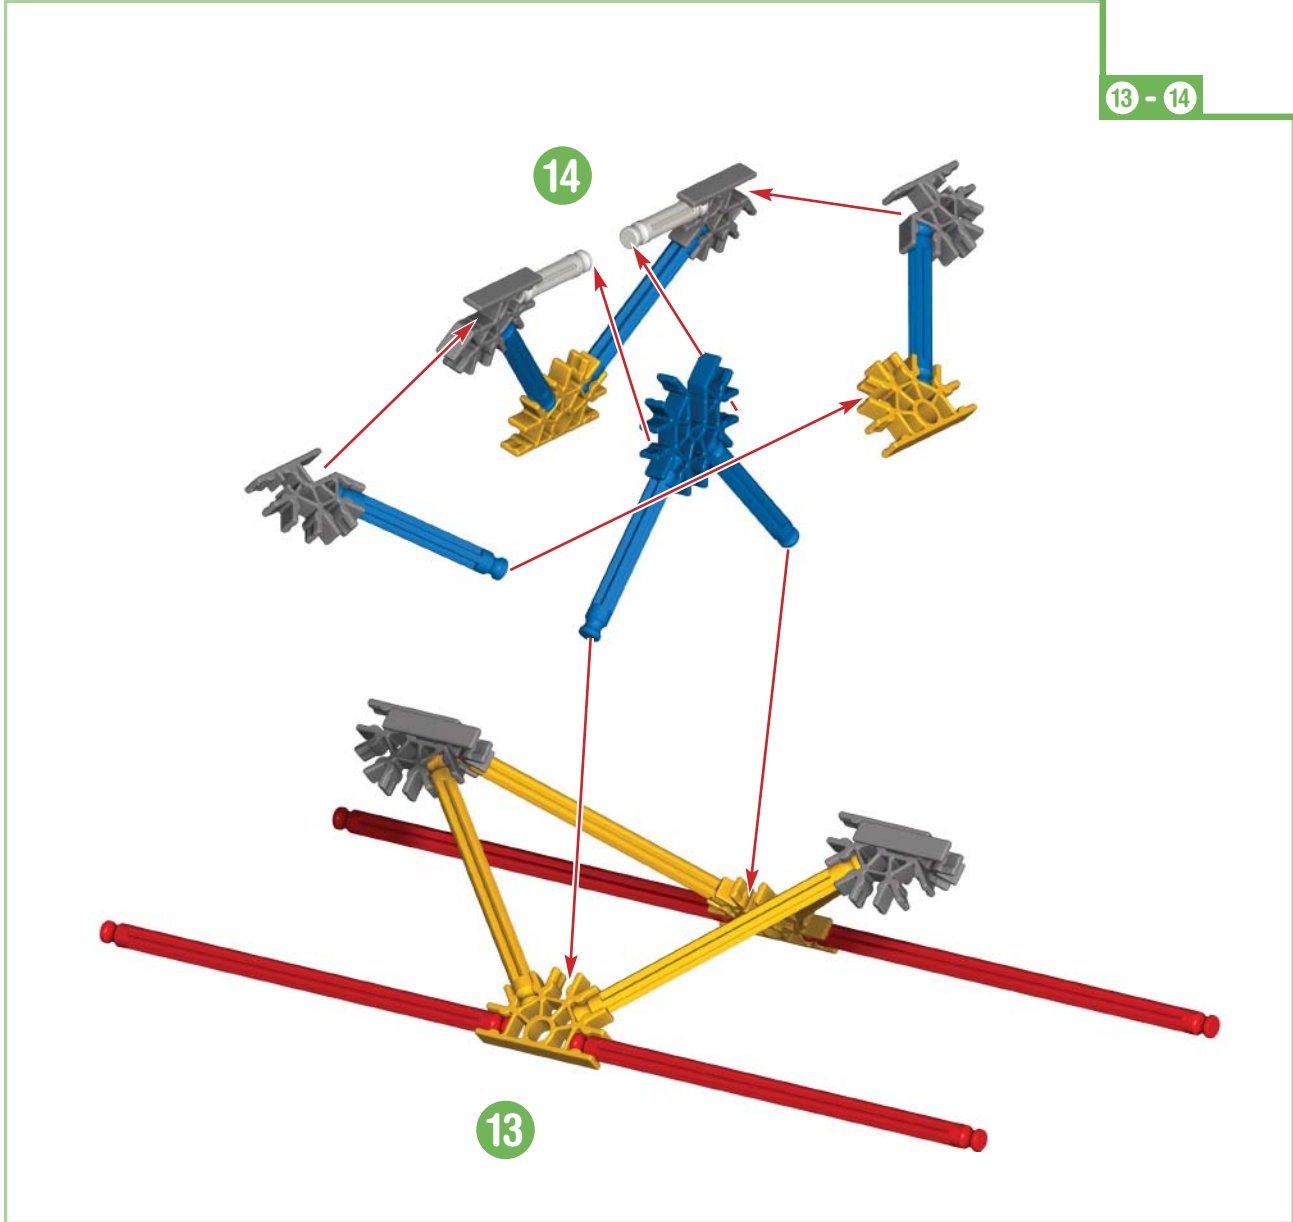 


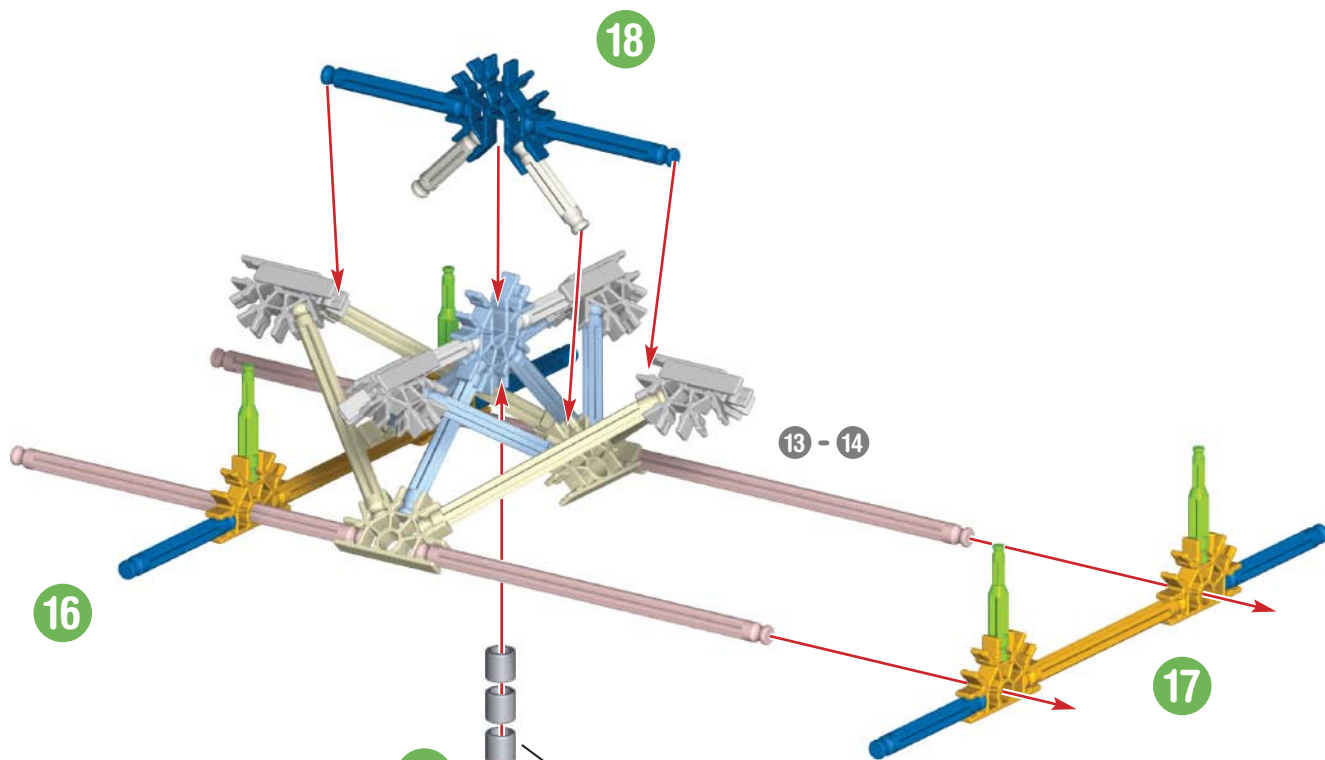 



**15** } 7



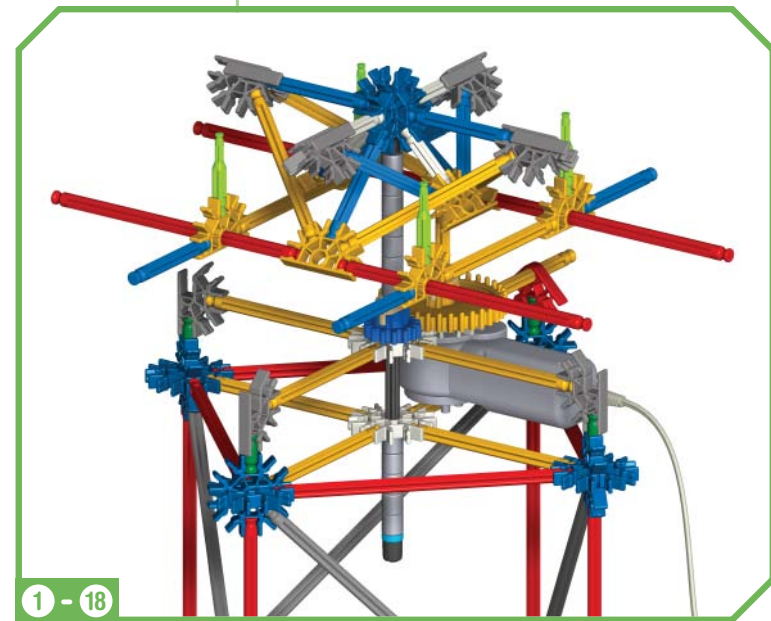 
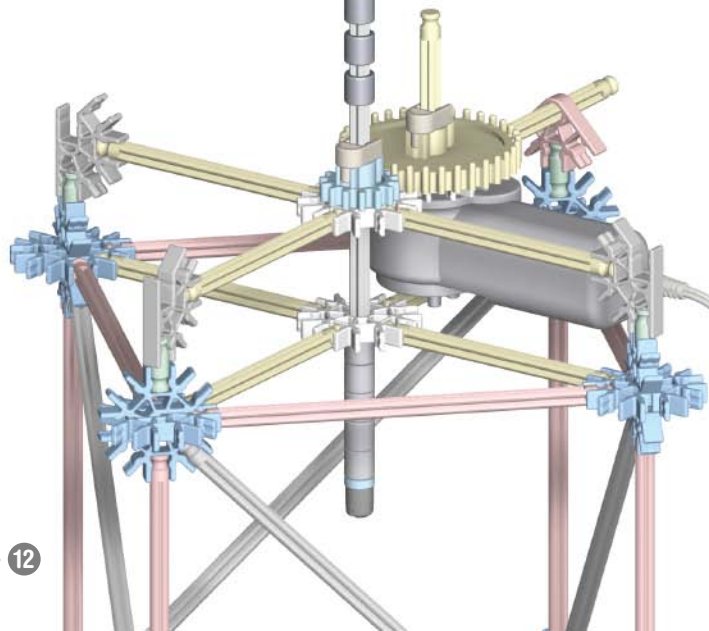 


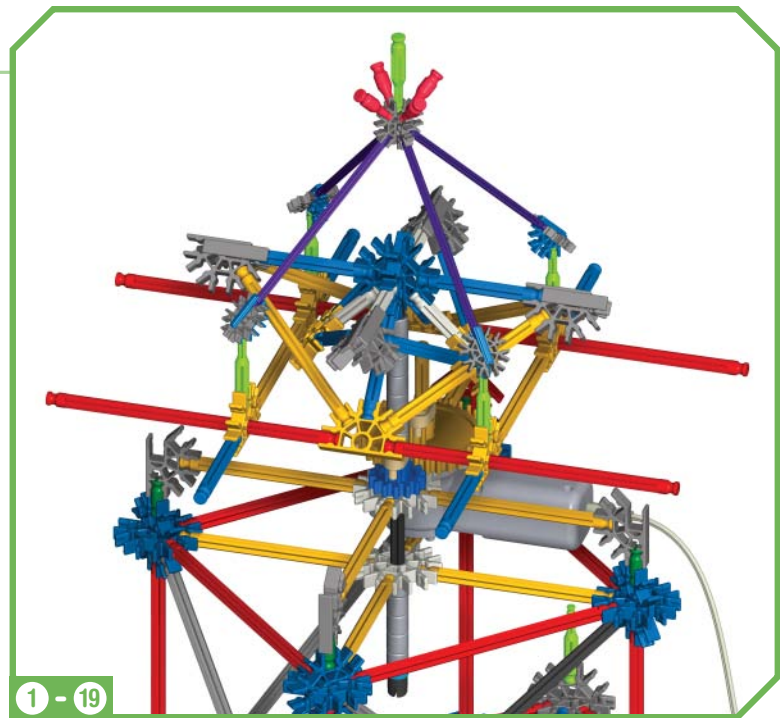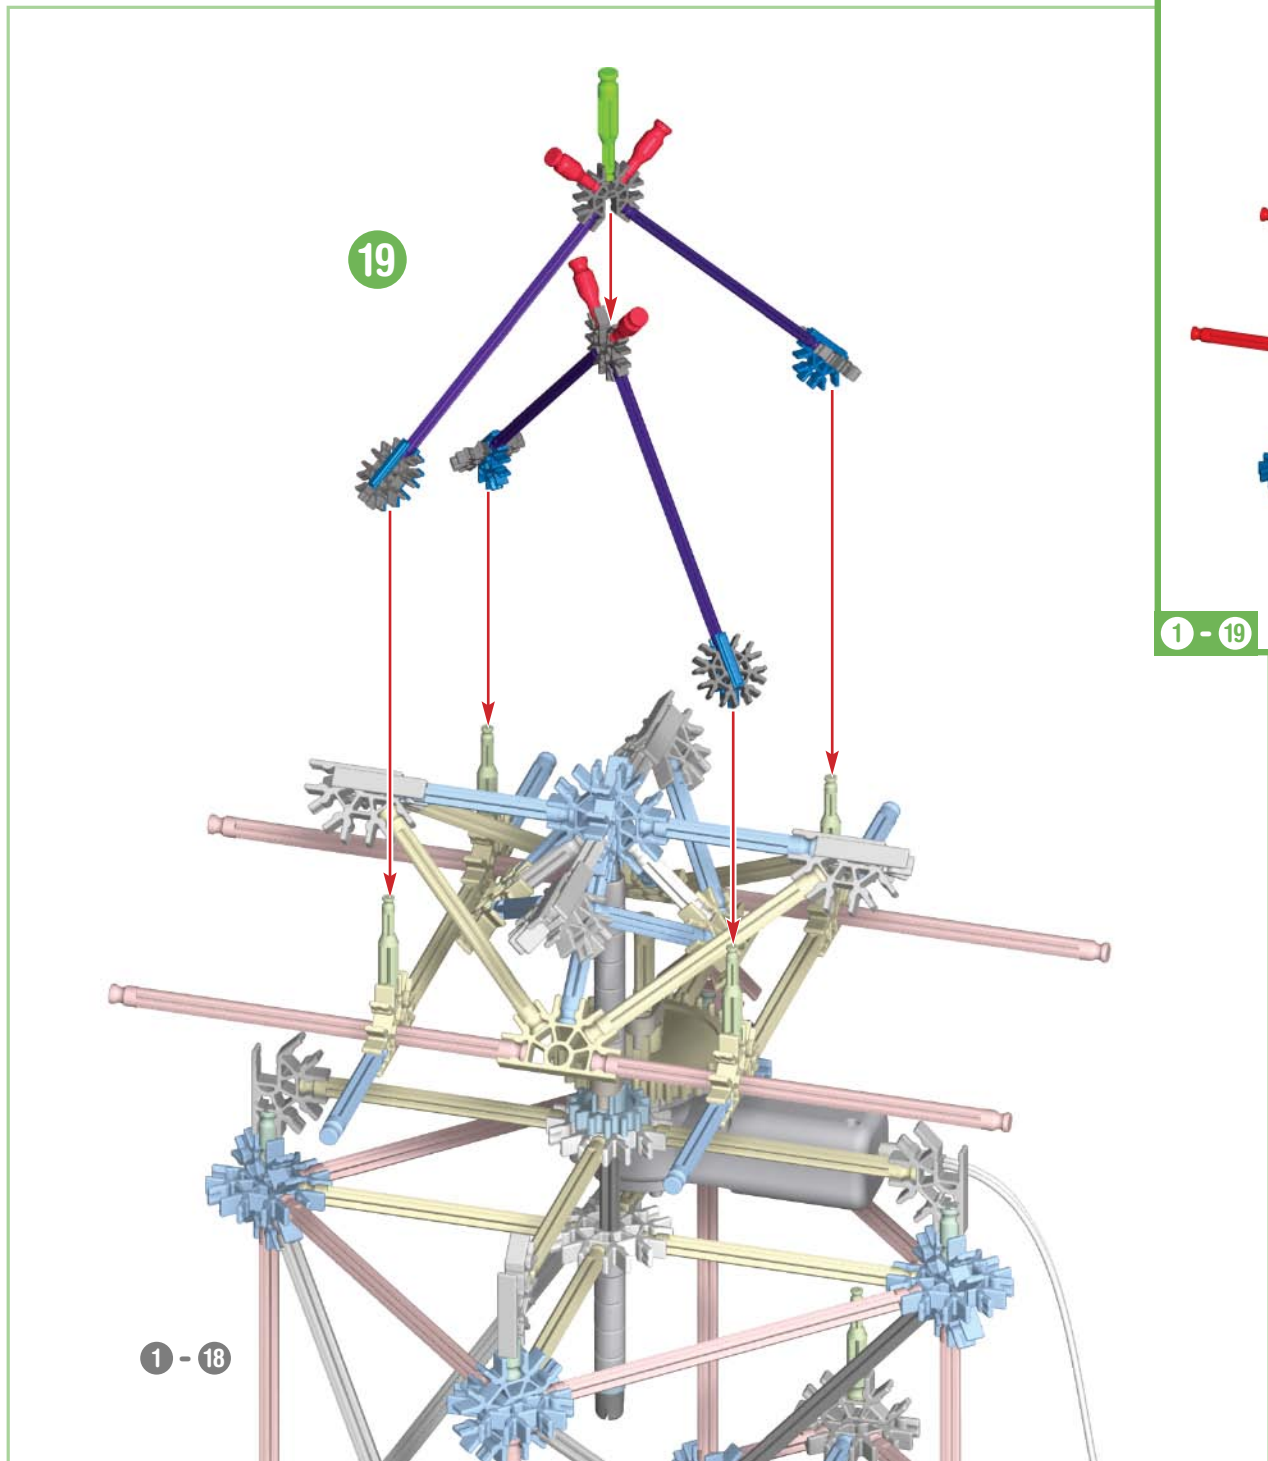  


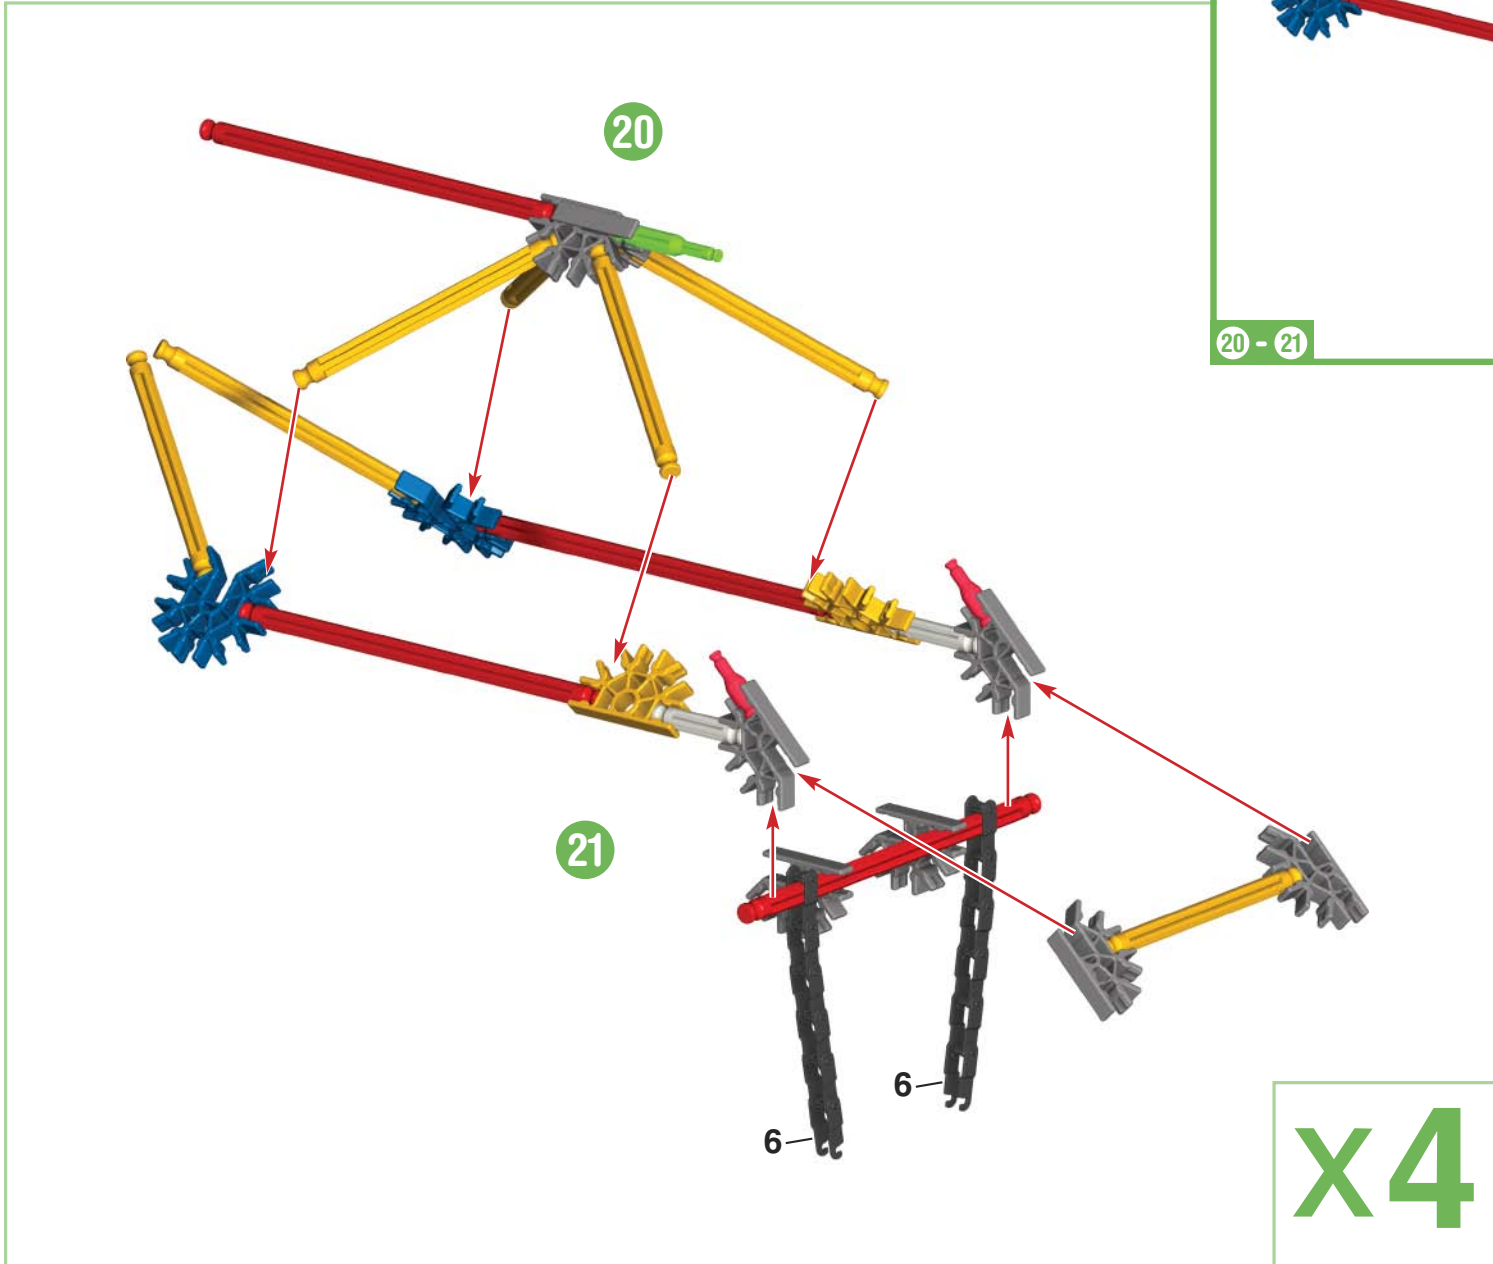 

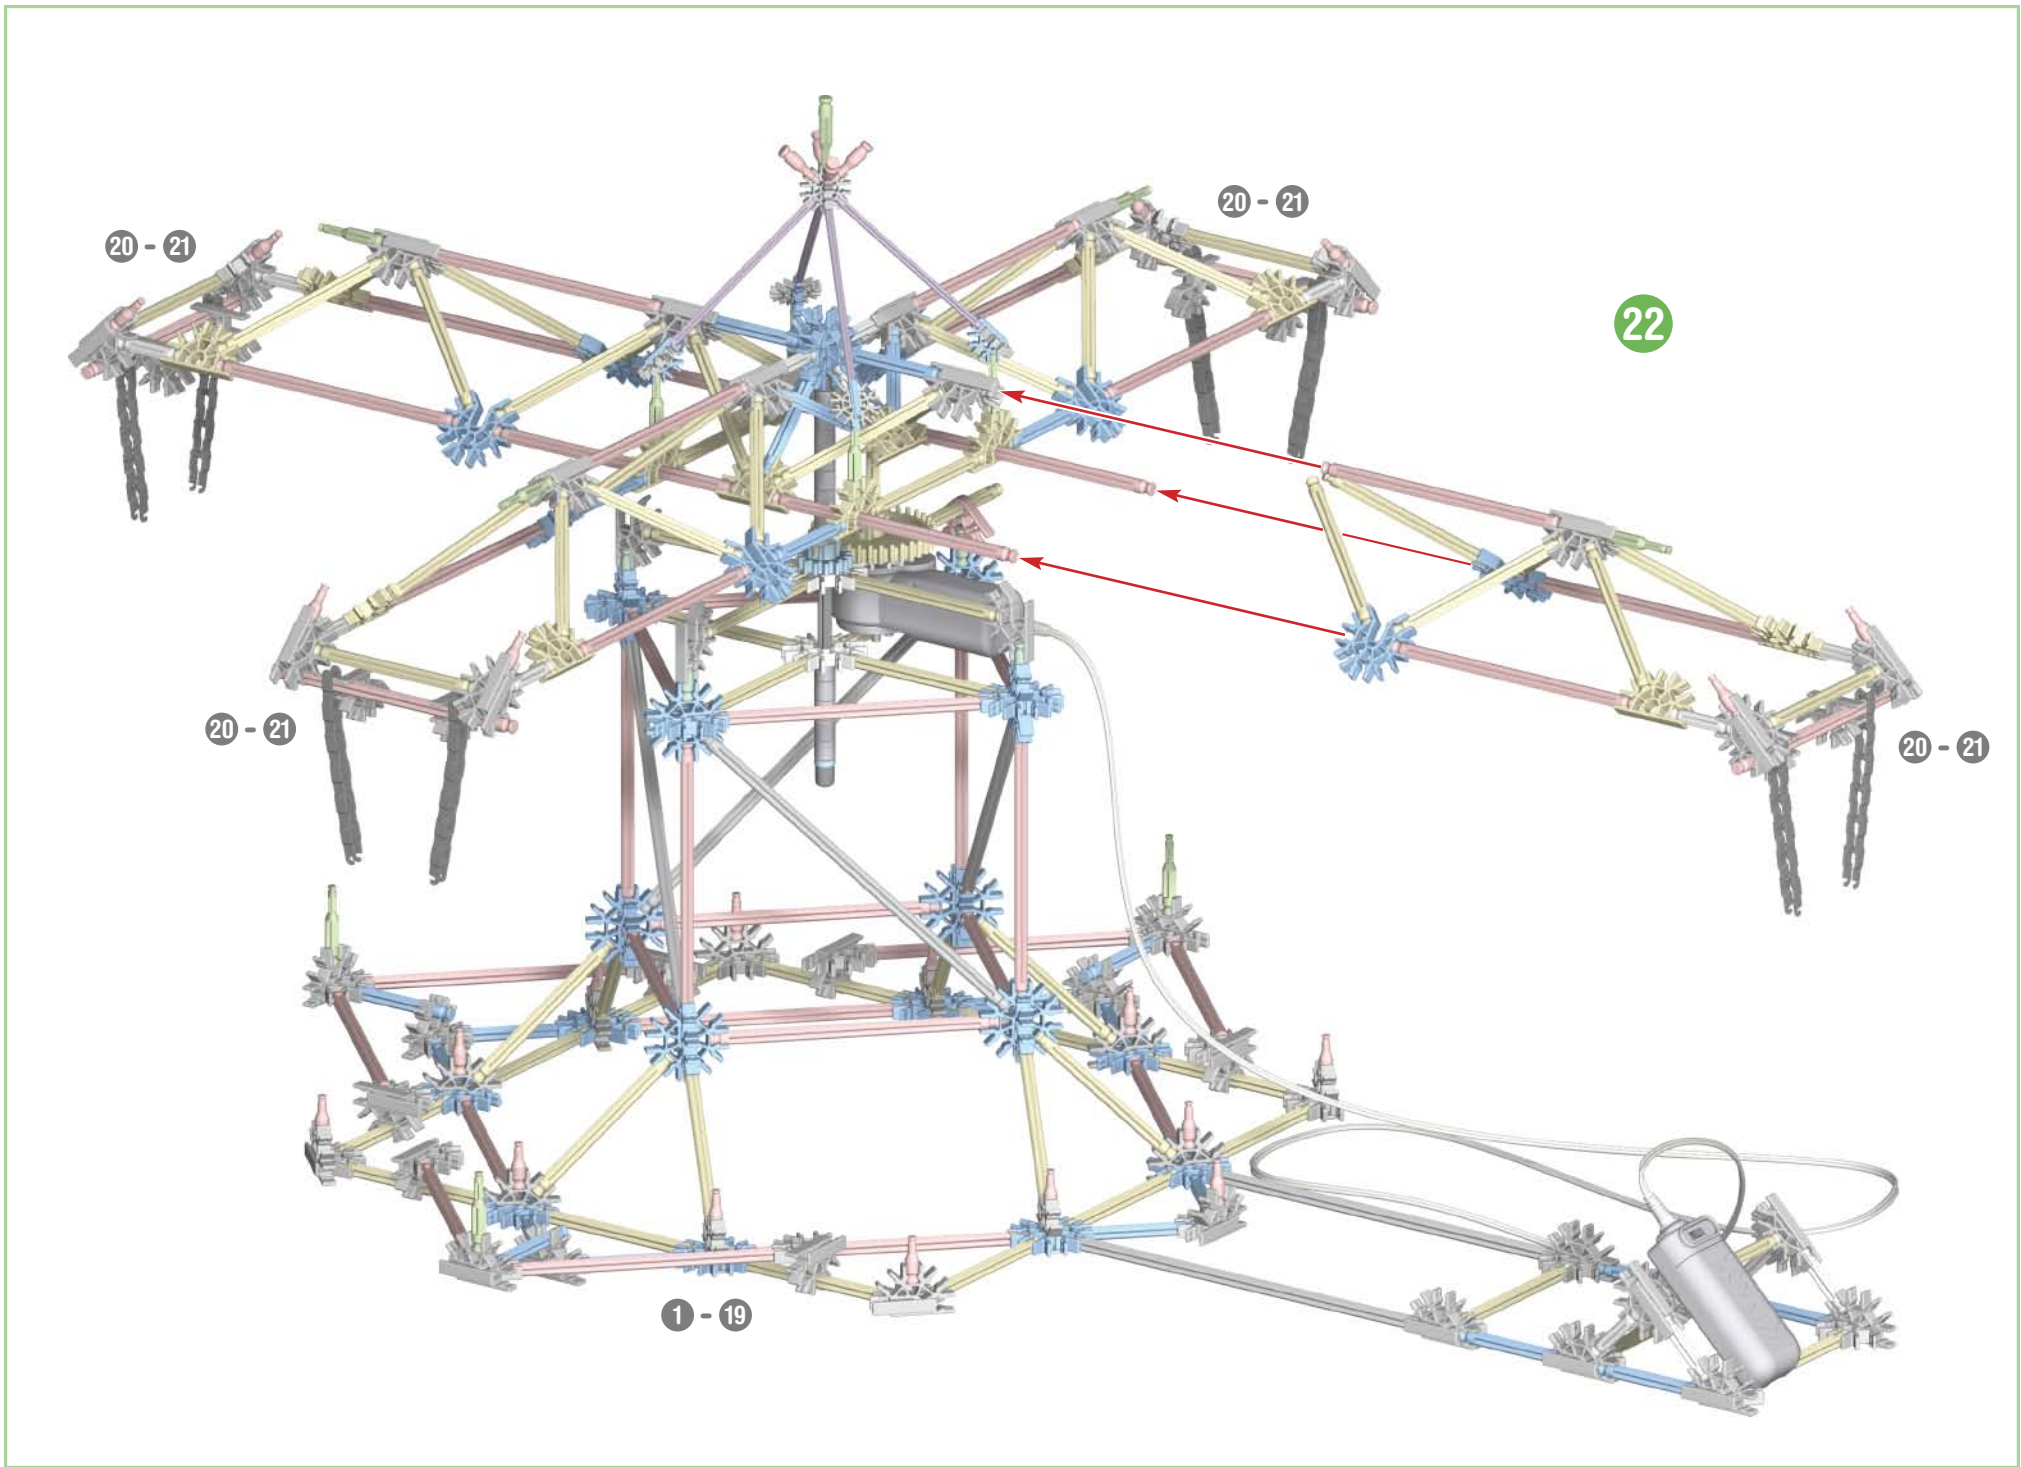 


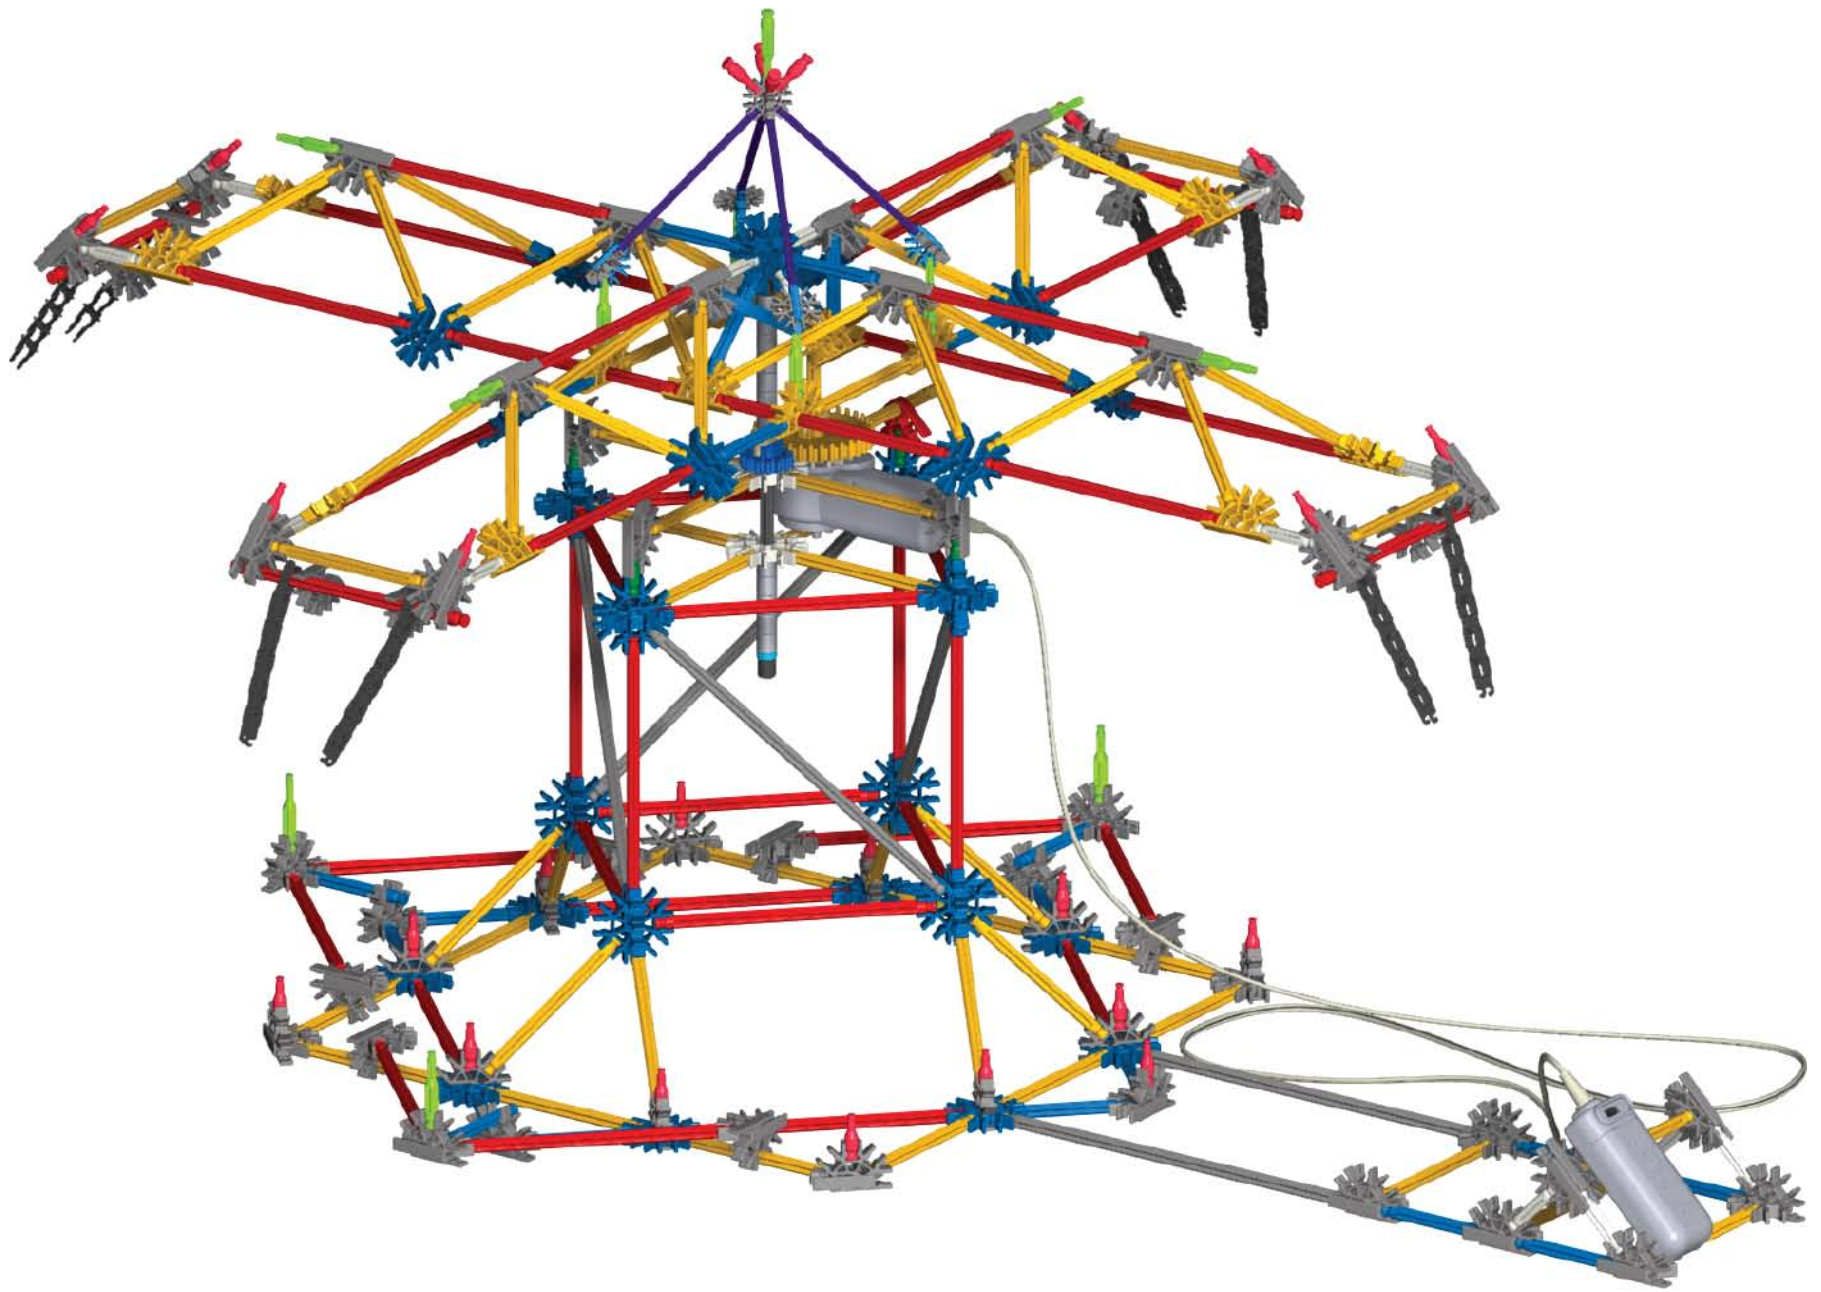      

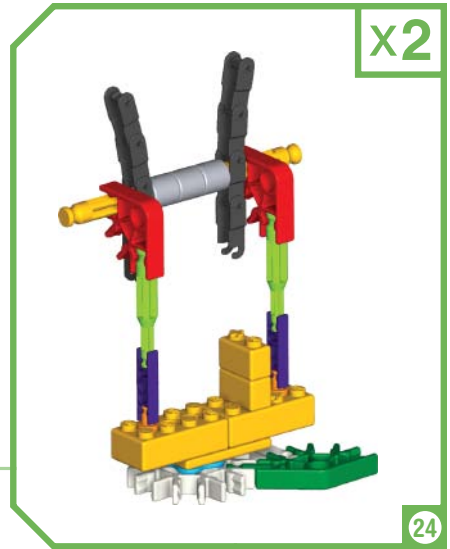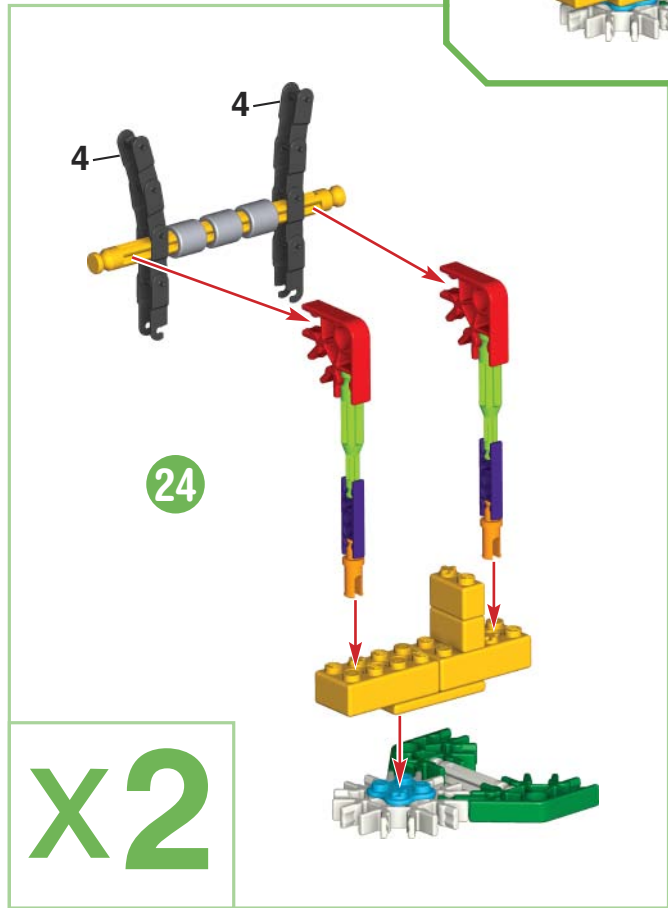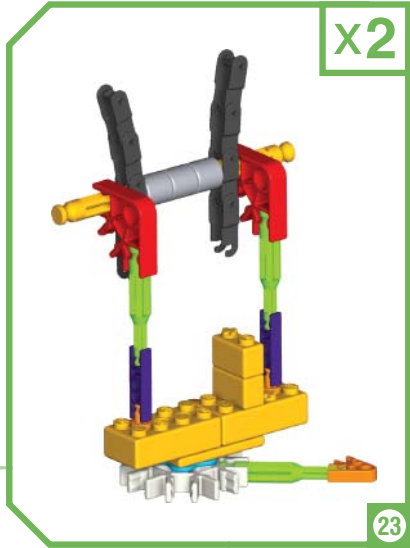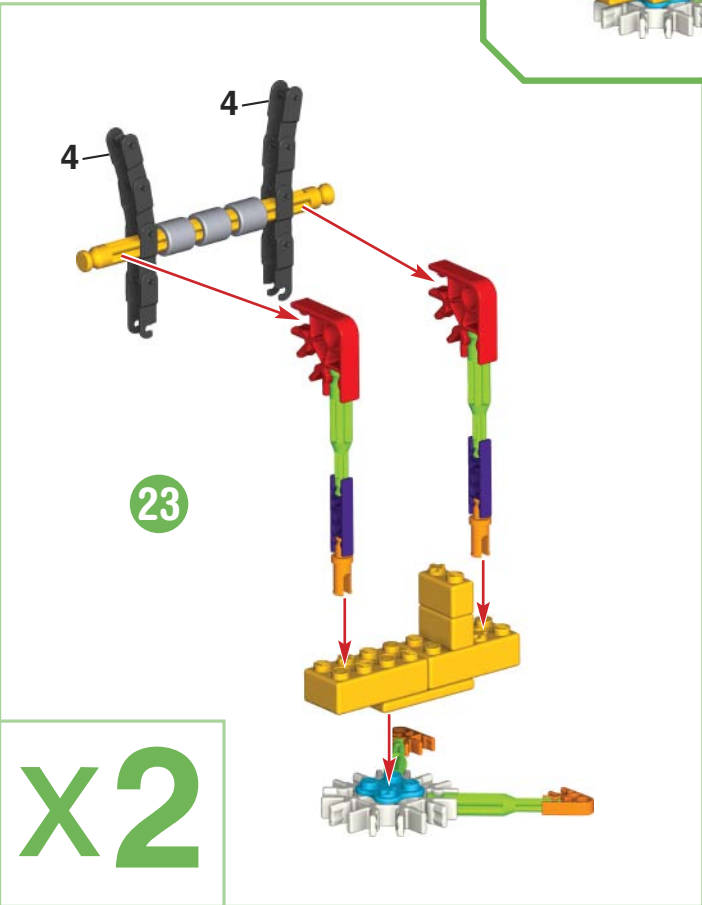

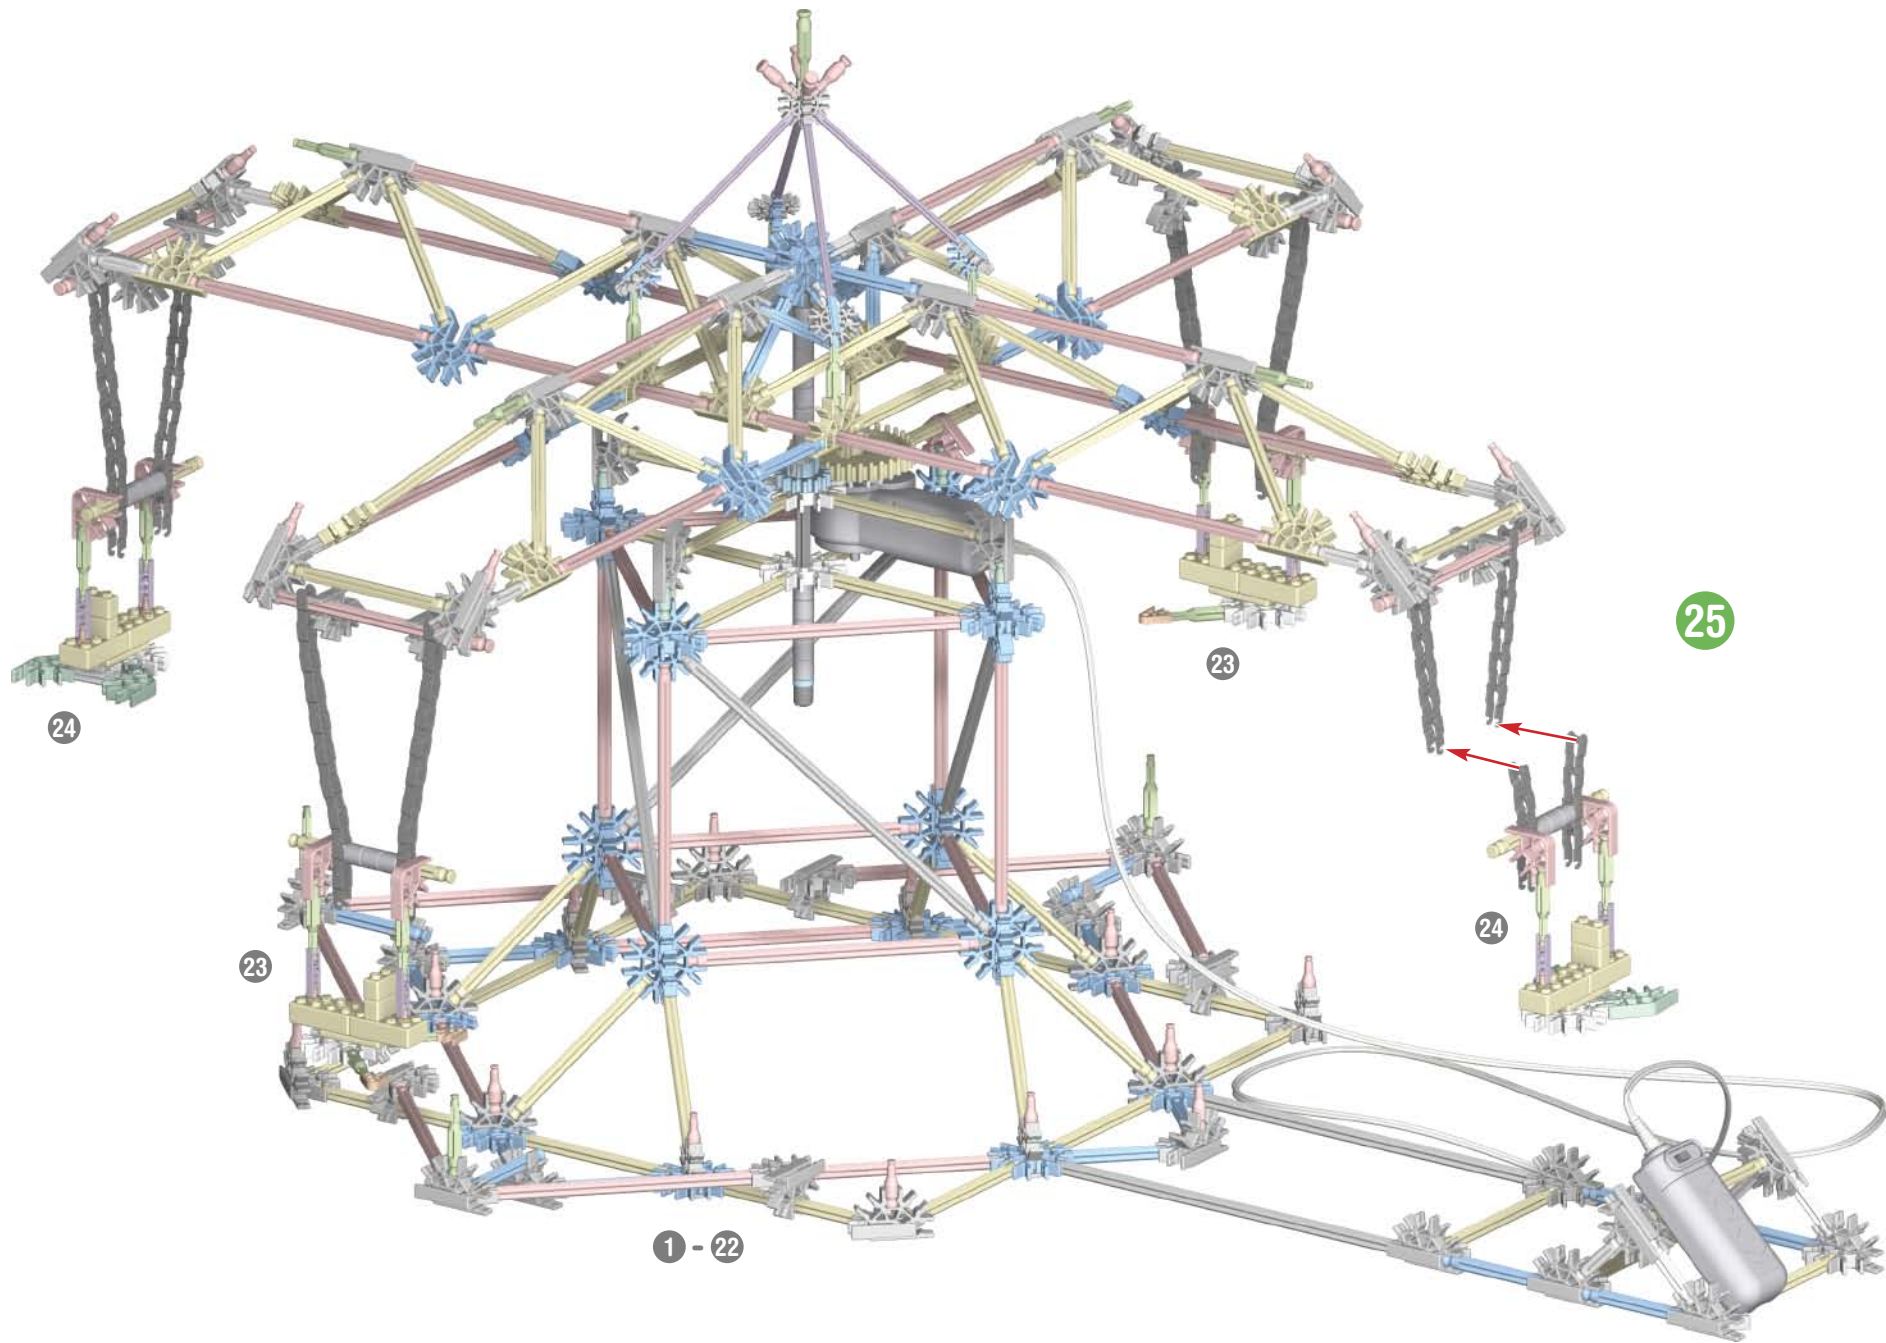

# Add 4 figures to the Ride.

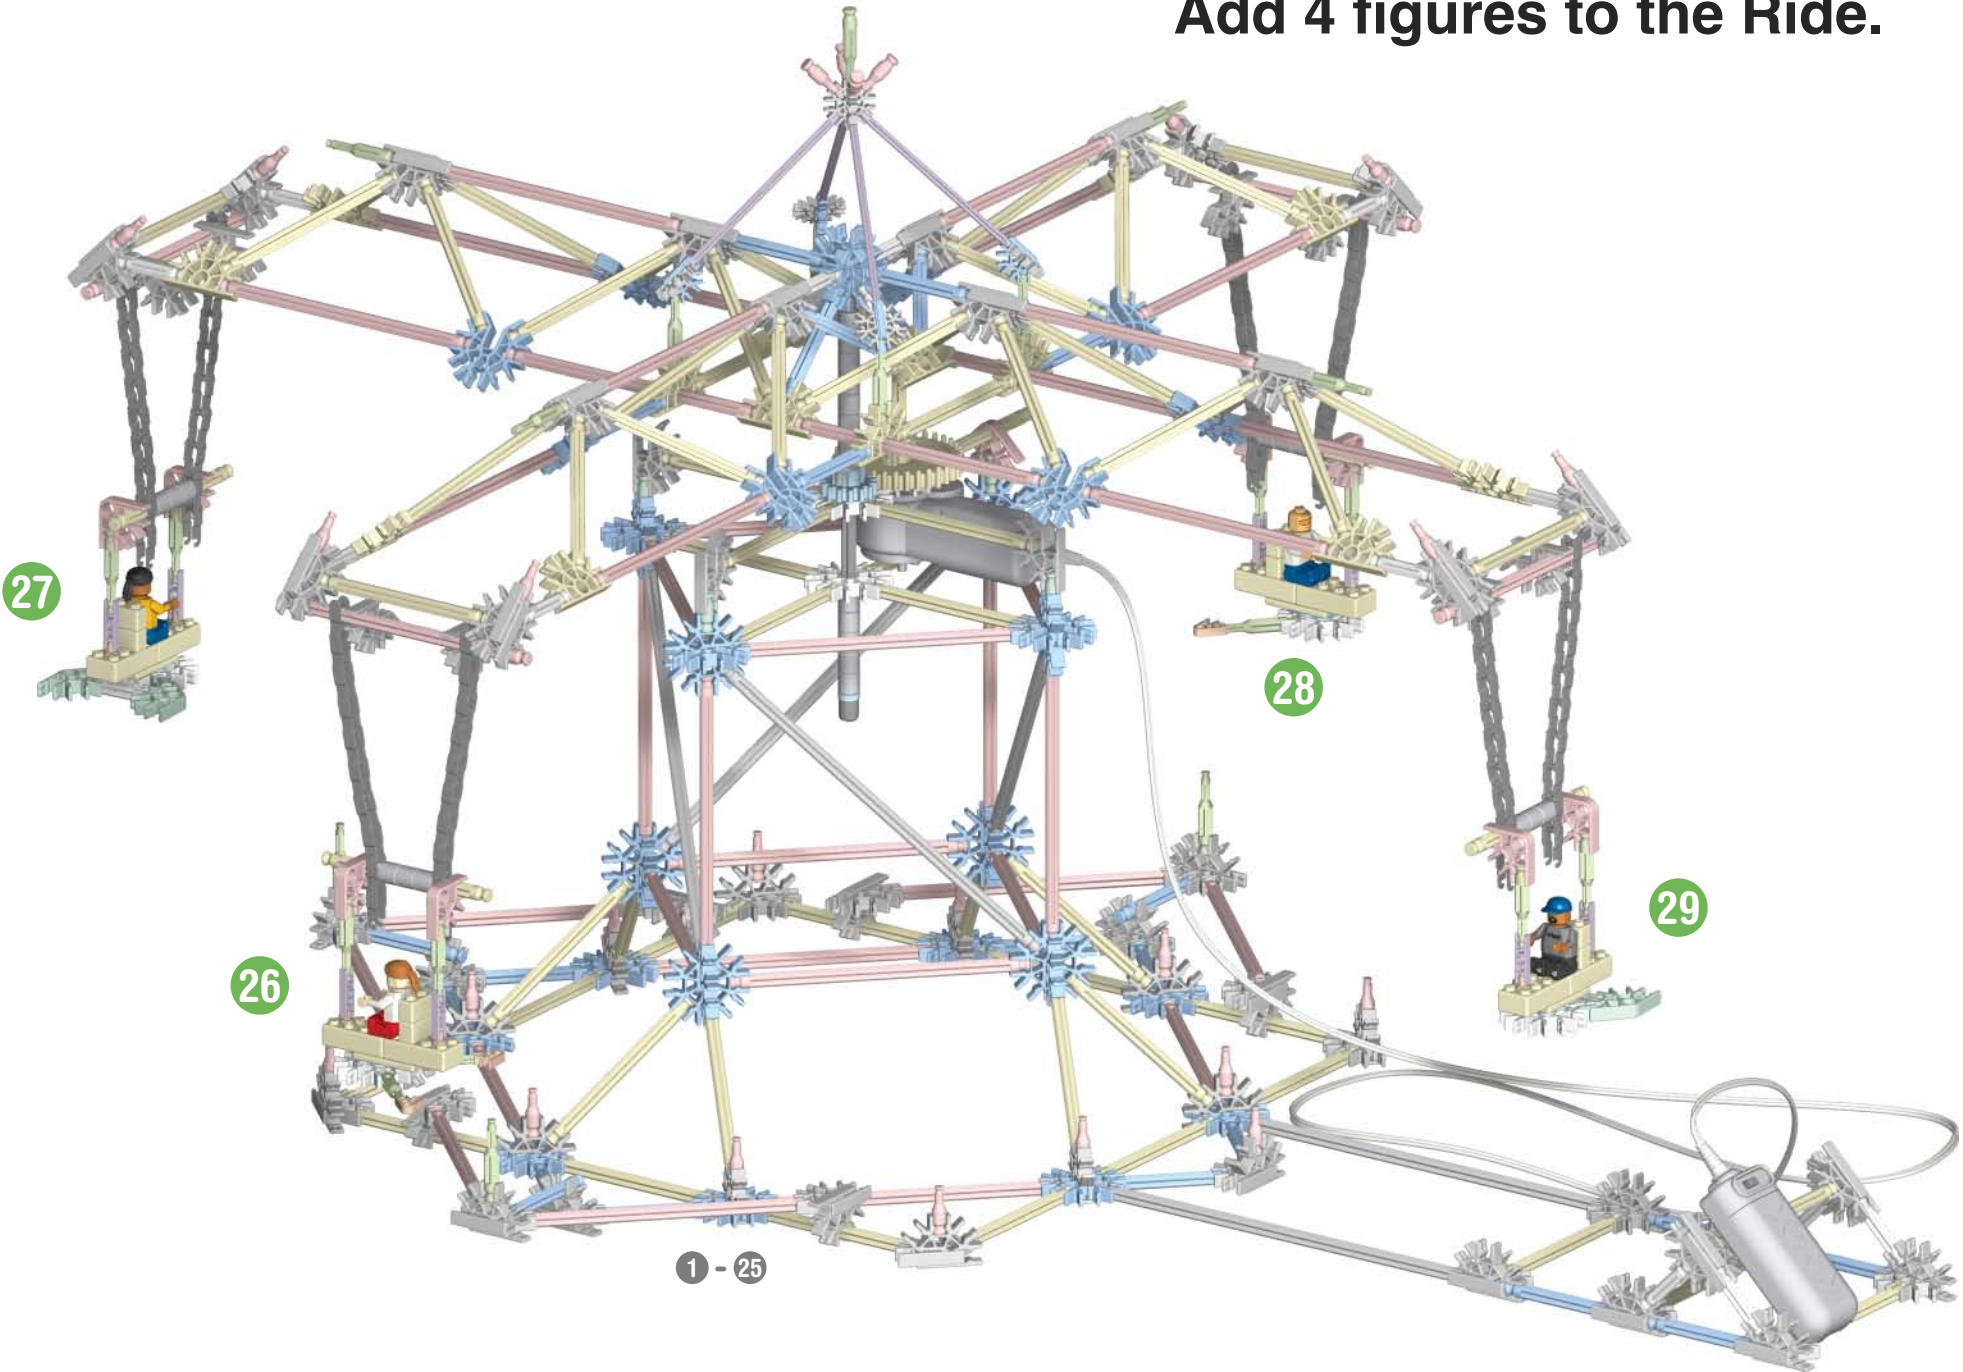 

# SWINGING ROCKET RIDE

## TROUBLESHOOTING

### If the Motor is not working properly:

- Check to see if you have fresh batteries and that they are installed correctly.
- If it is still not working, call our Consumer Hotline at 1-800-KID-KNEX (USA and Canada only).

