

K'NEX

WILD WHIPLASH


Additional Build



1 - 2




2

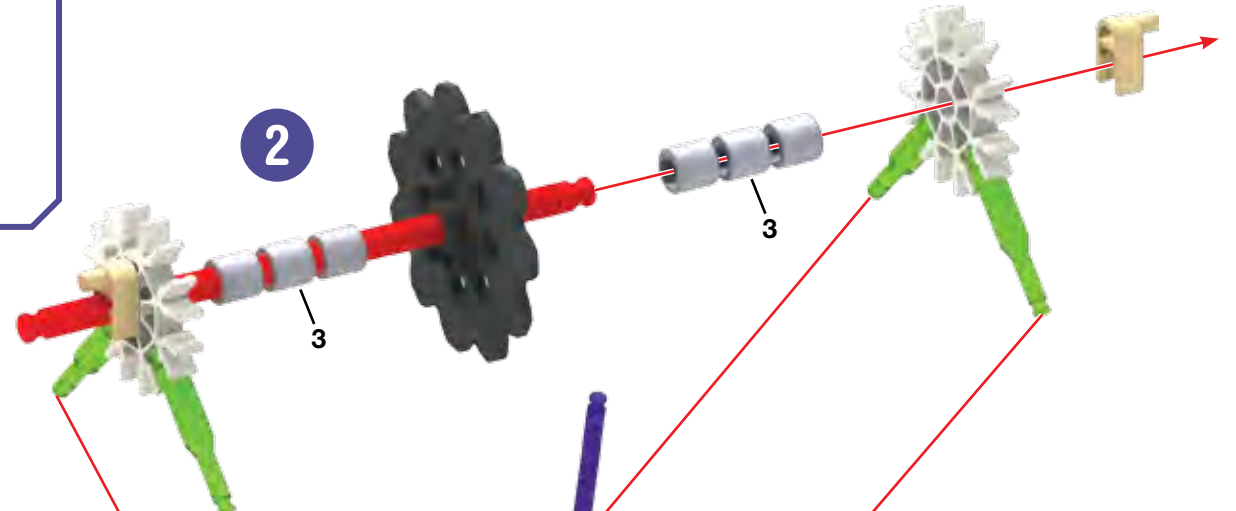

3

3

1


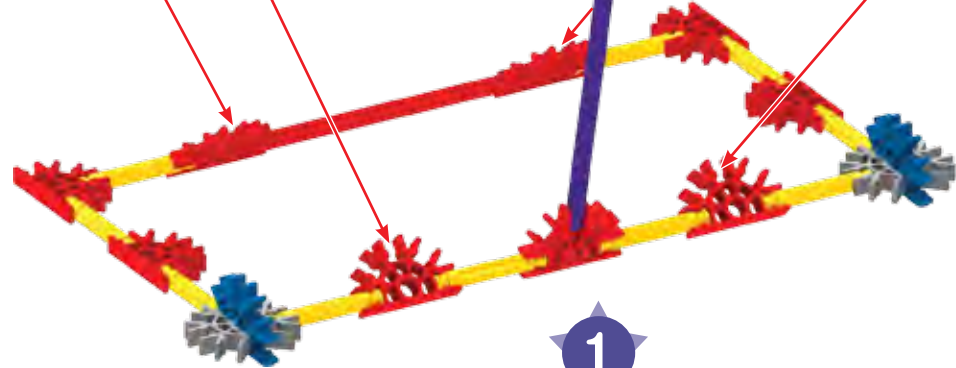




1 - 2



- 1 2 2
- 2 9 2 6
- 4 10 1
- 1
- 1

3 - 5

5		2		5	
2		2		2	
3		1		2	
9					
5					
1					

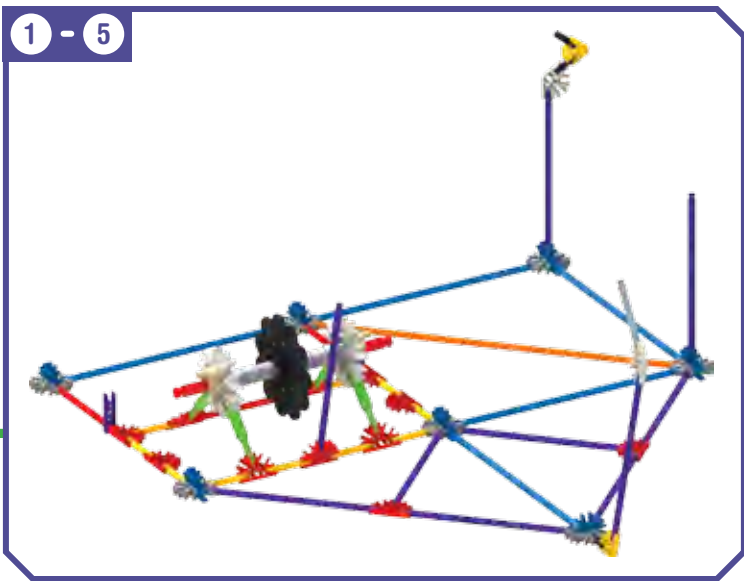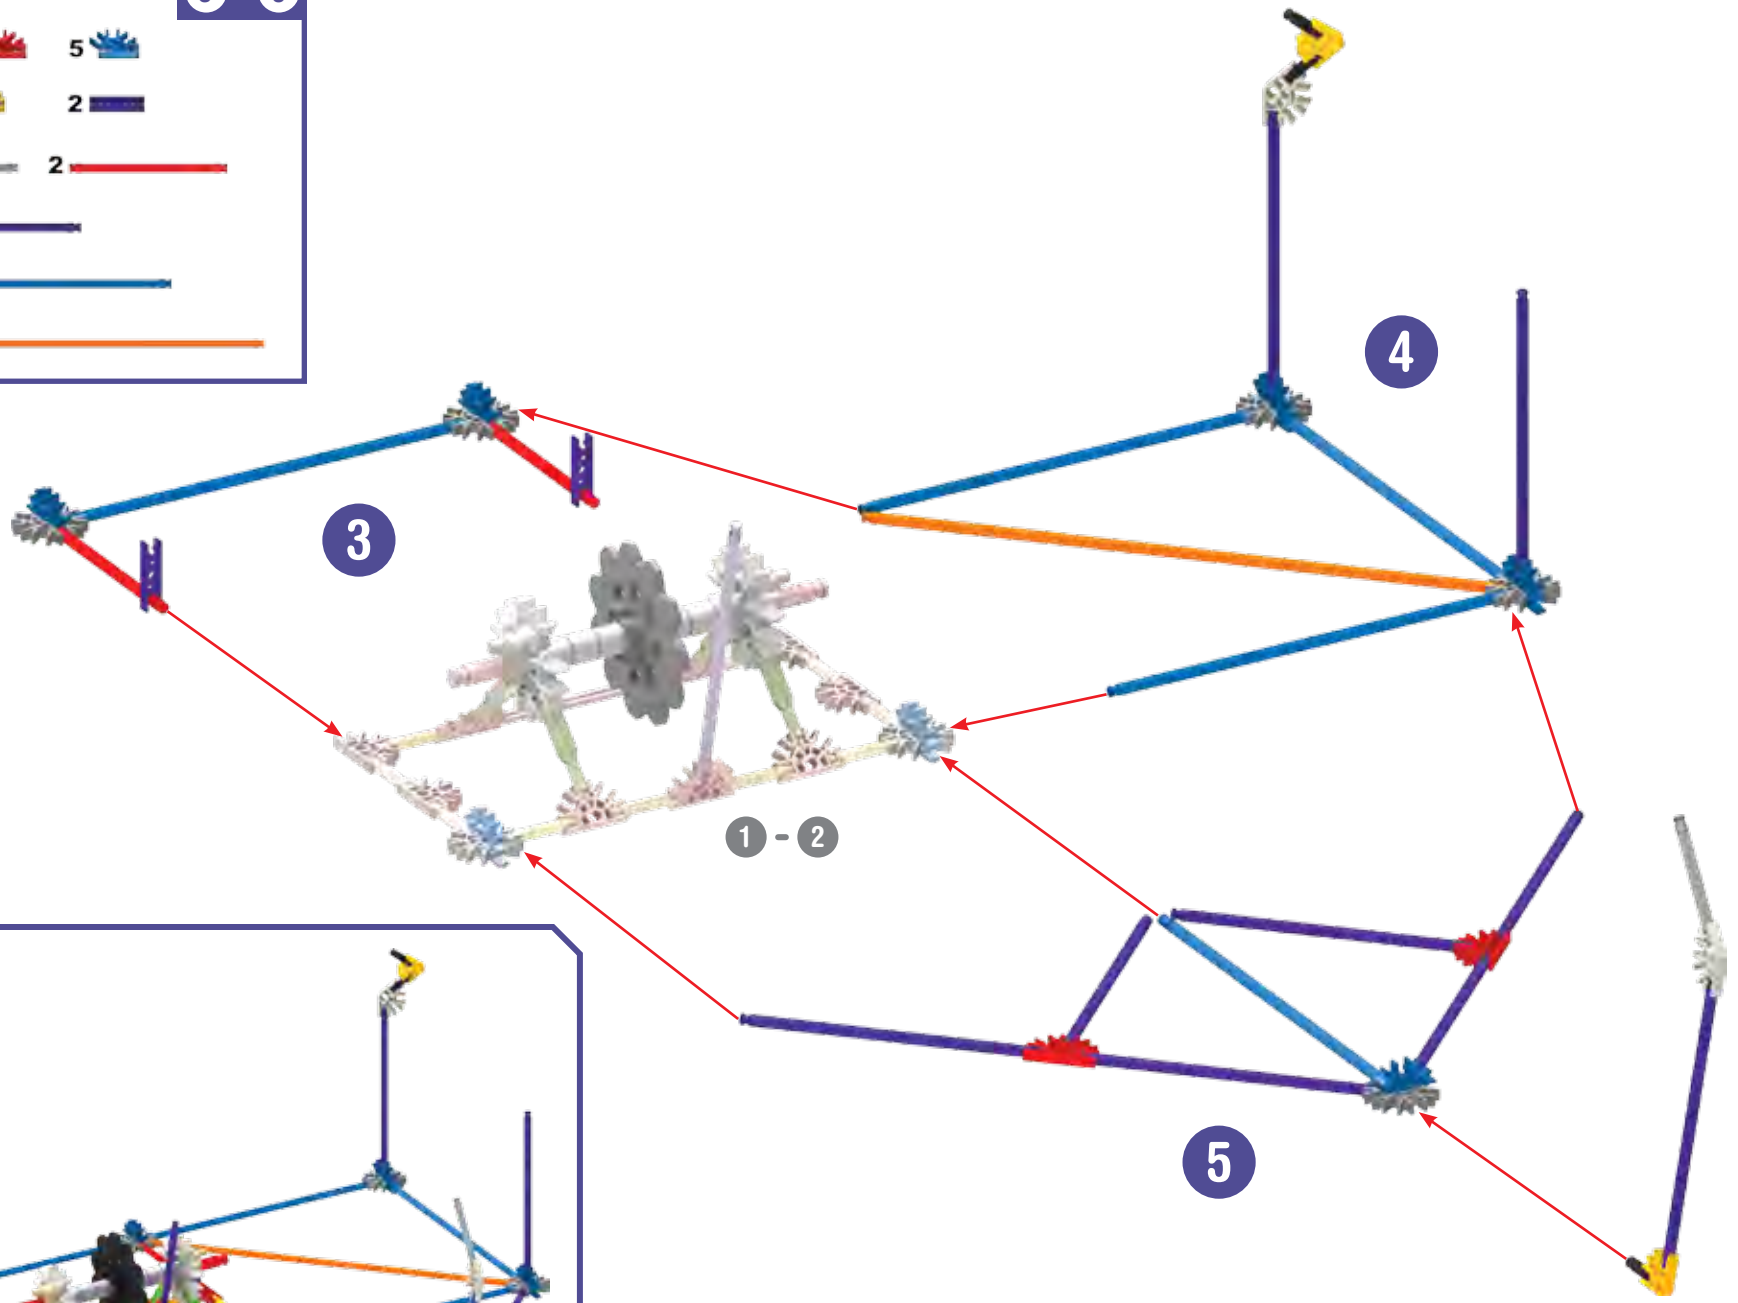

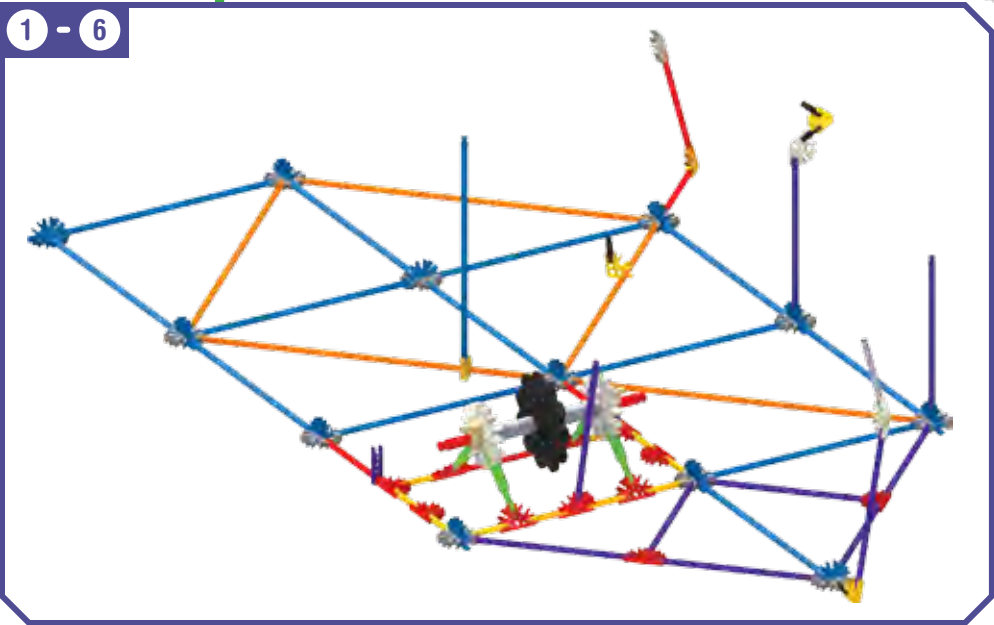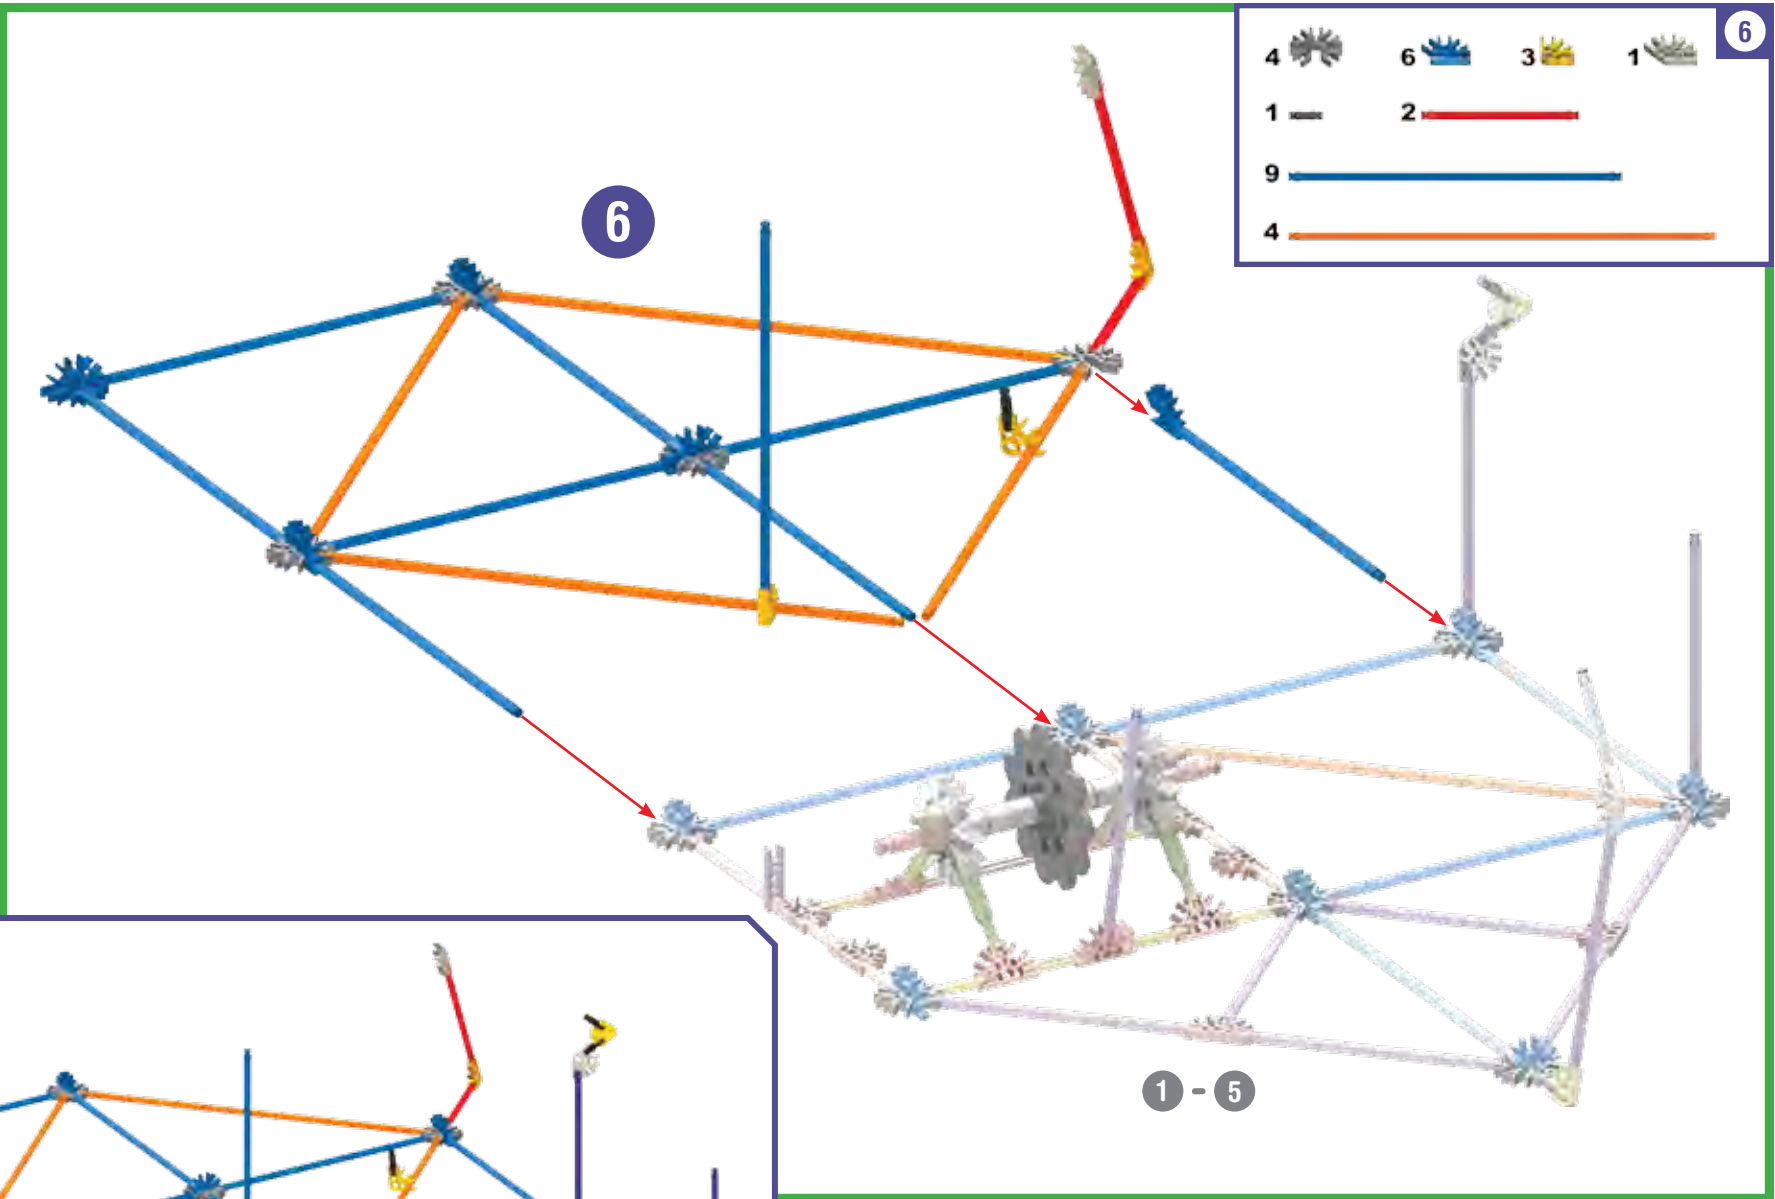

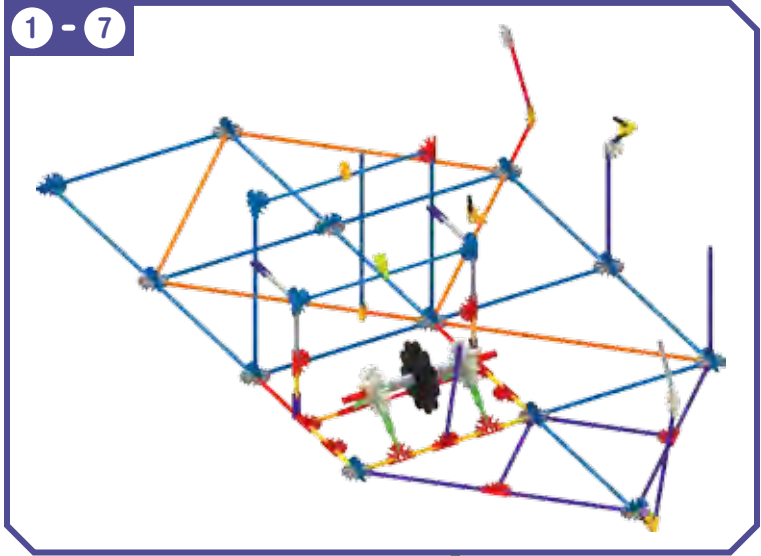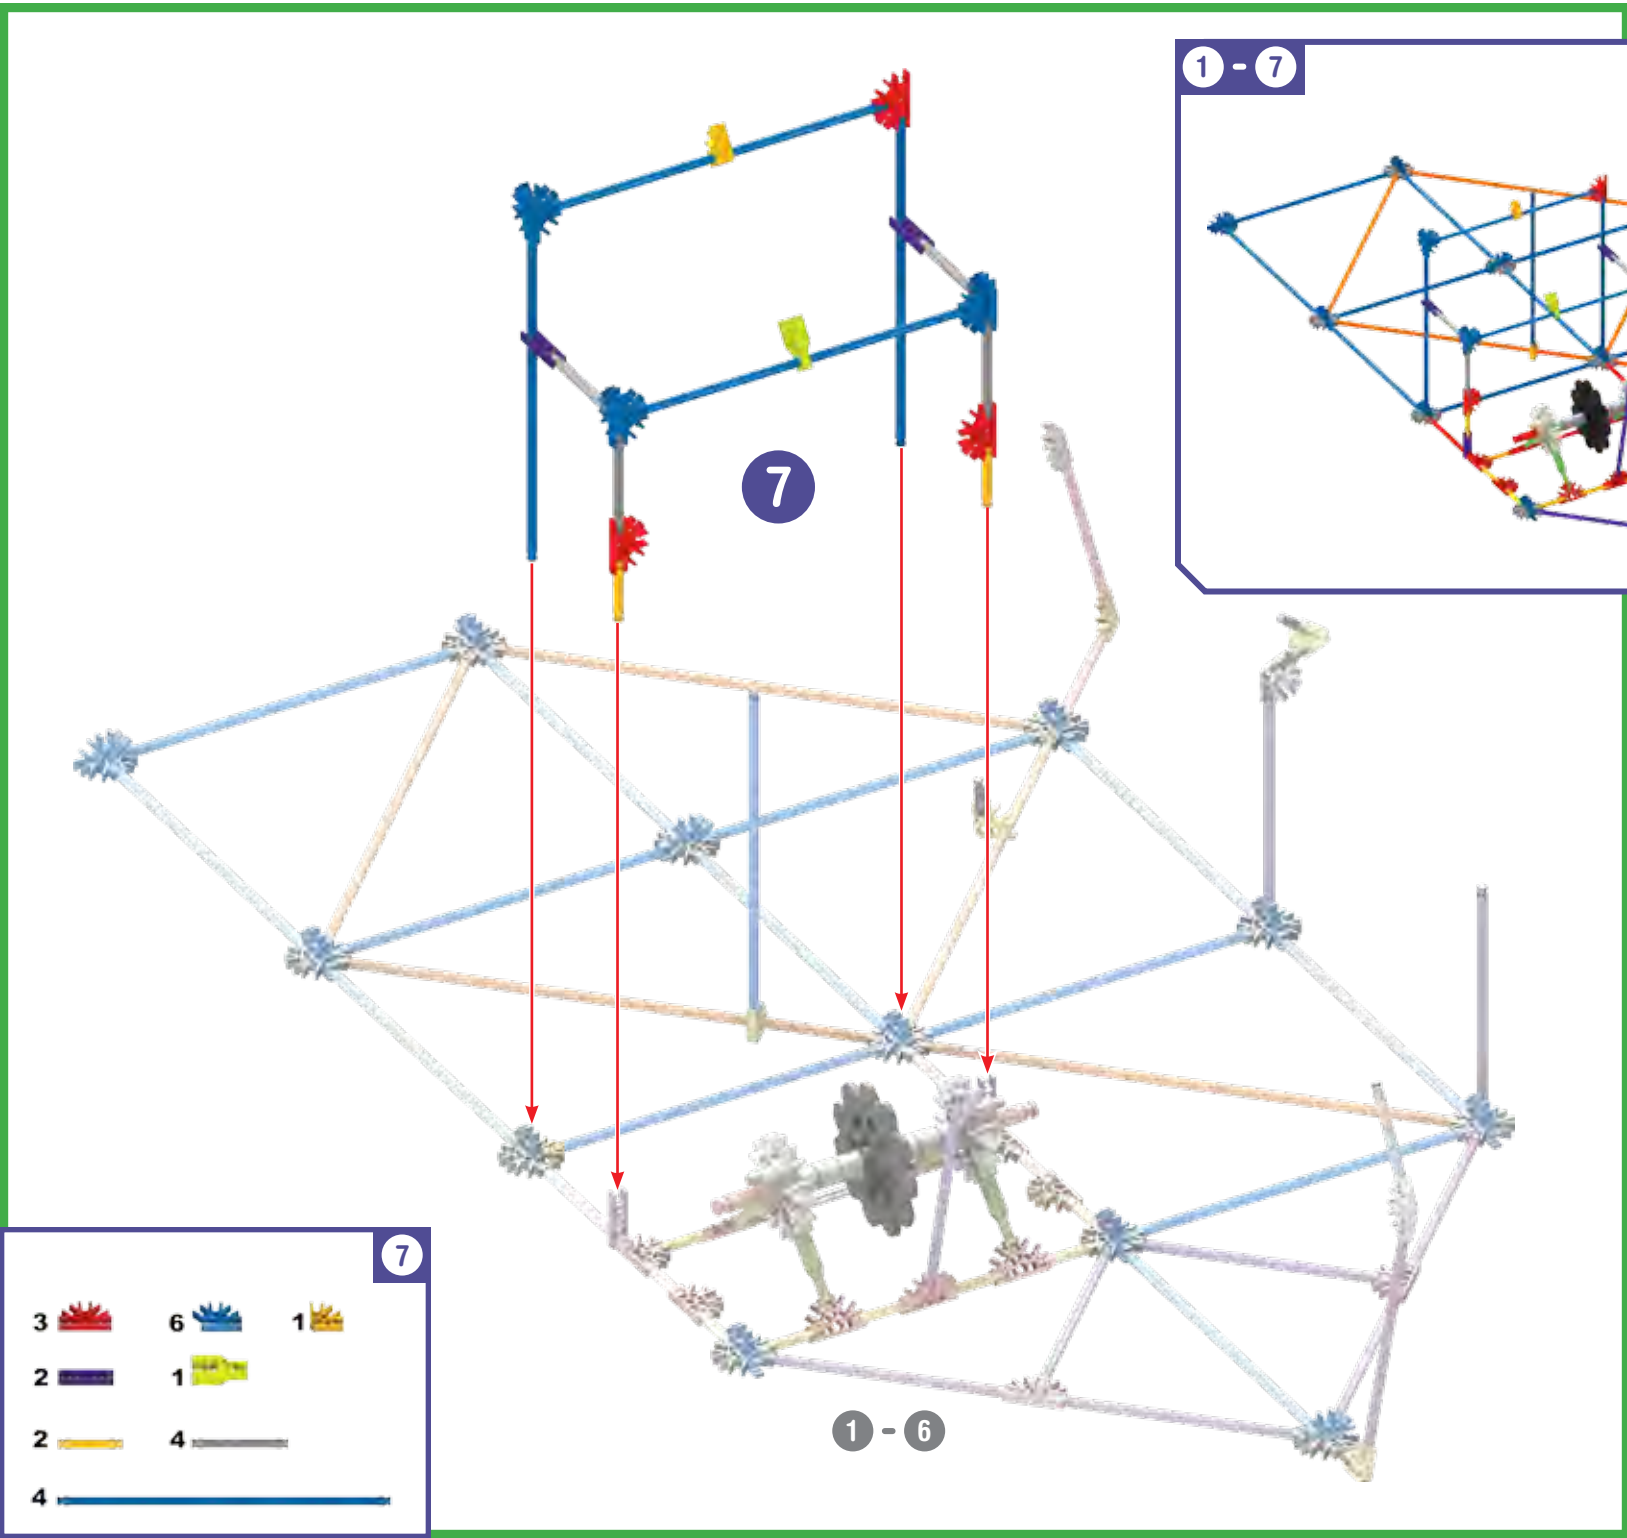


7


3		6		1	
2		1			
2		4			
4					

1 - 6

1 - 8

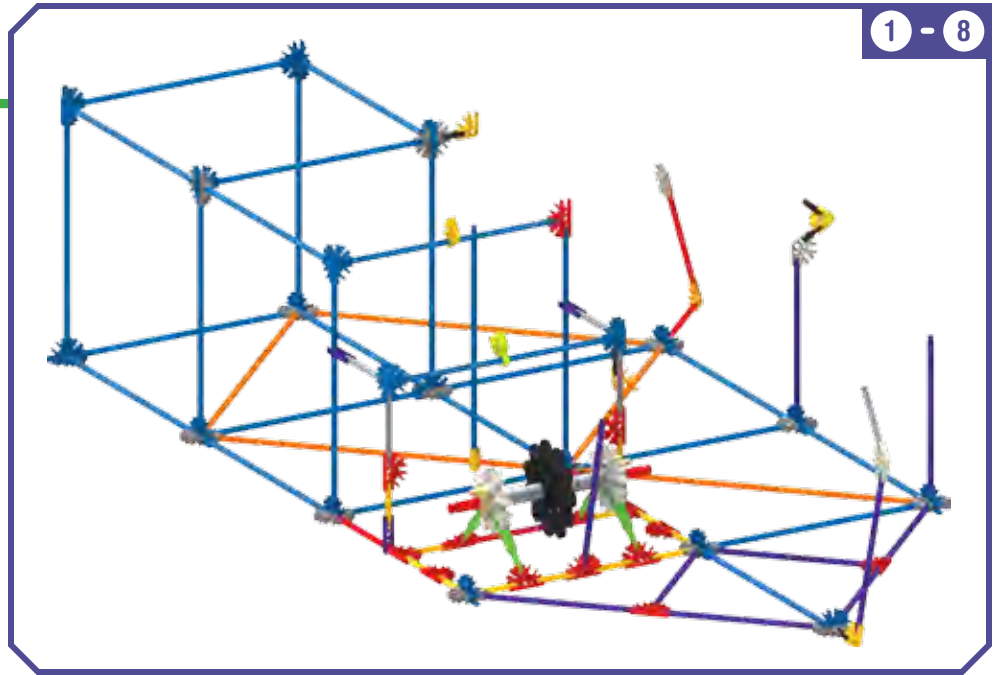



8

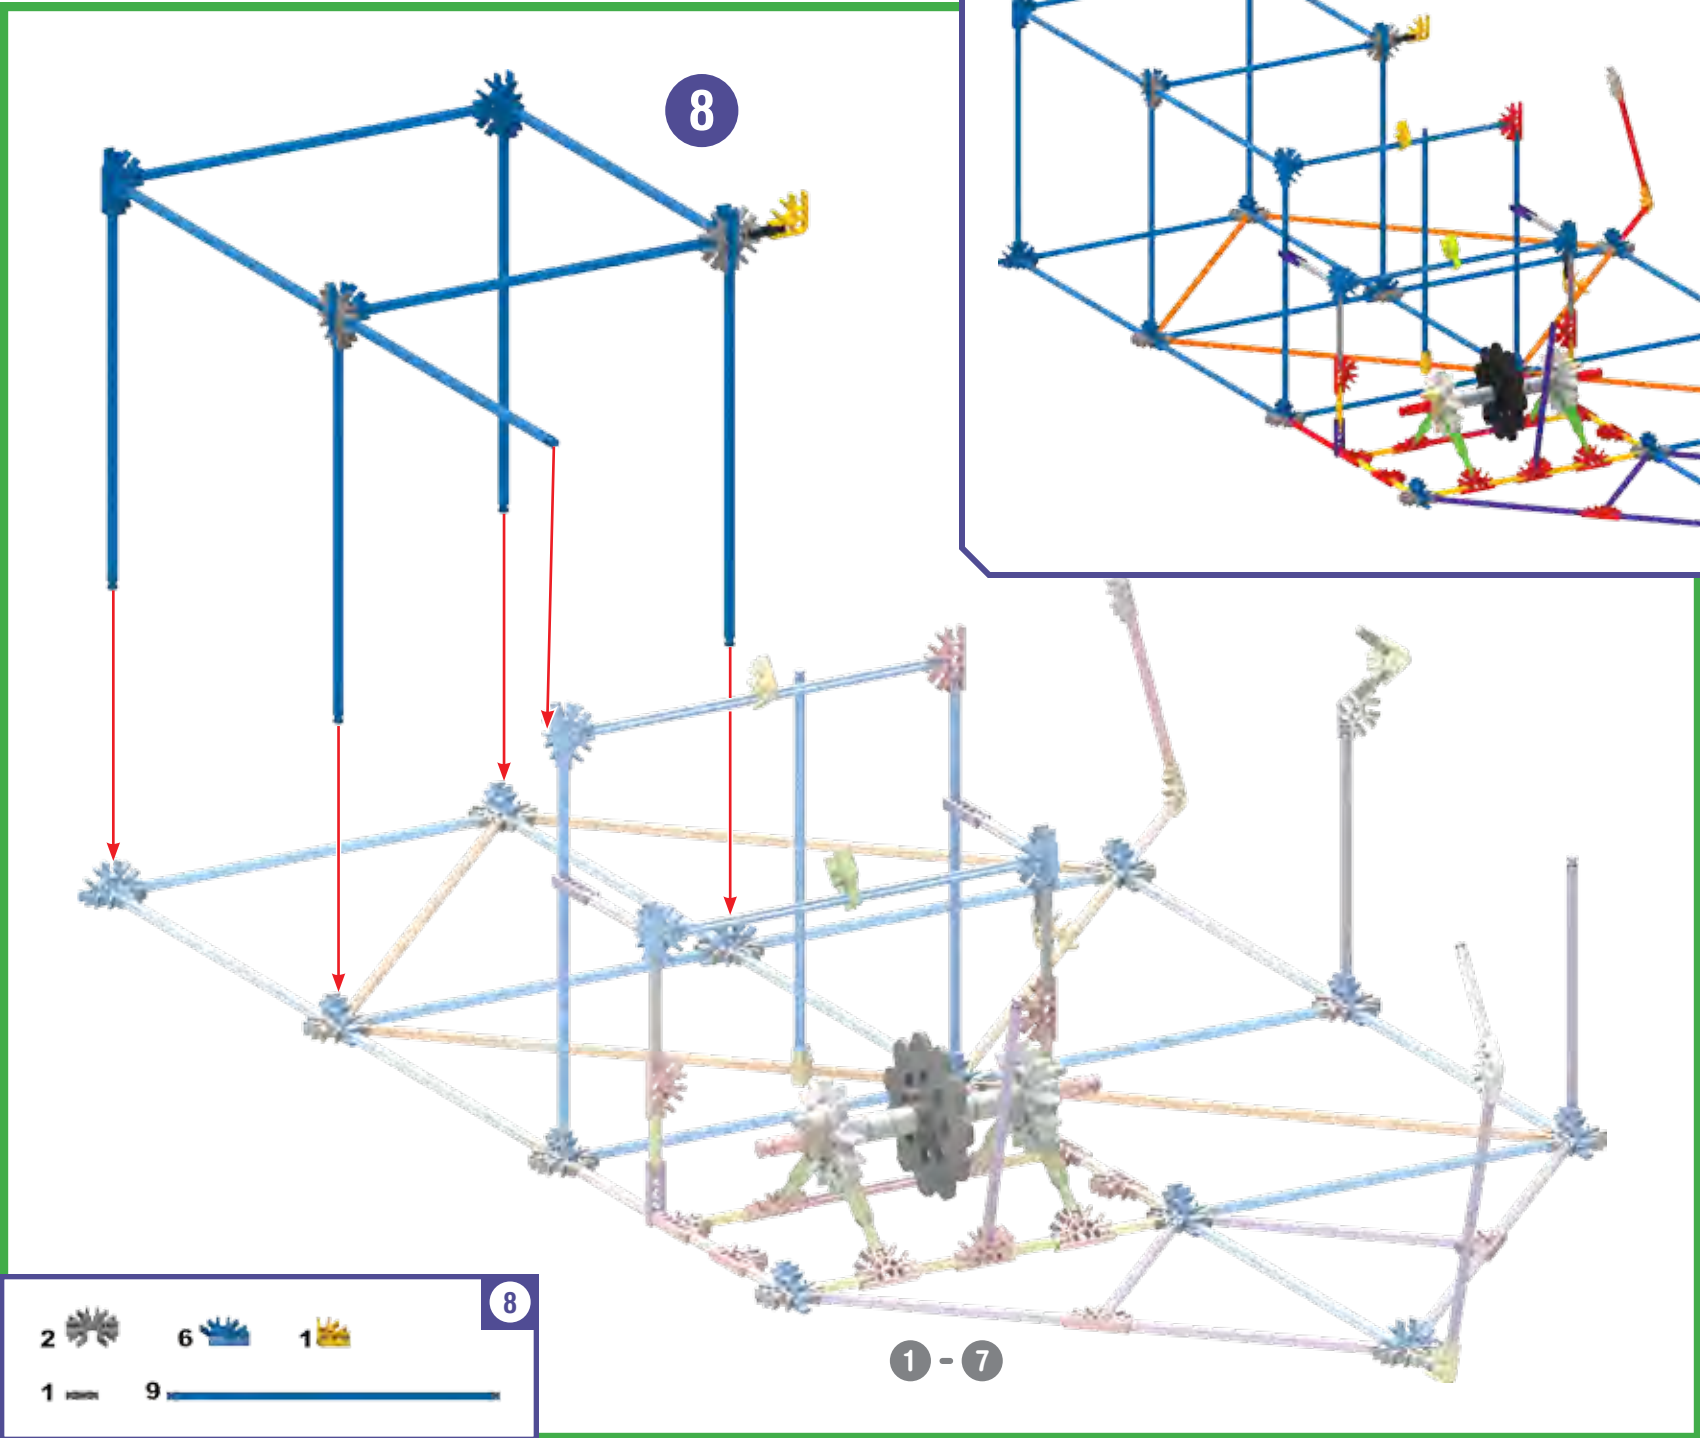

1 - 7

8

2		6		1	
1		9			

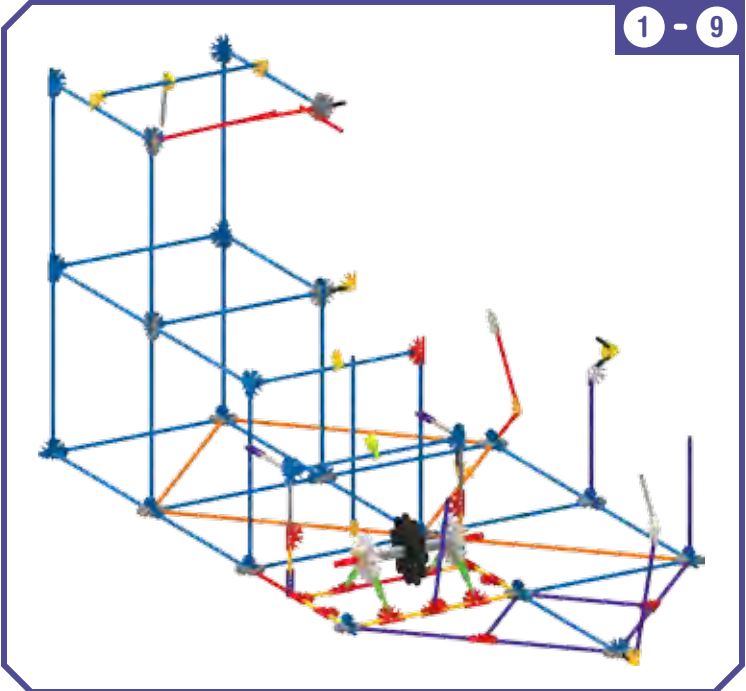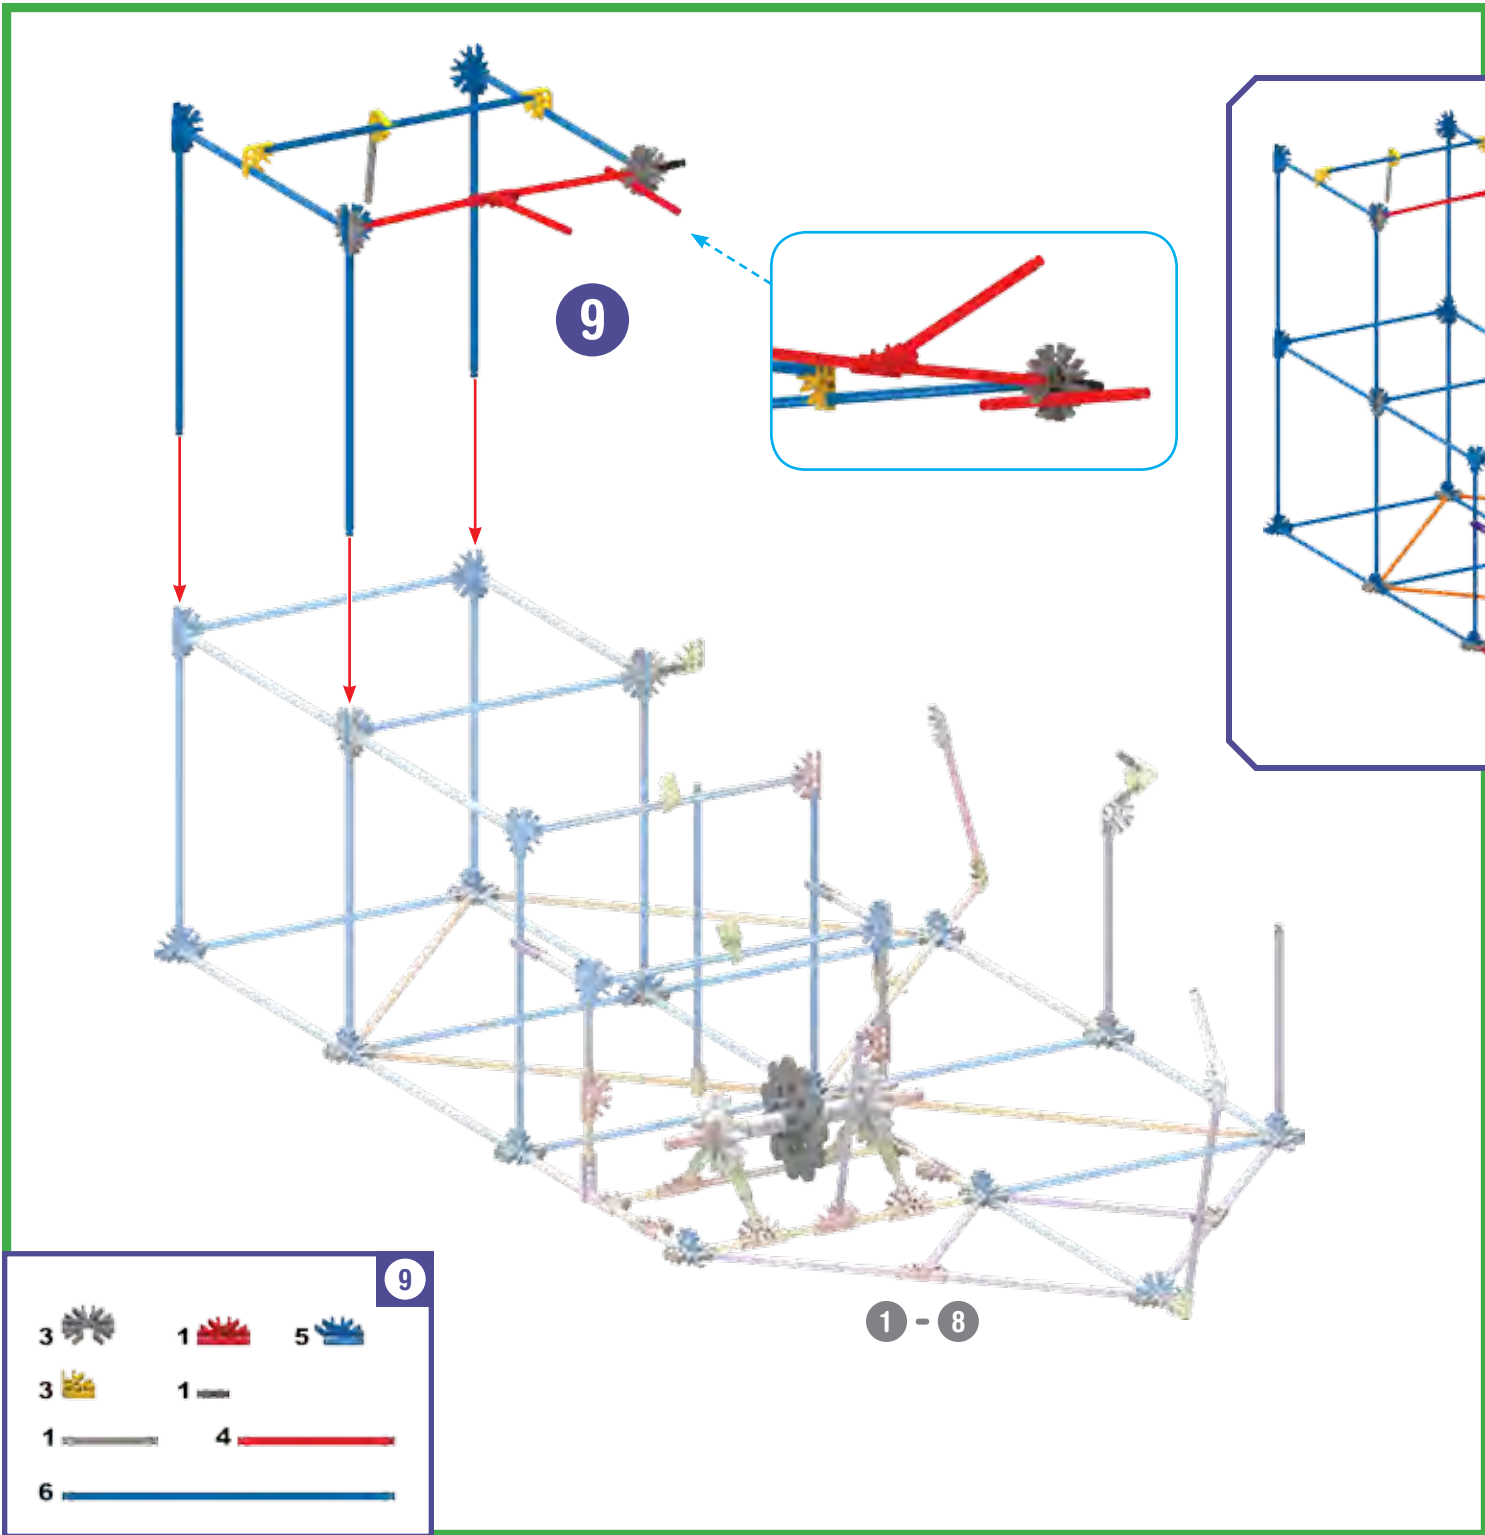



1 - 9

1 - 8

9

3		1		5	
3		1			
1		4			
6					




1 - 10

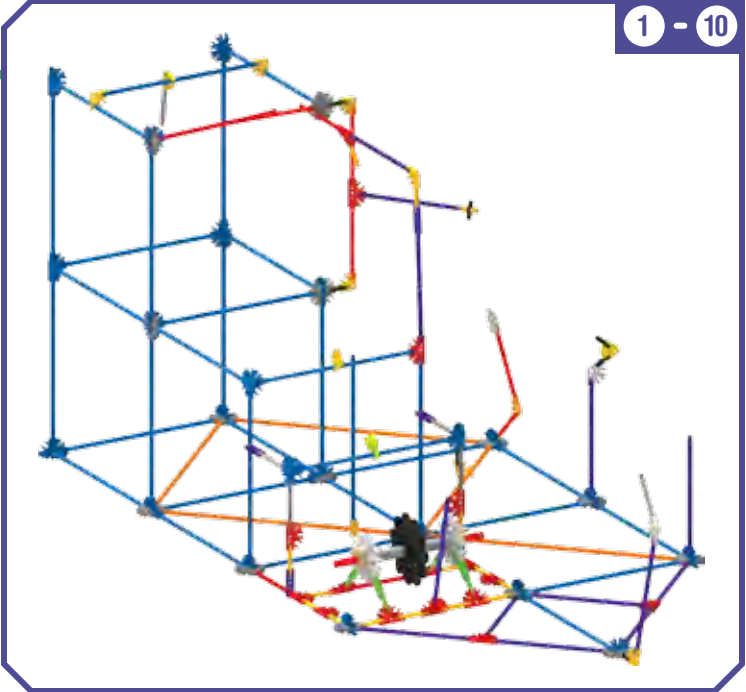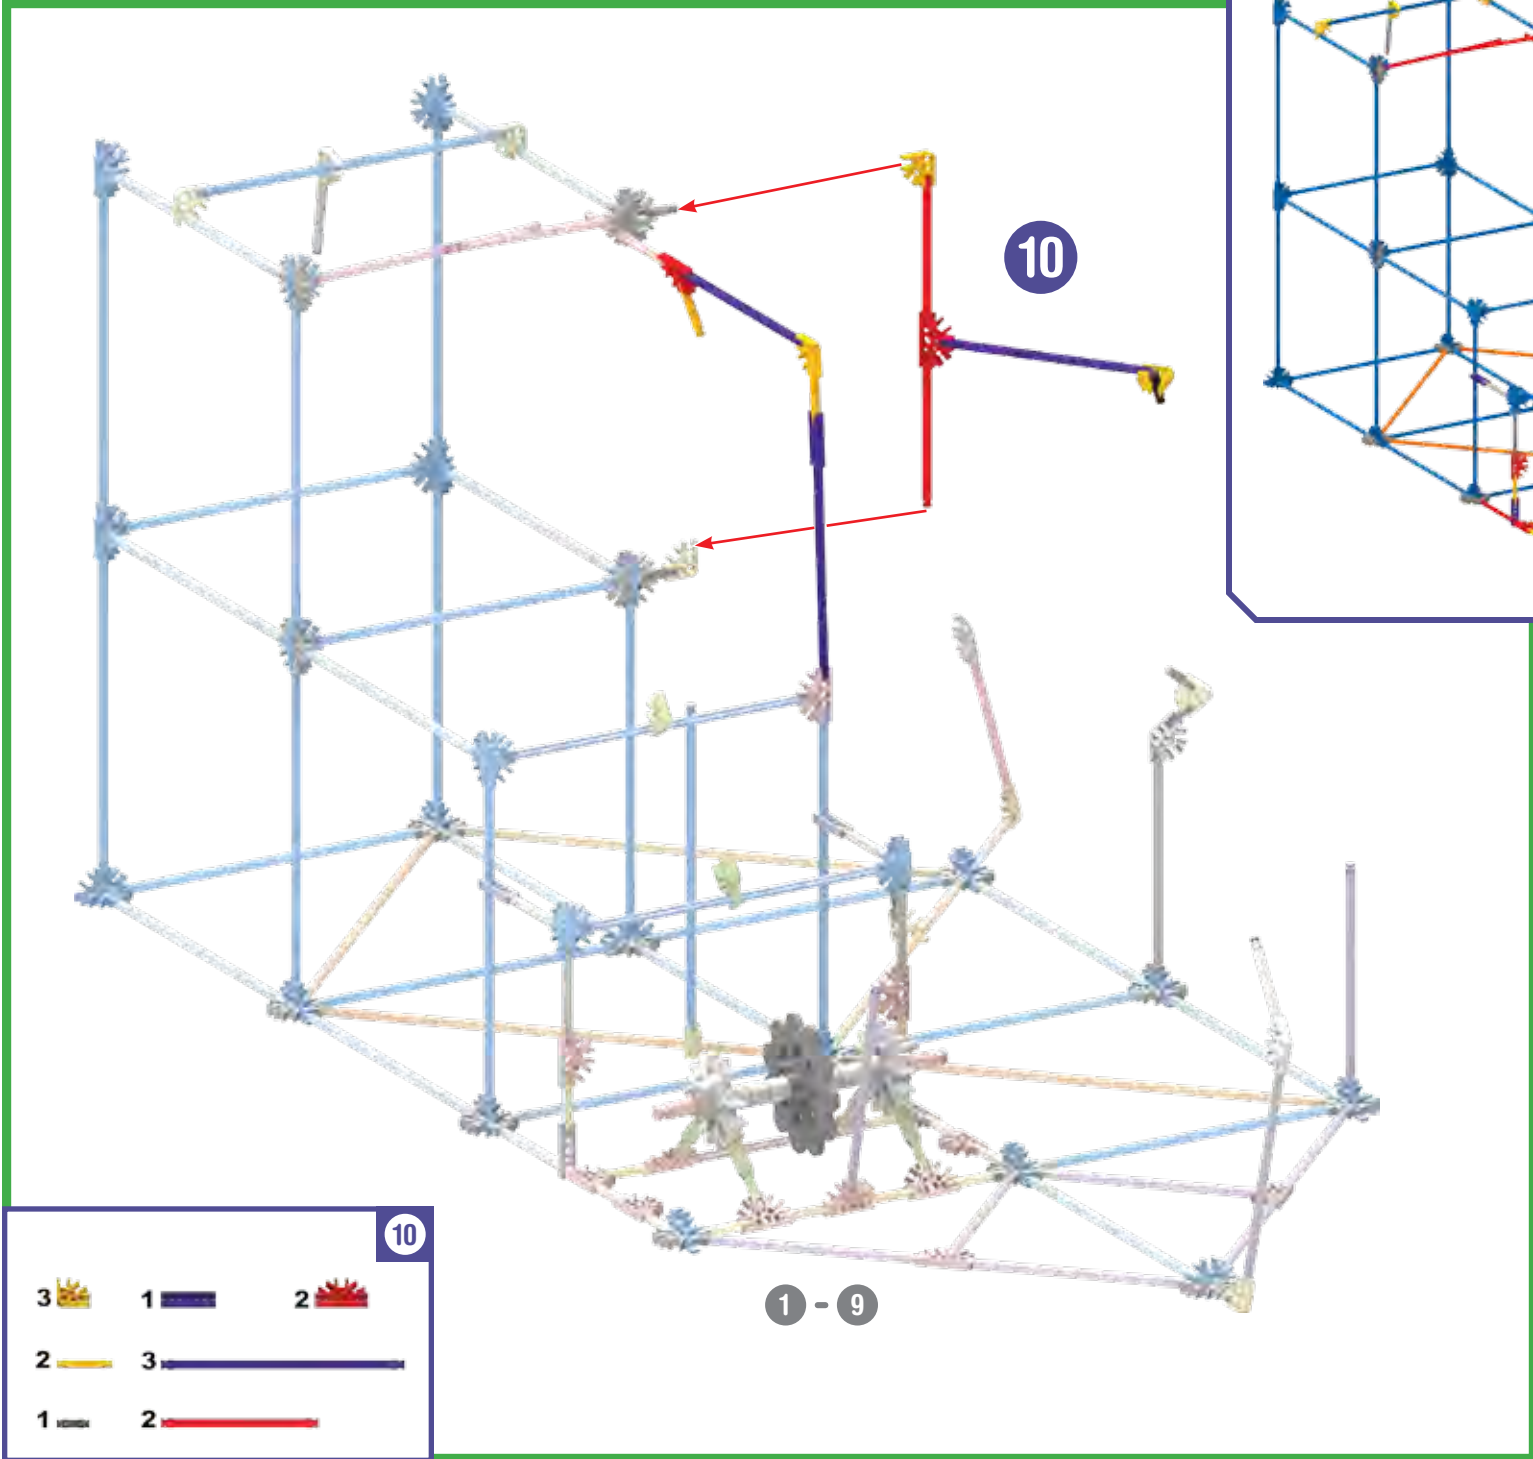

10


3	1	2
2	3	
1	2	

1 - 9

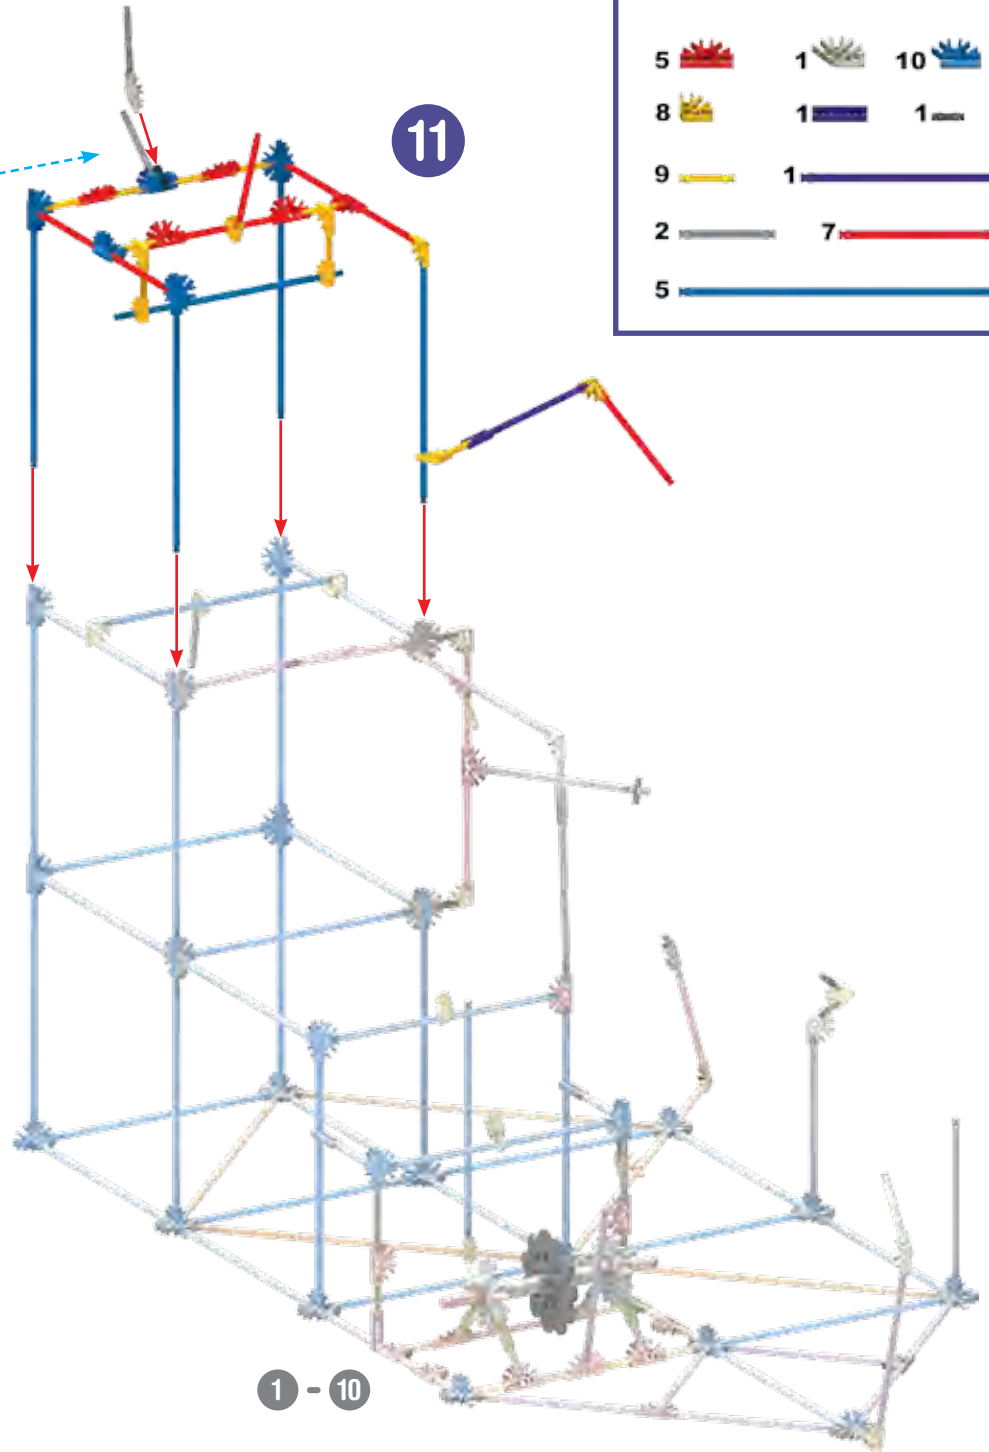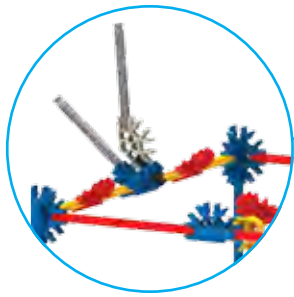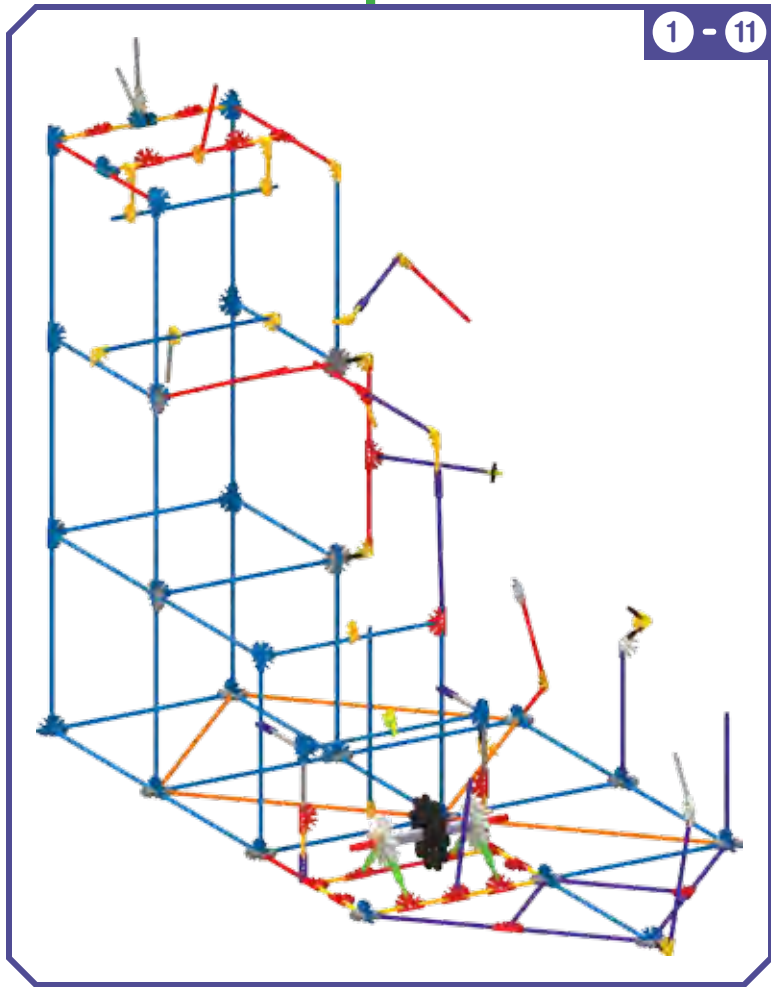


5		1		10	
8		1		1	
9		1			
2		7			
5					

1 - 12

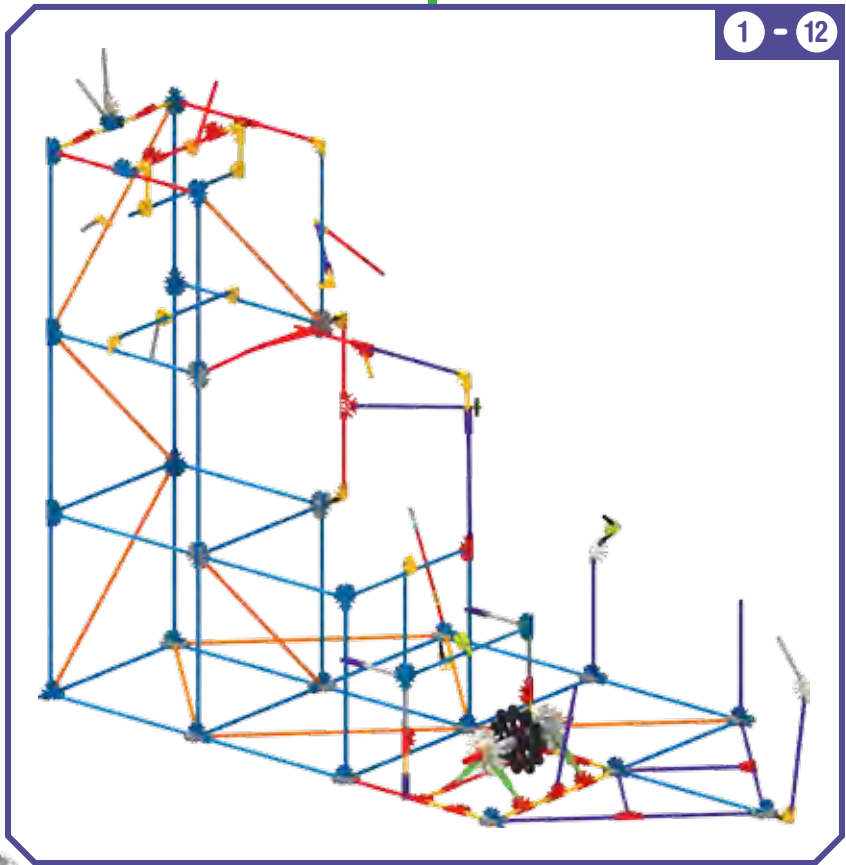

12


1 - 11

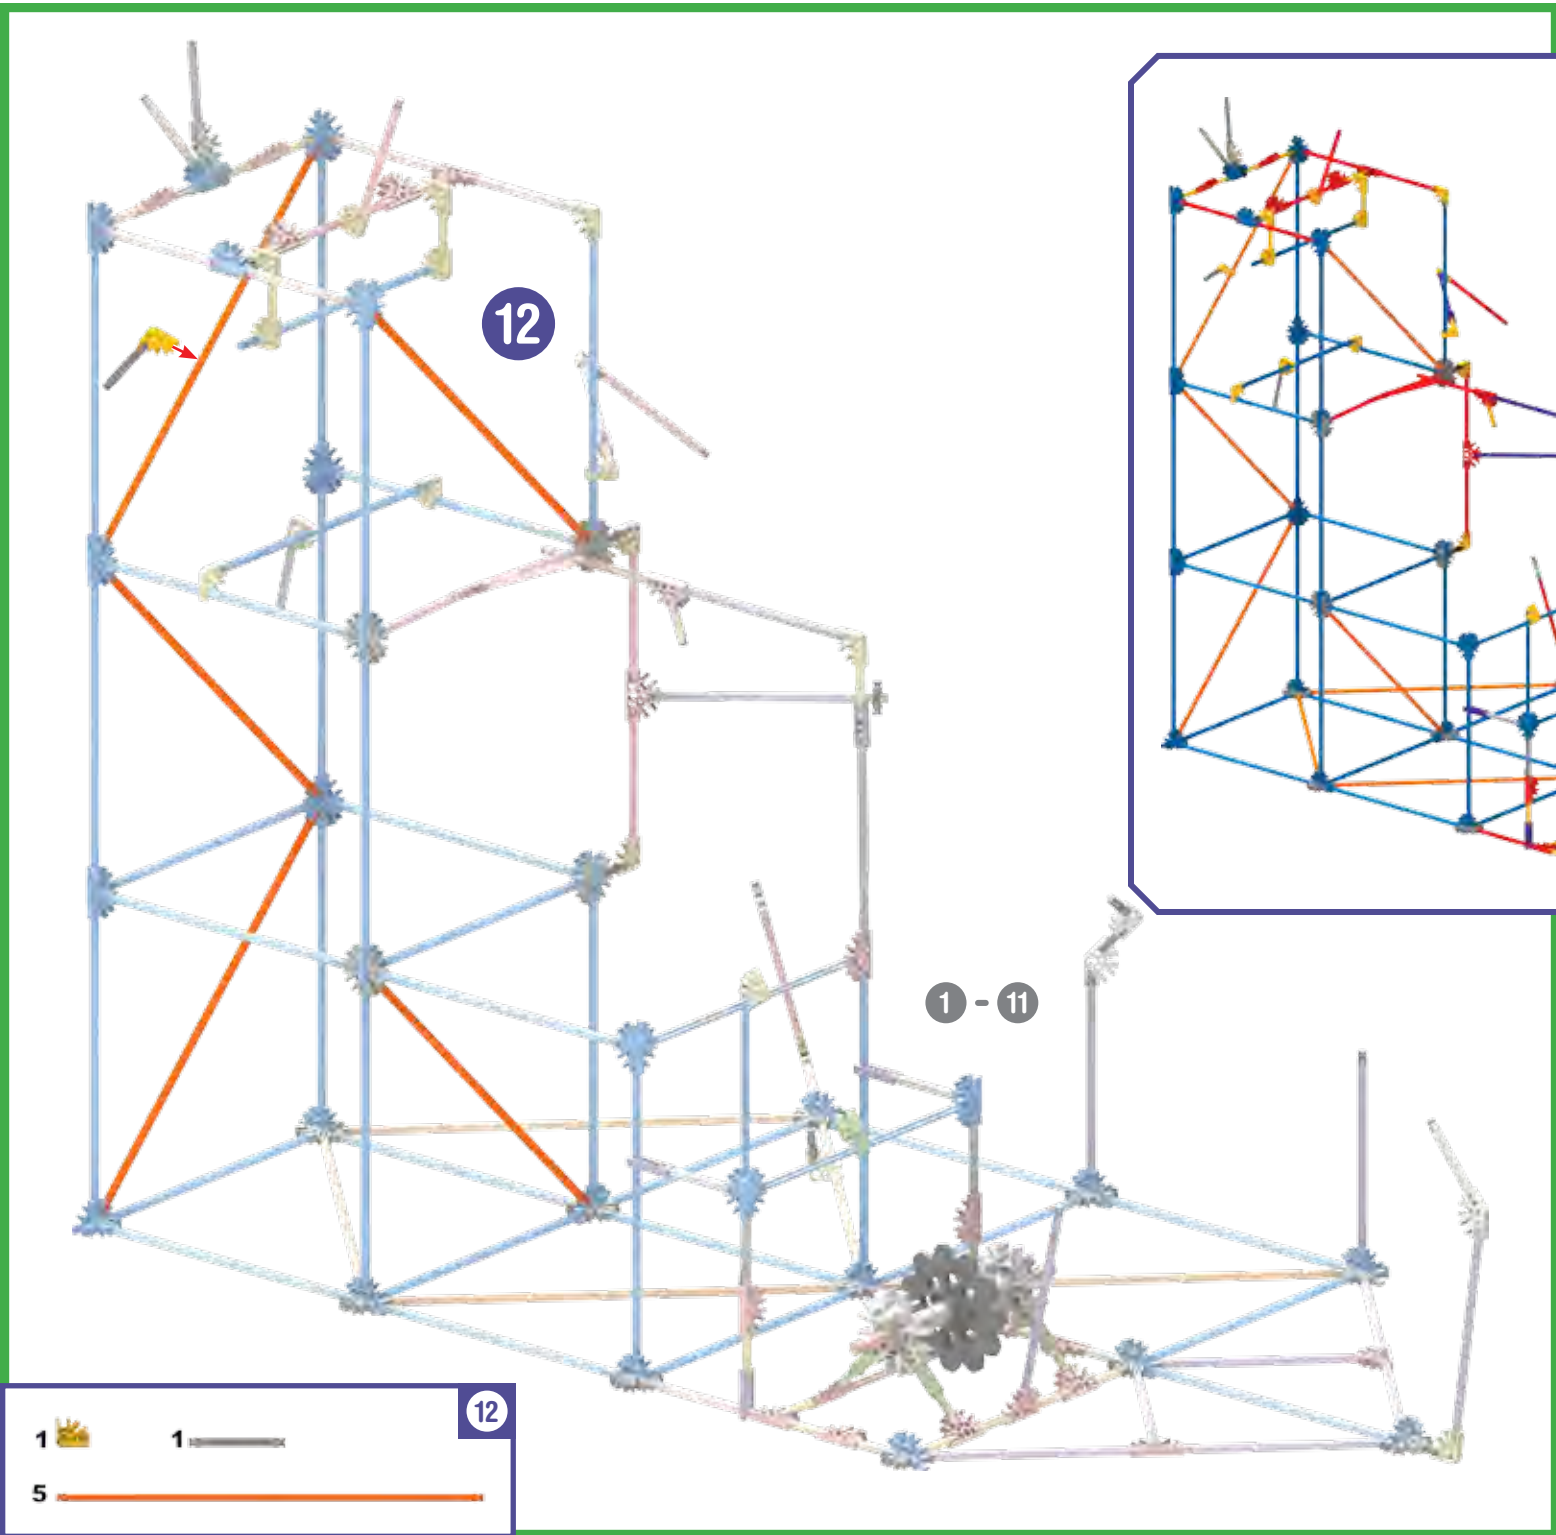

1  1 

5 

12

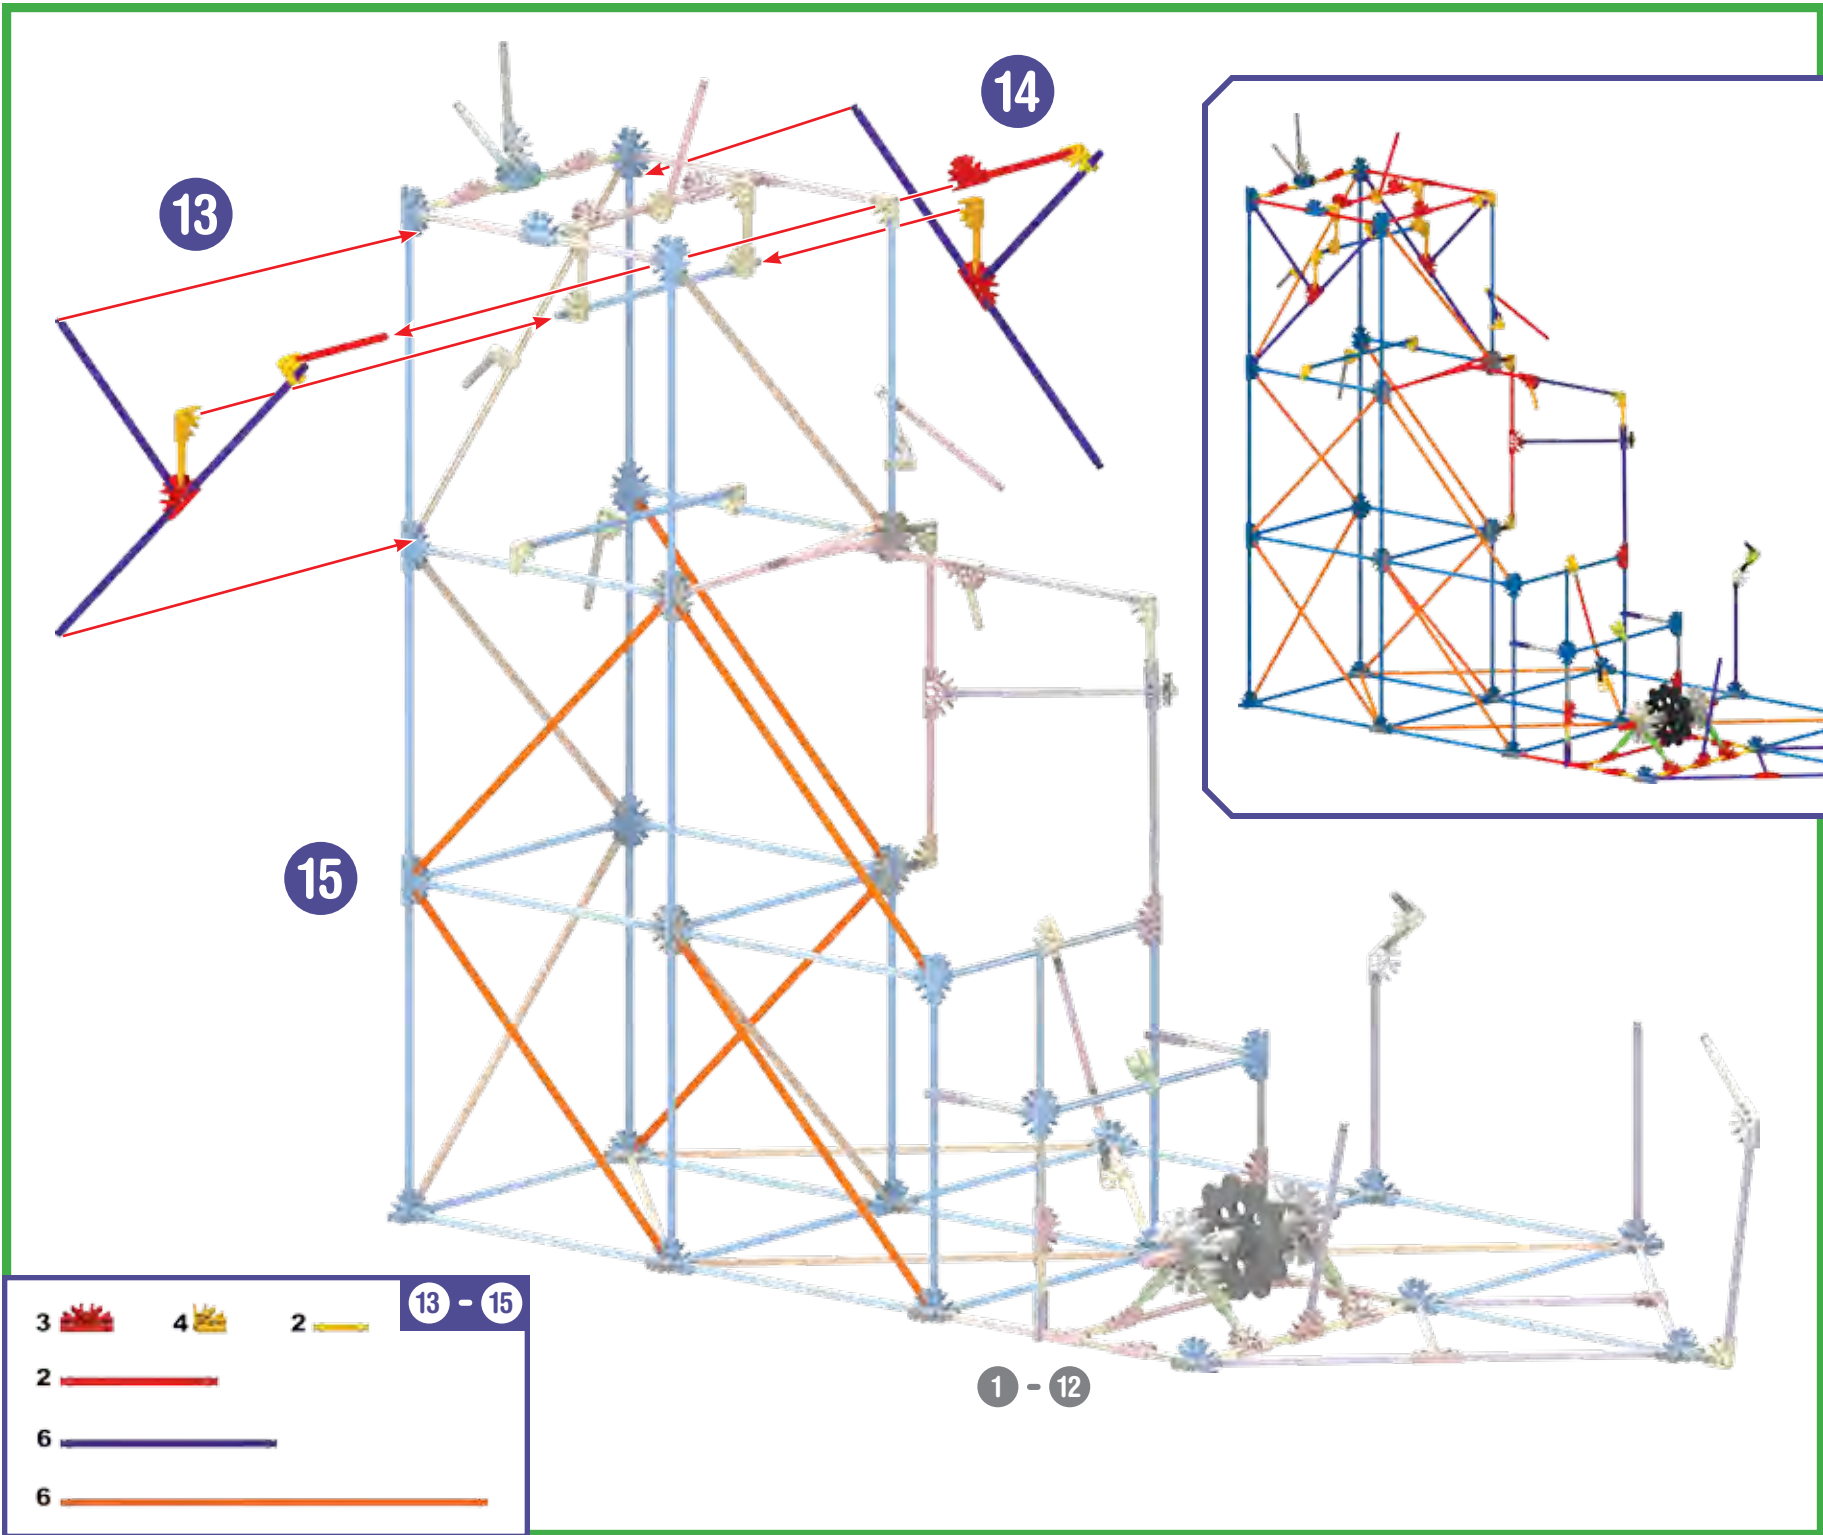

13







14


15

1 - 15





1 - 12


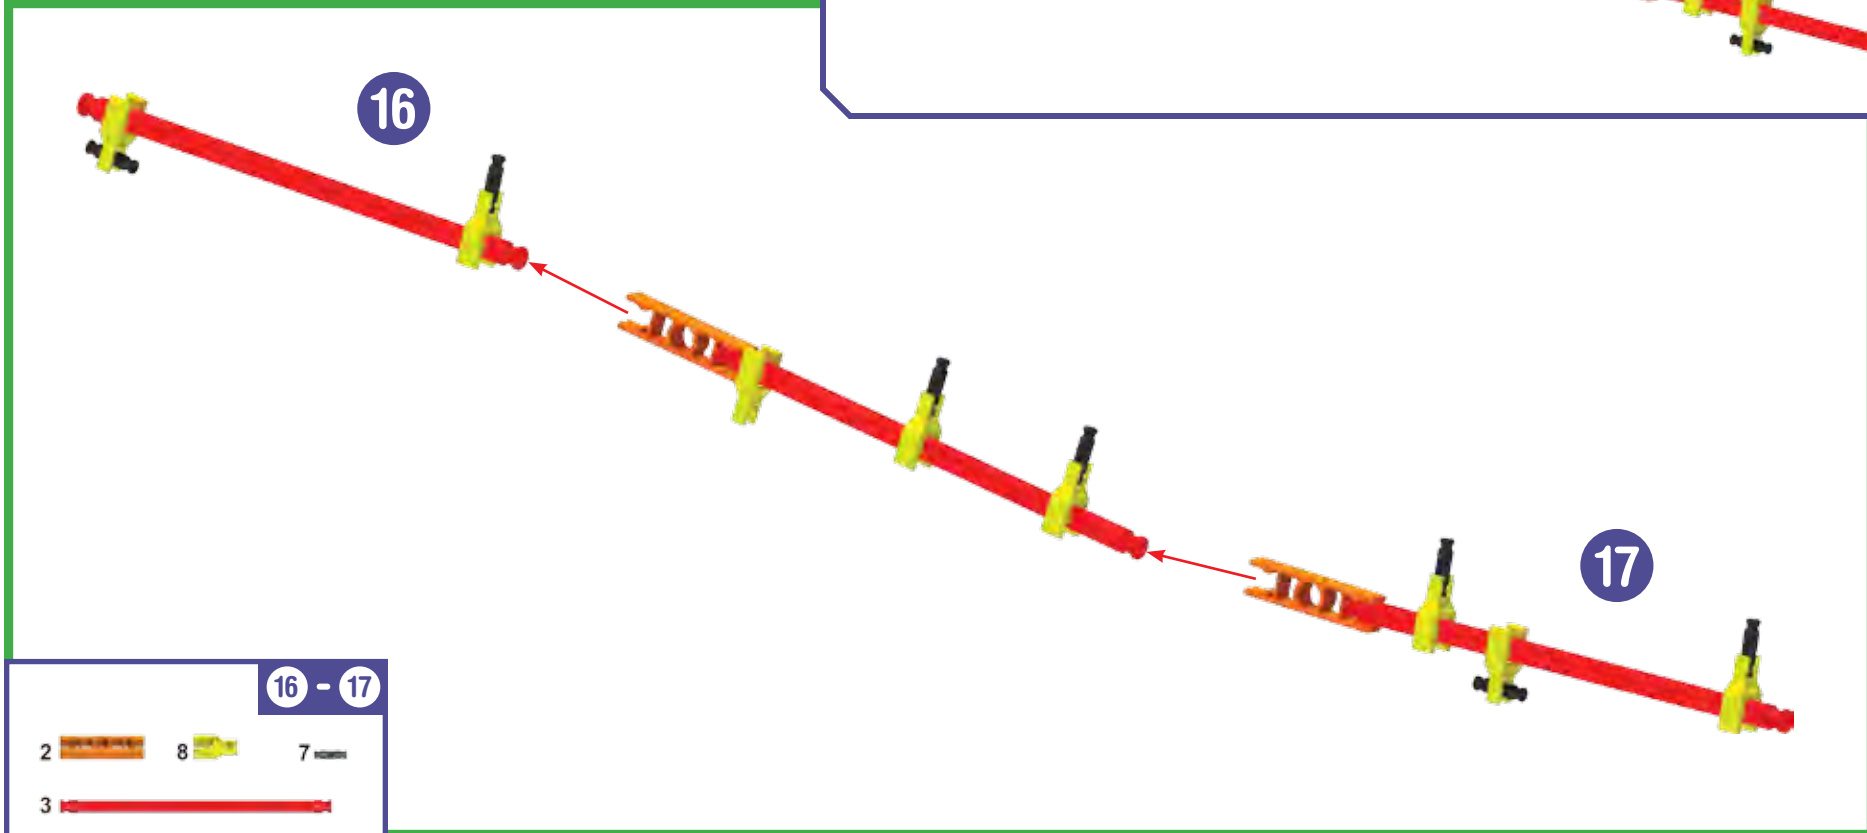
13 - 15

- 3  4  2 
- 2 
- 6 
- 6 






16 - 17


2		8		7	
3					

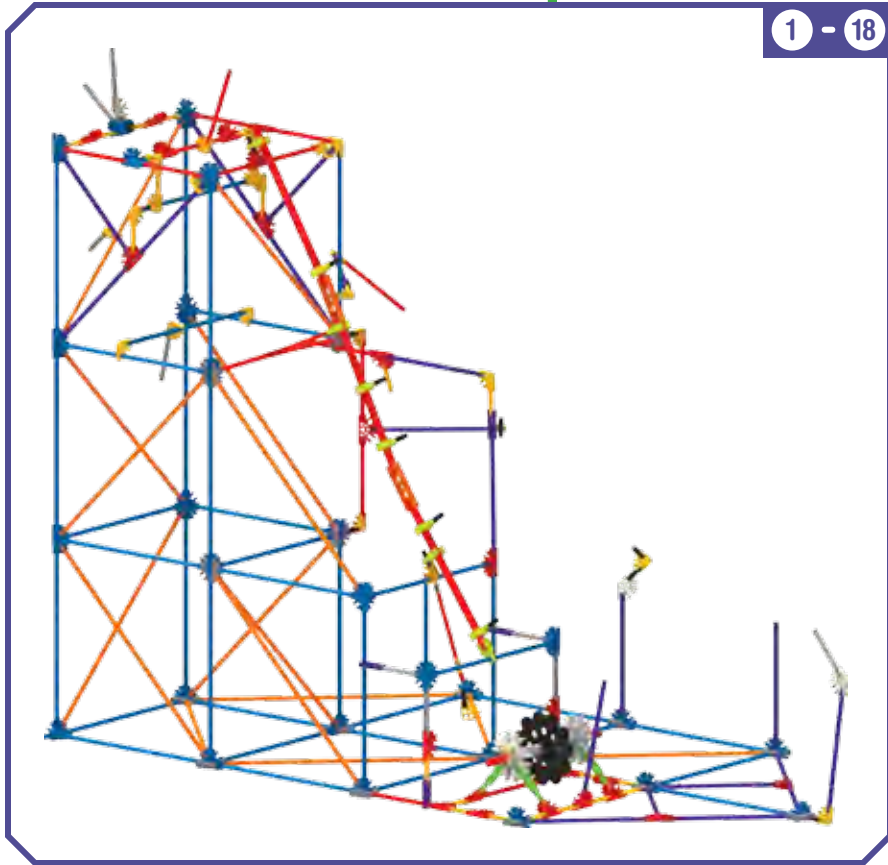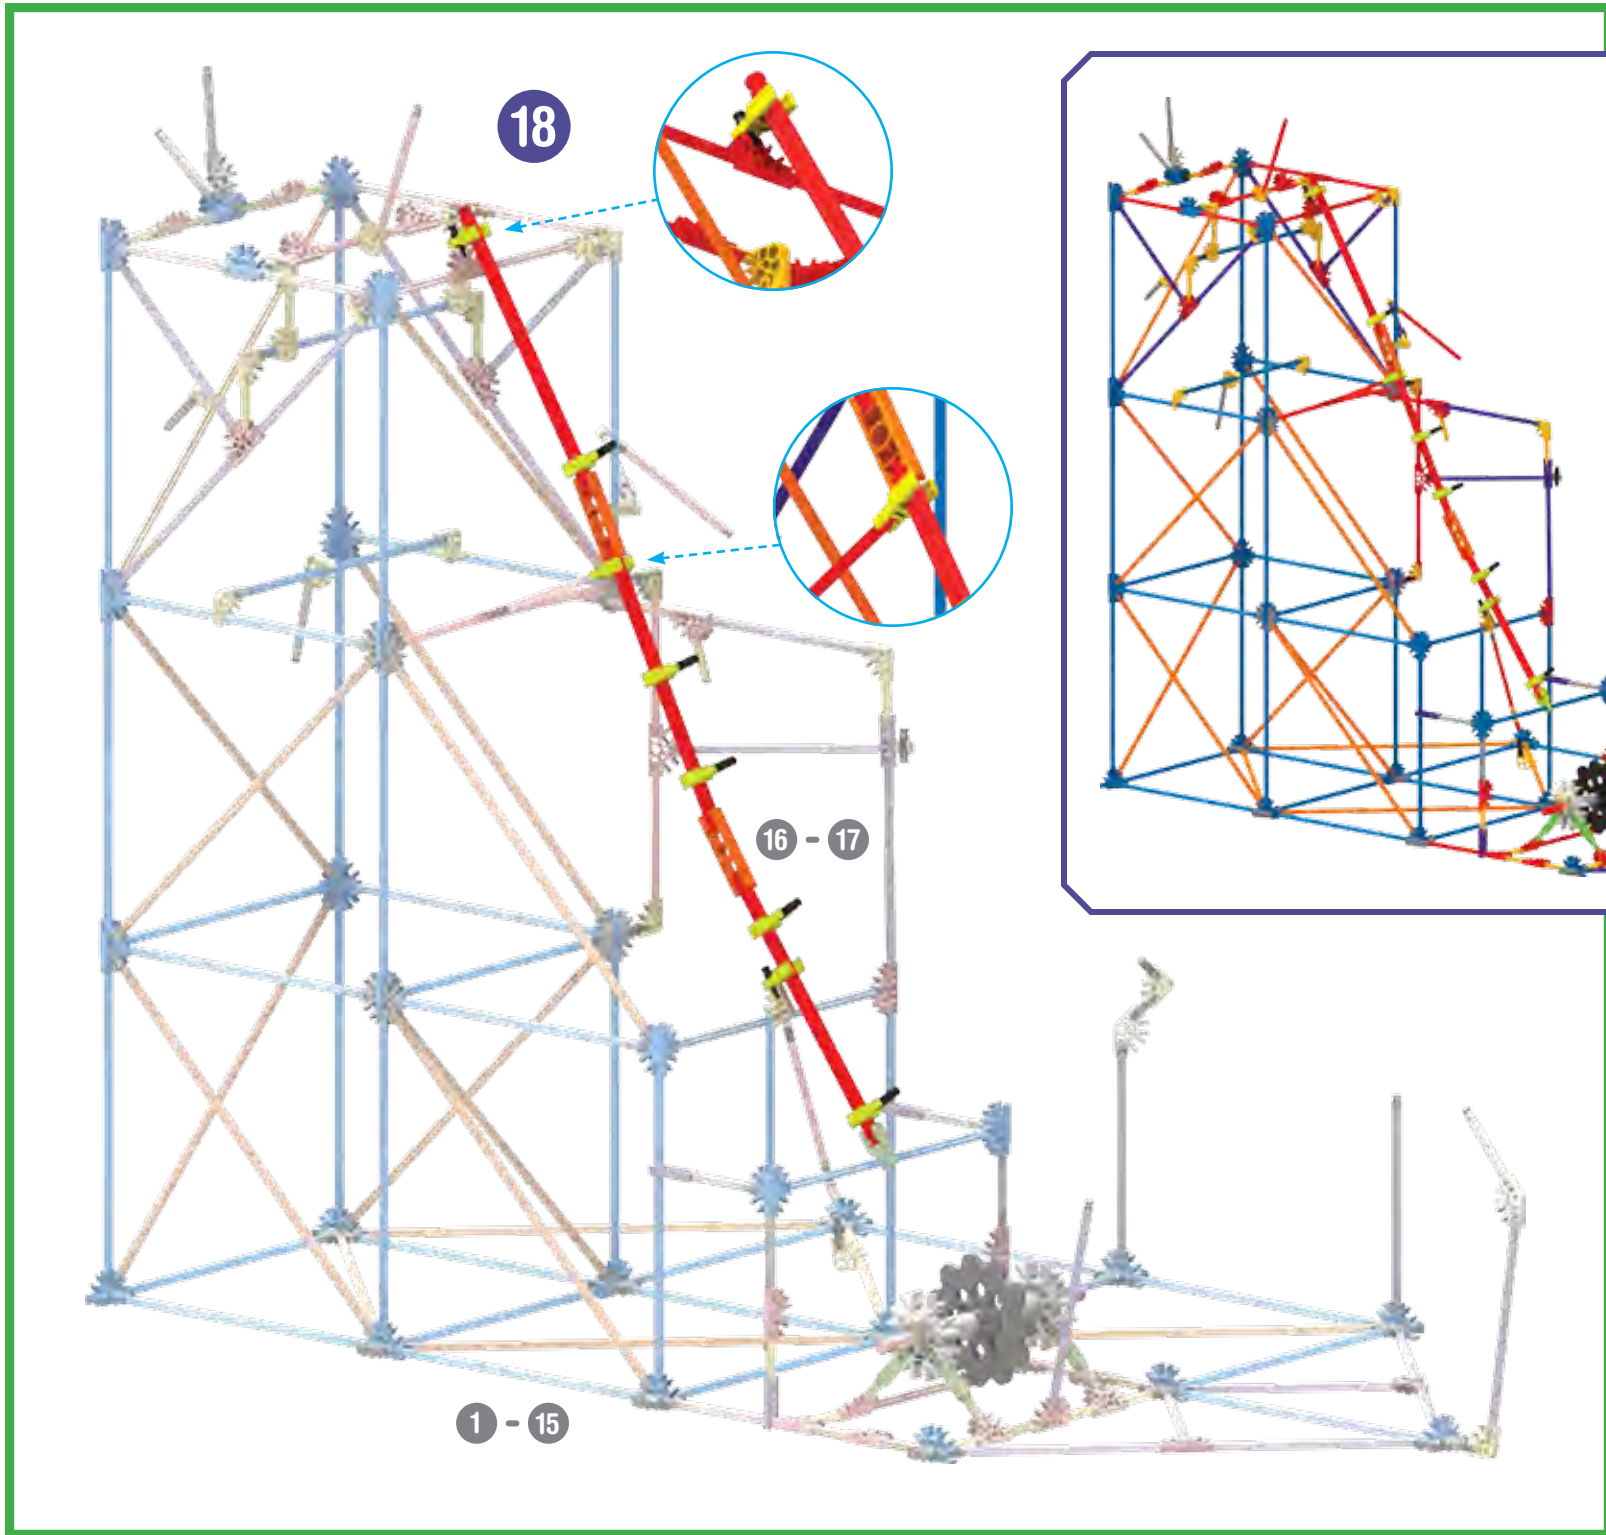

Did you install 2 AA (or LR6) batteries in the motor?

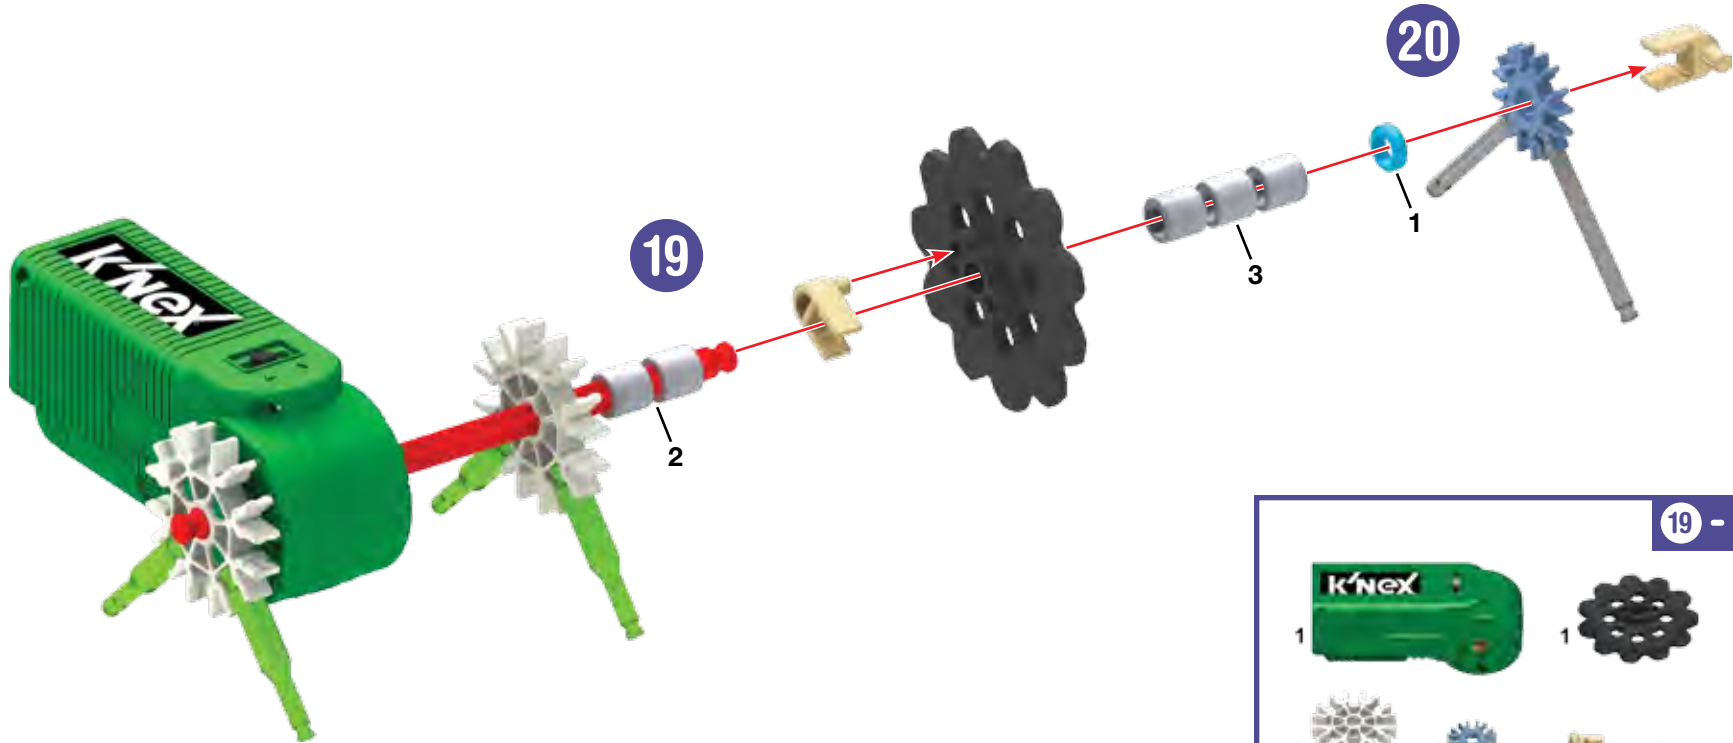




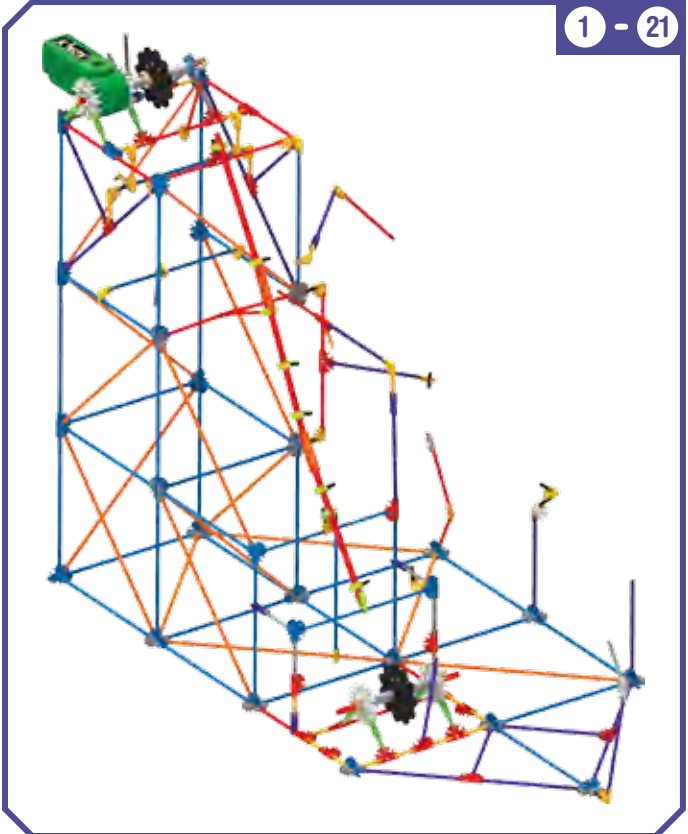
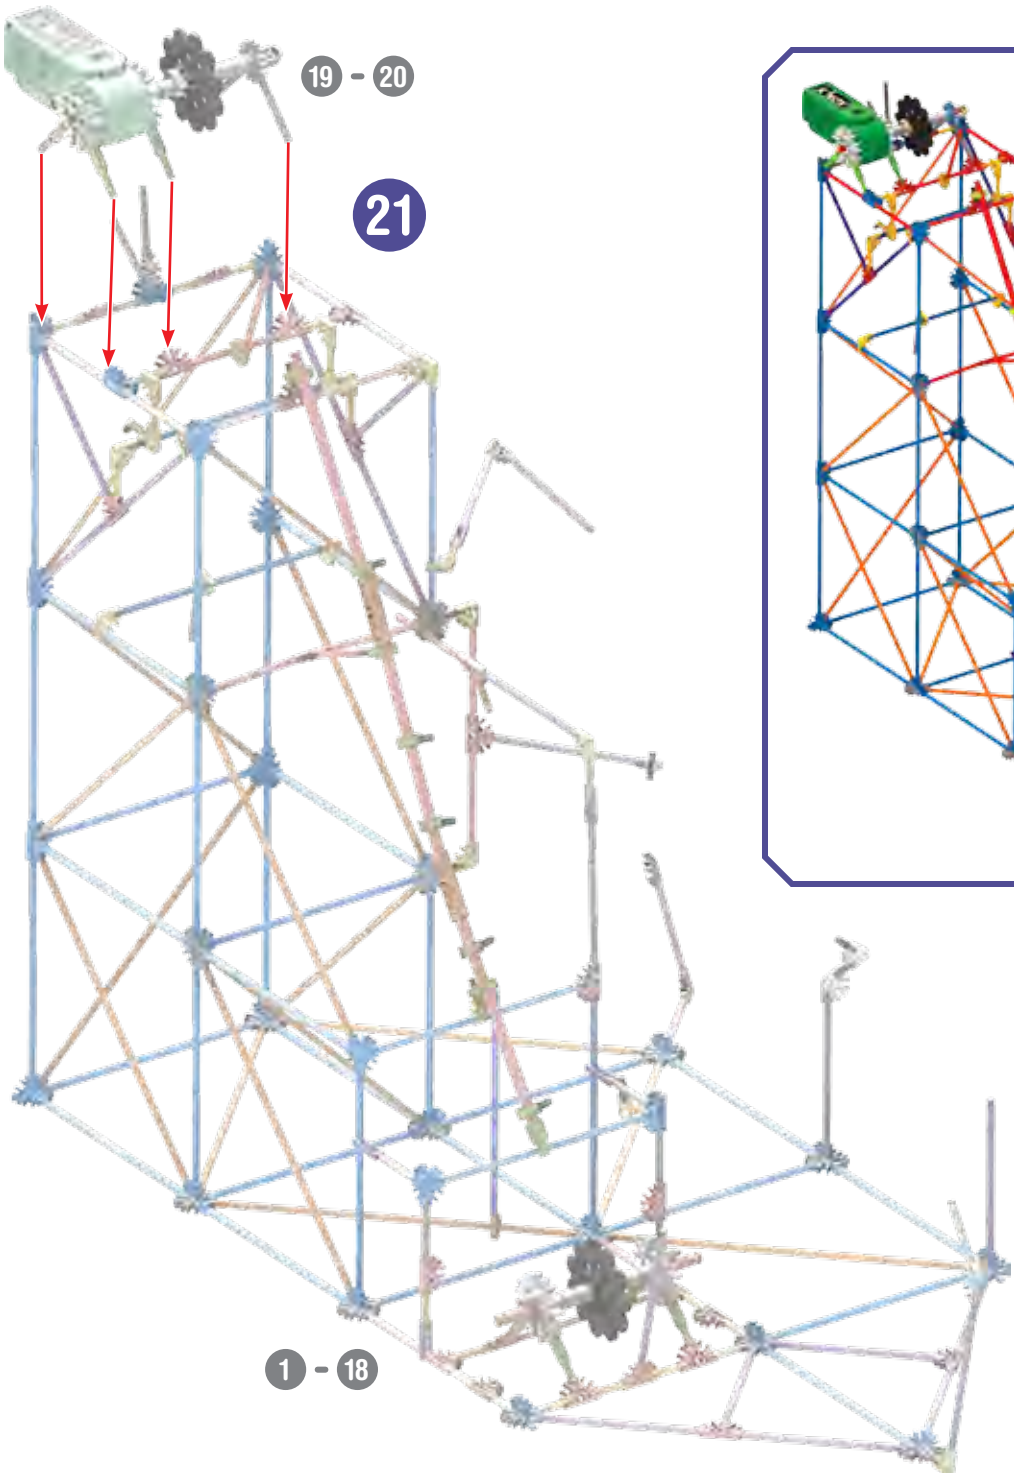



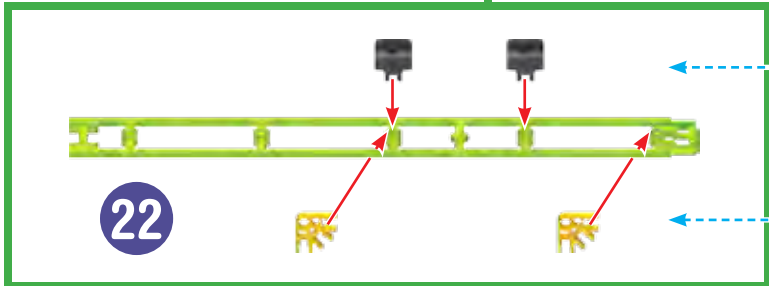





Attach the black chain guides to the top of the track and attach the connectors to the bottom of the track exactly as shown.



Be sure to push the connectors on firmly until they “click”.



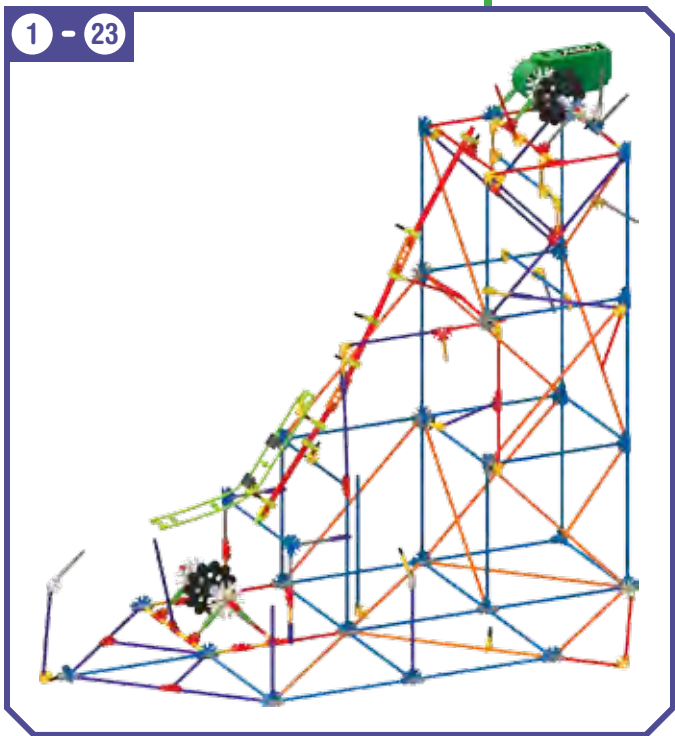


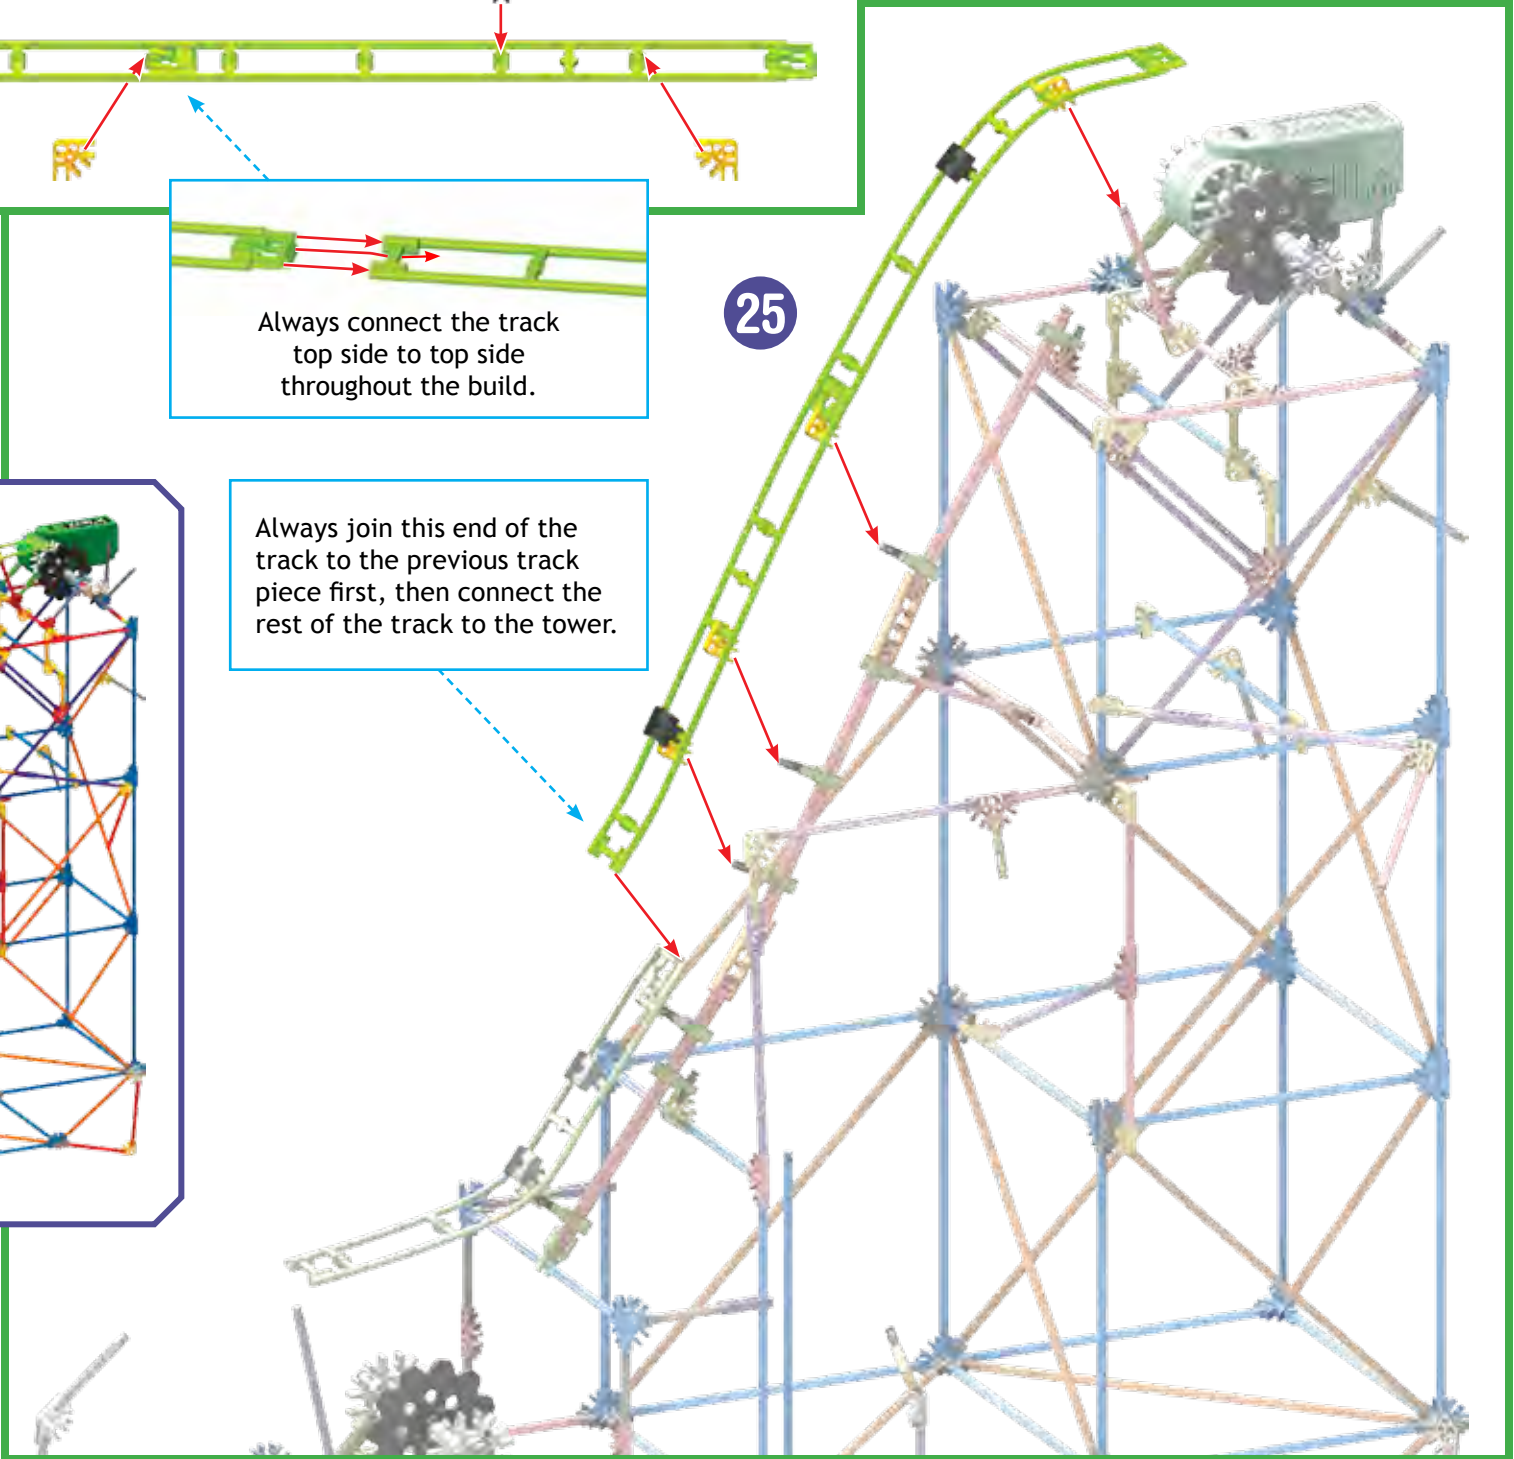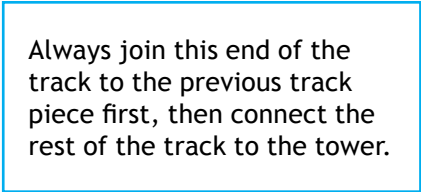
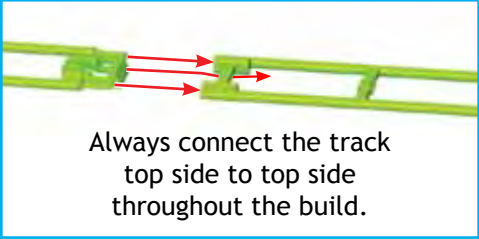
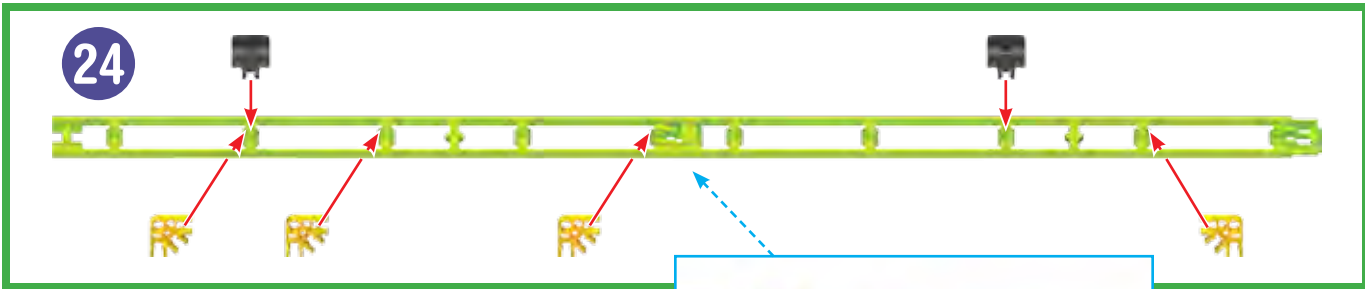



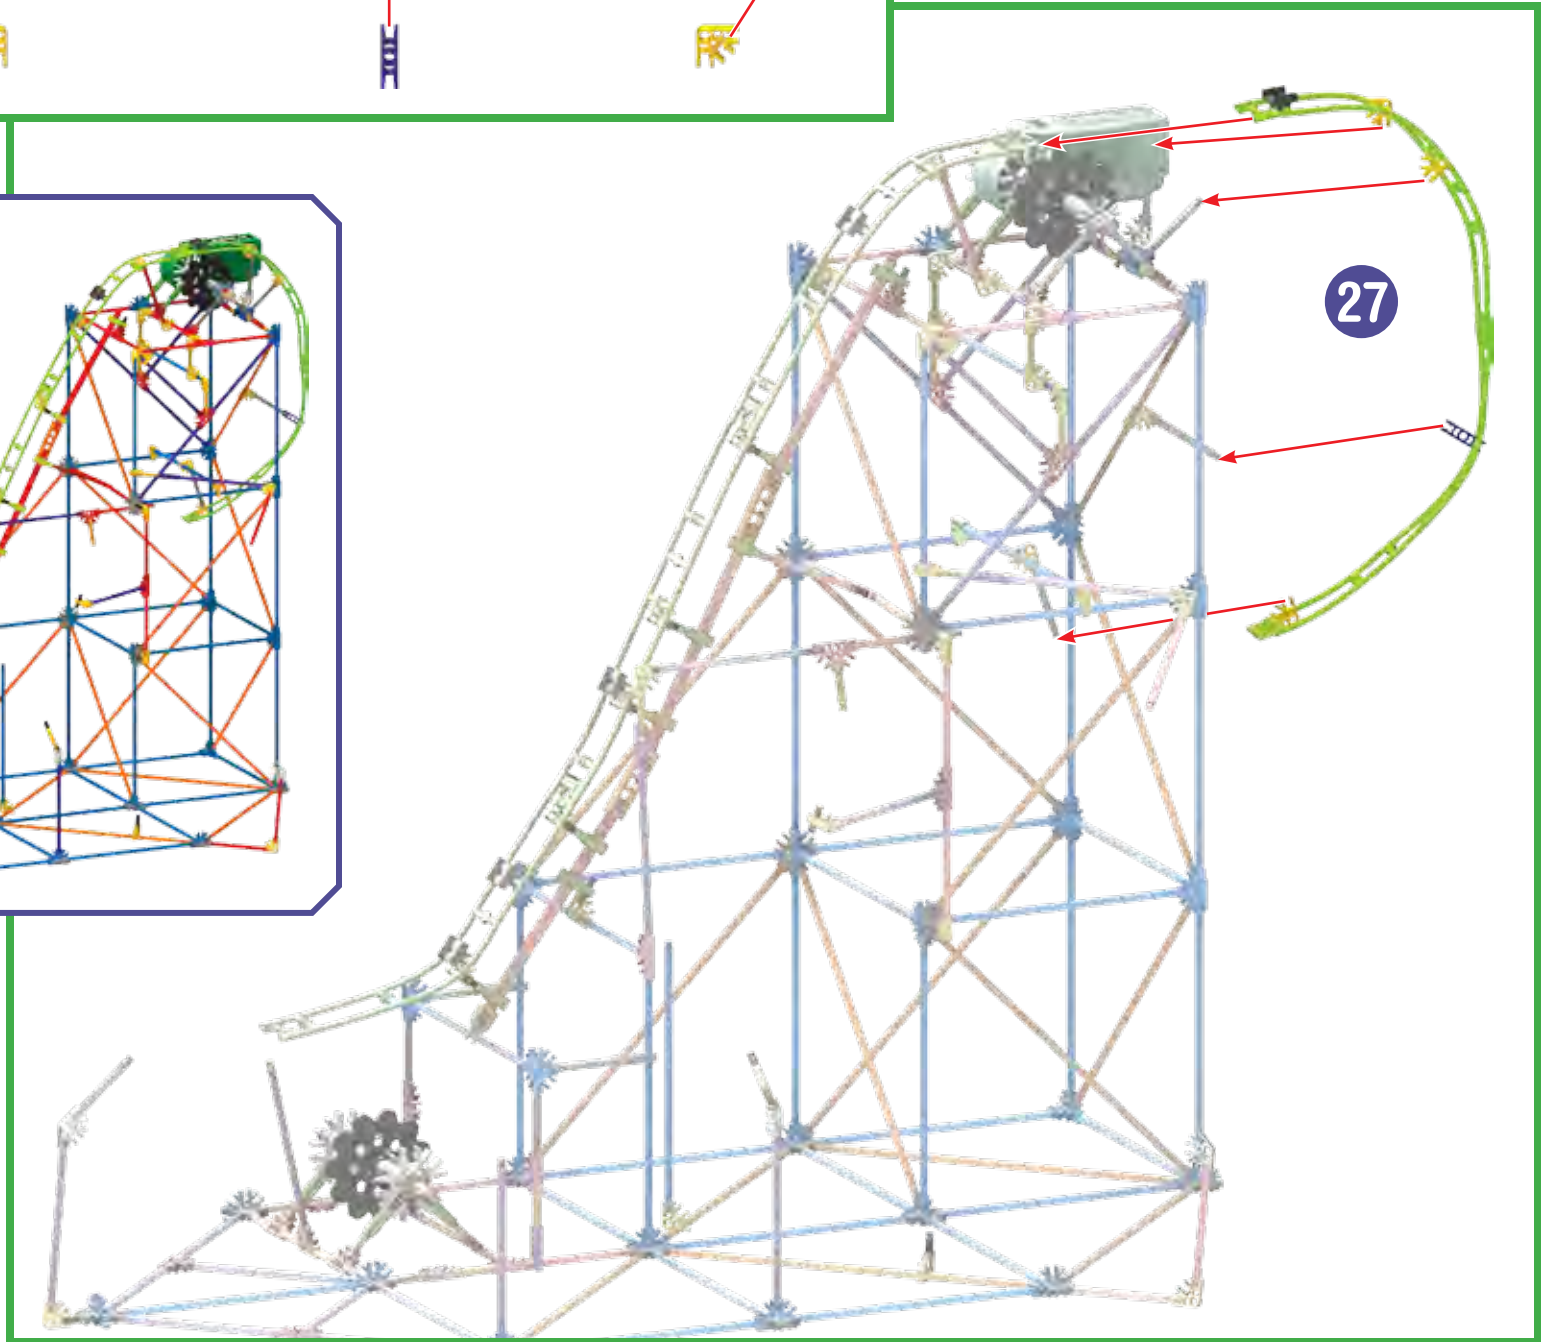
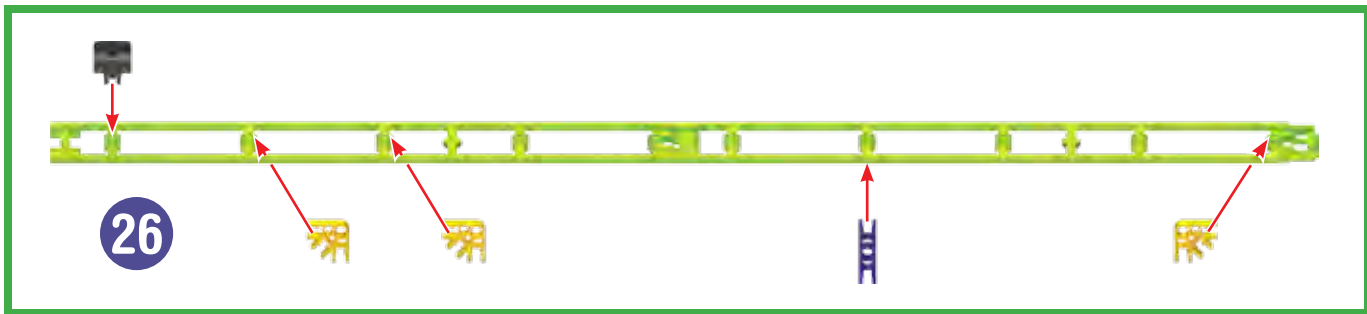


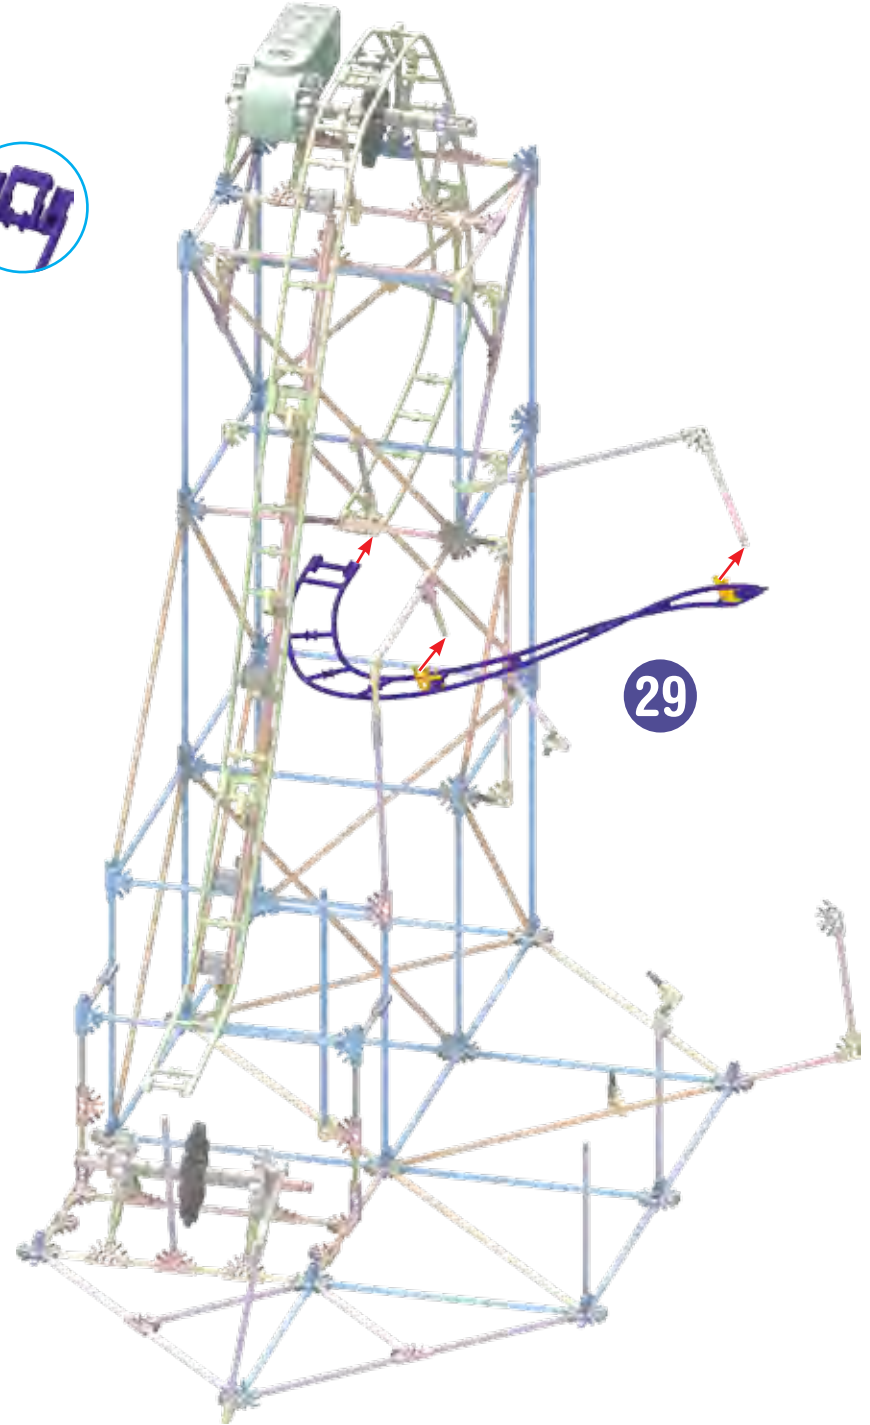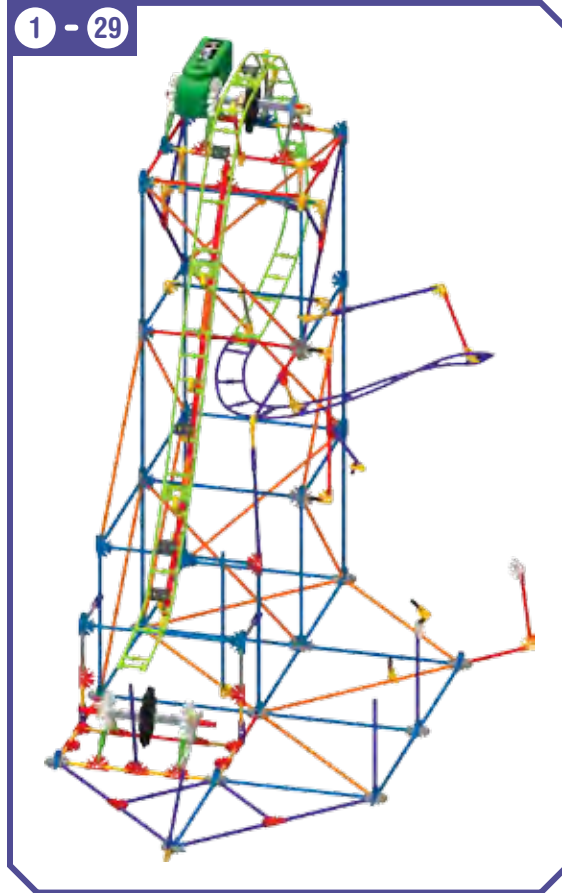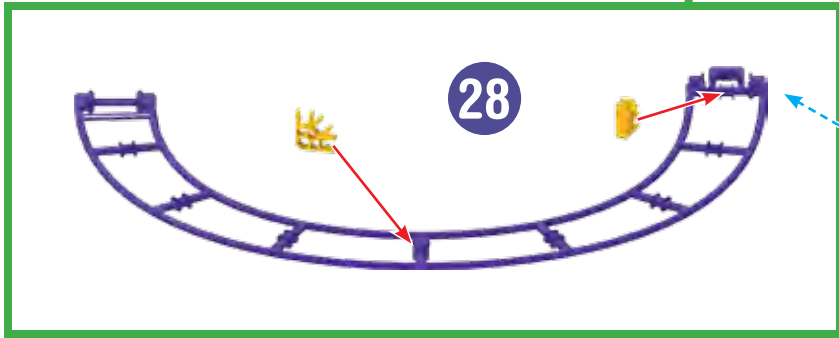



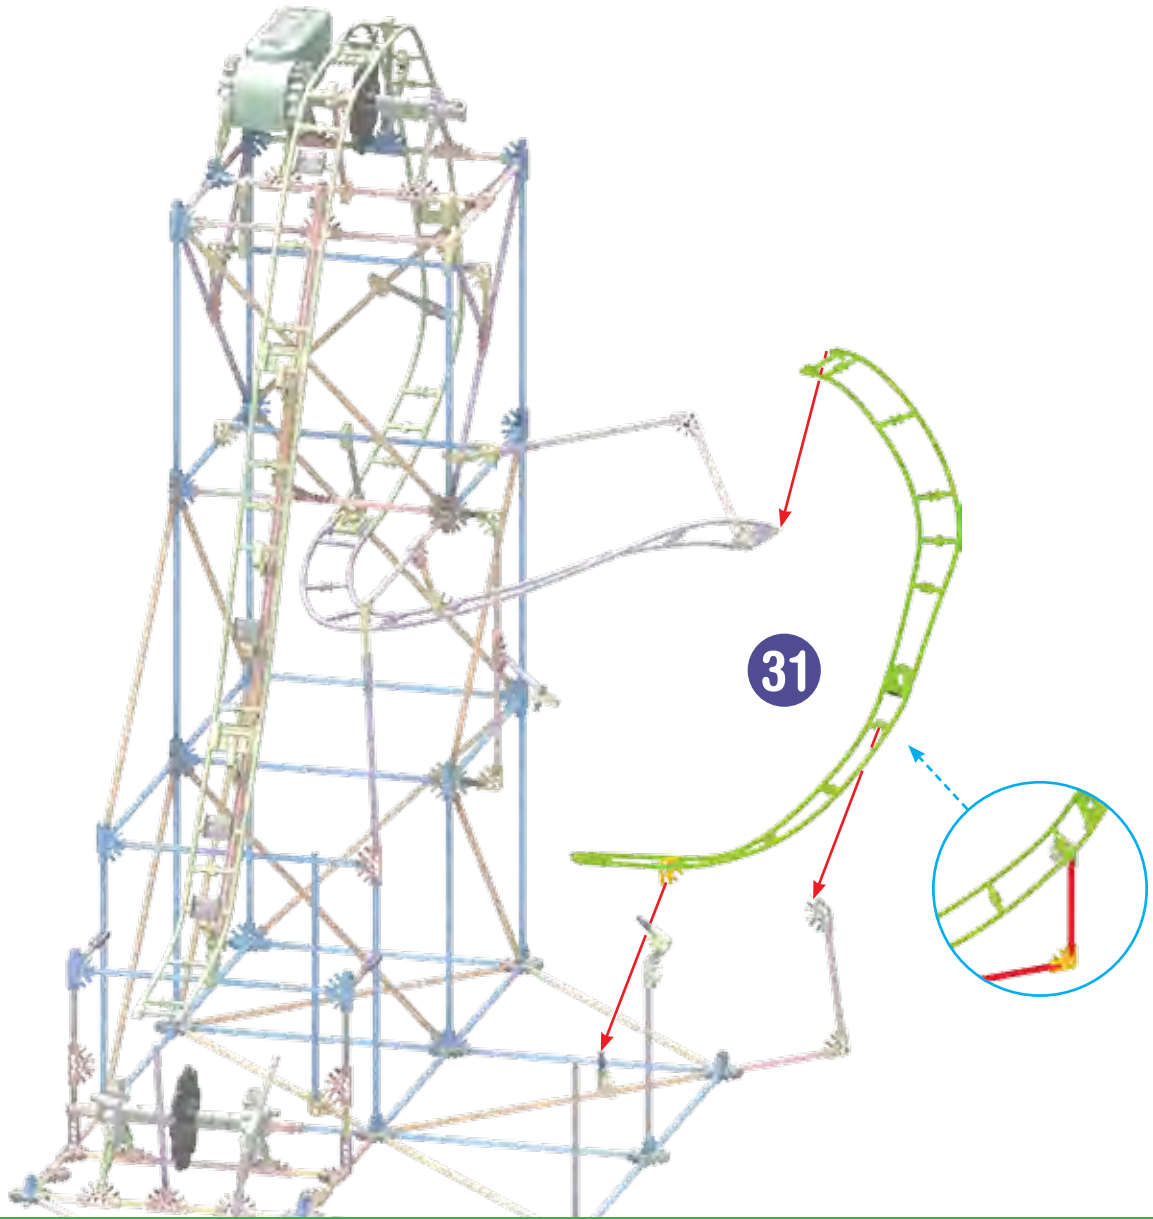
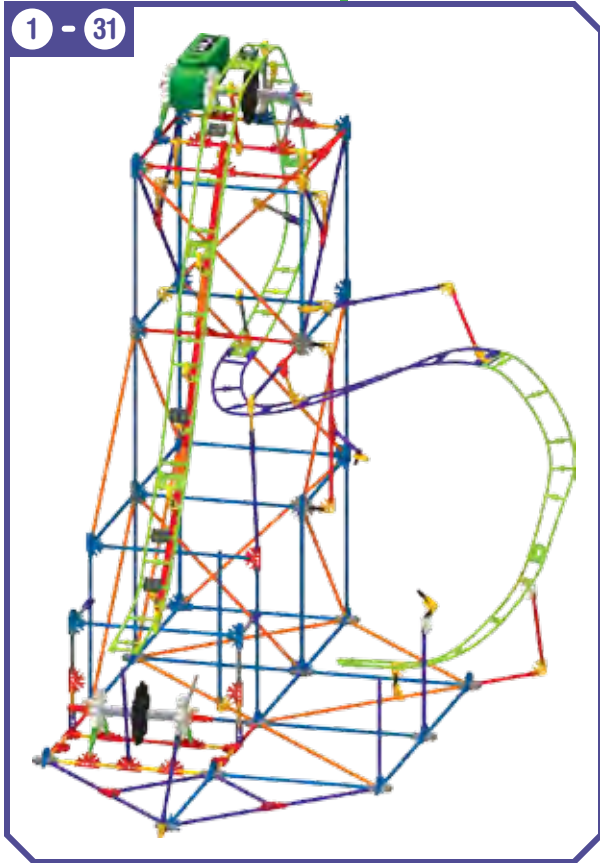


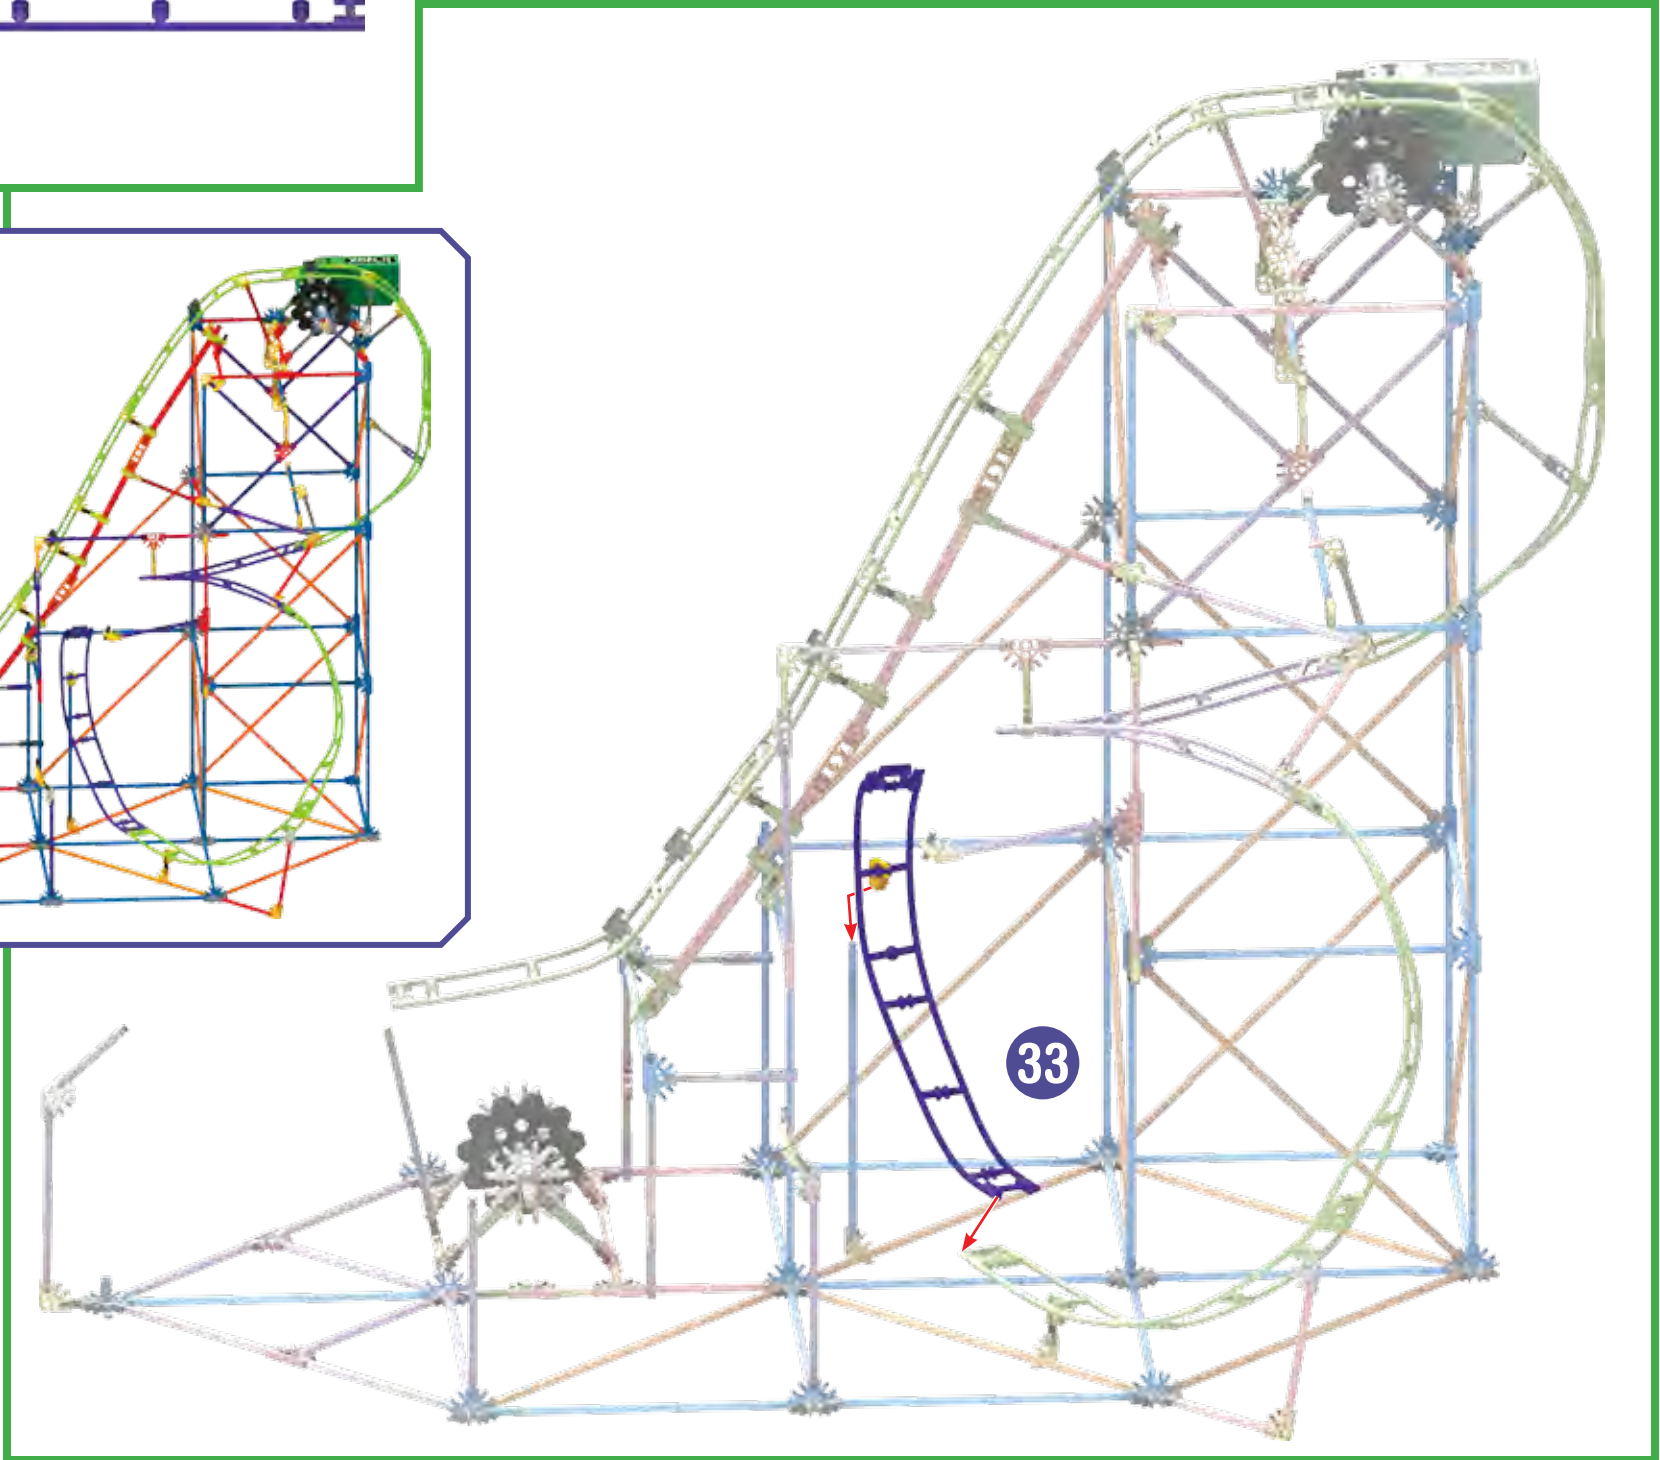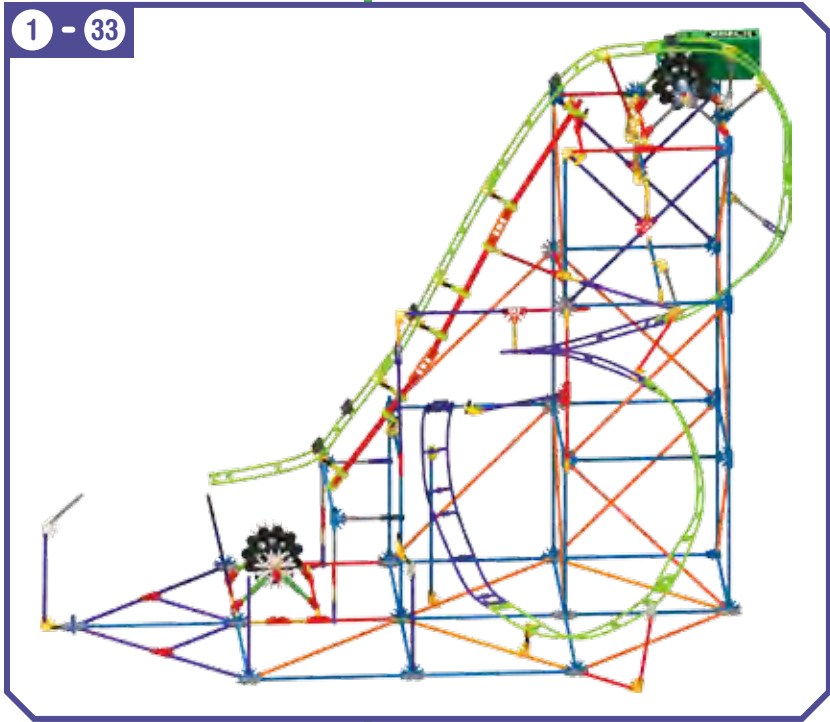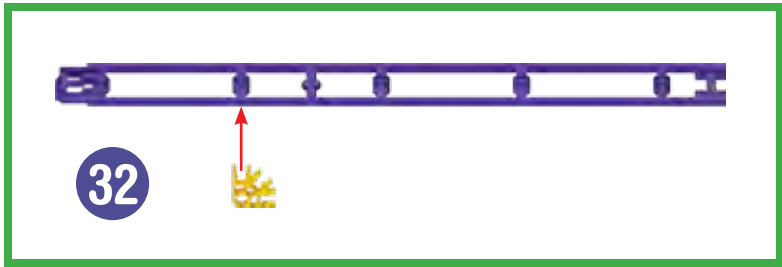

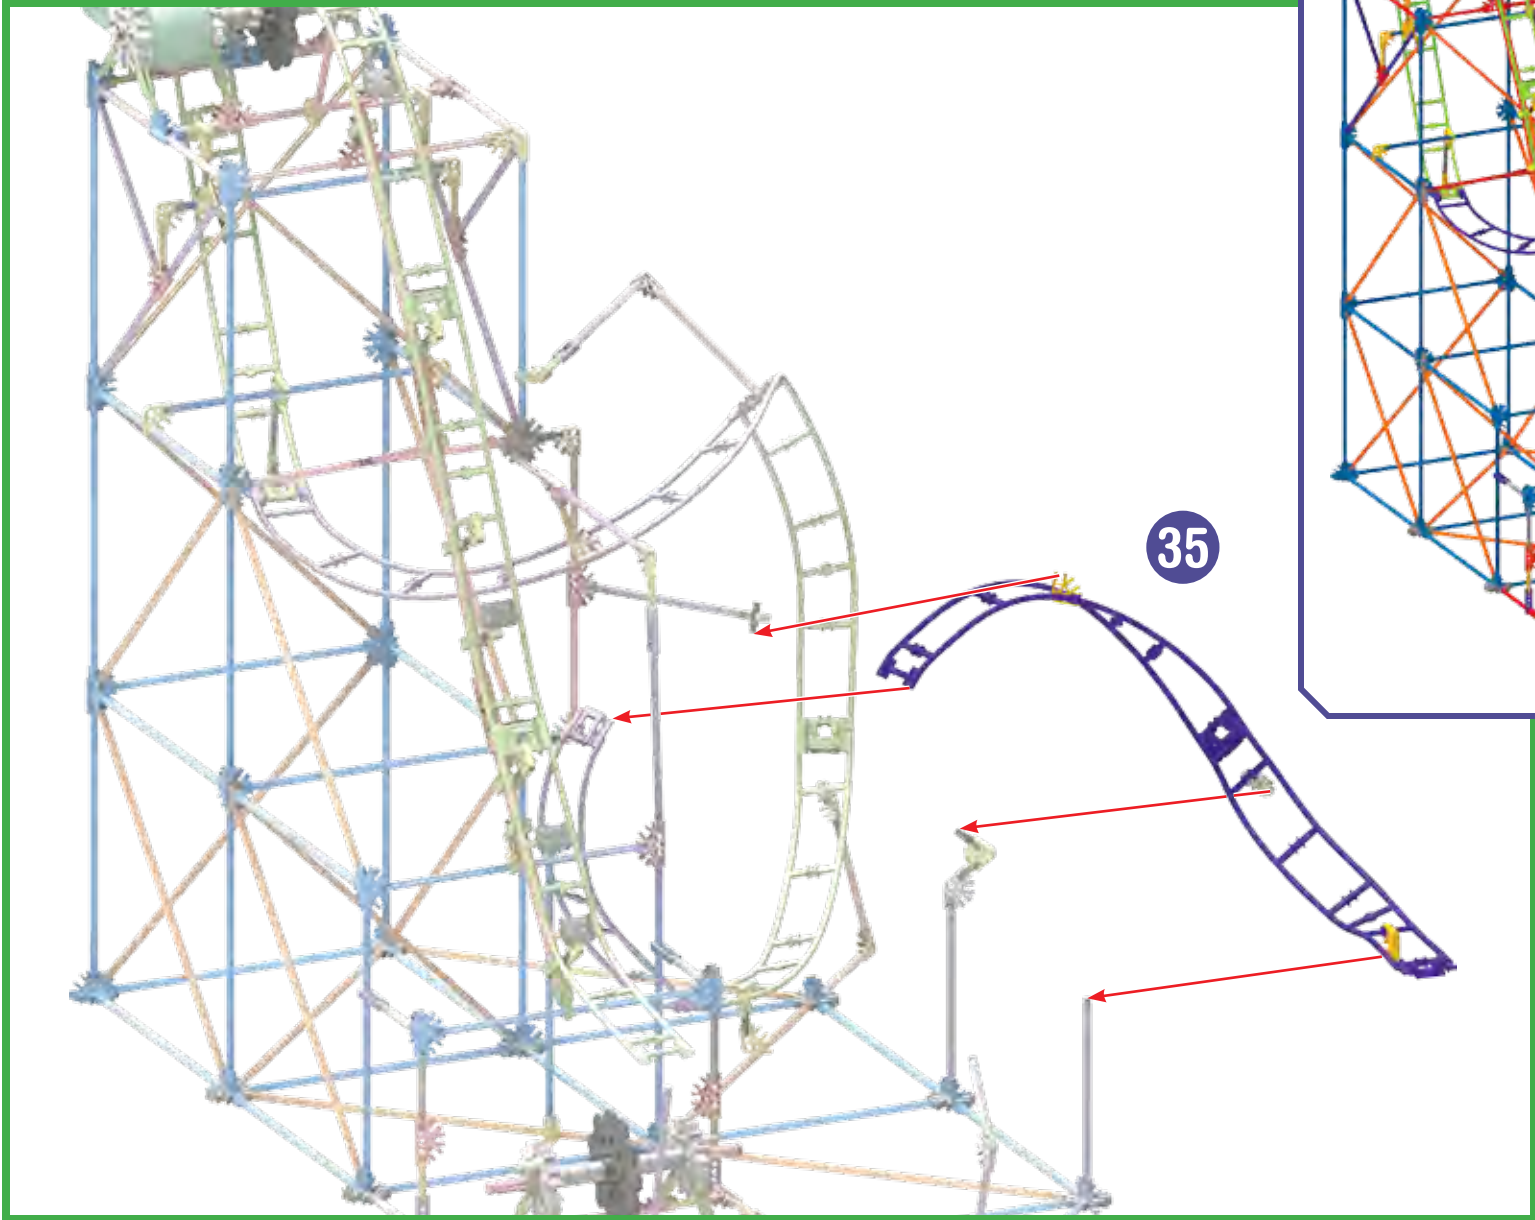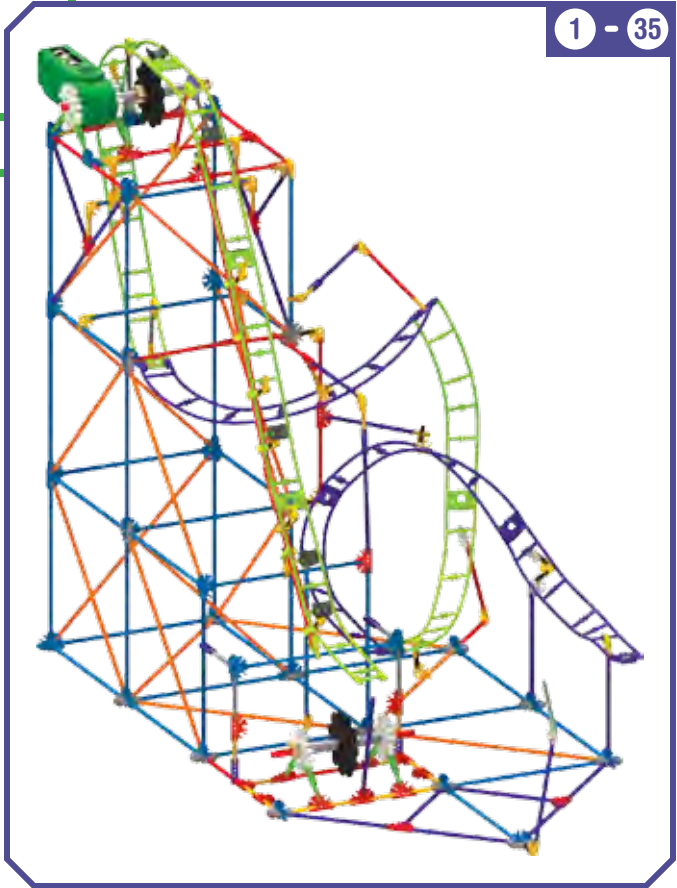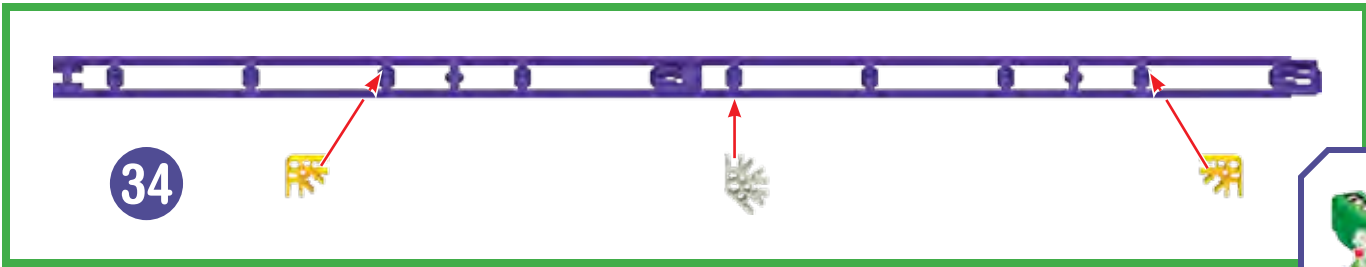

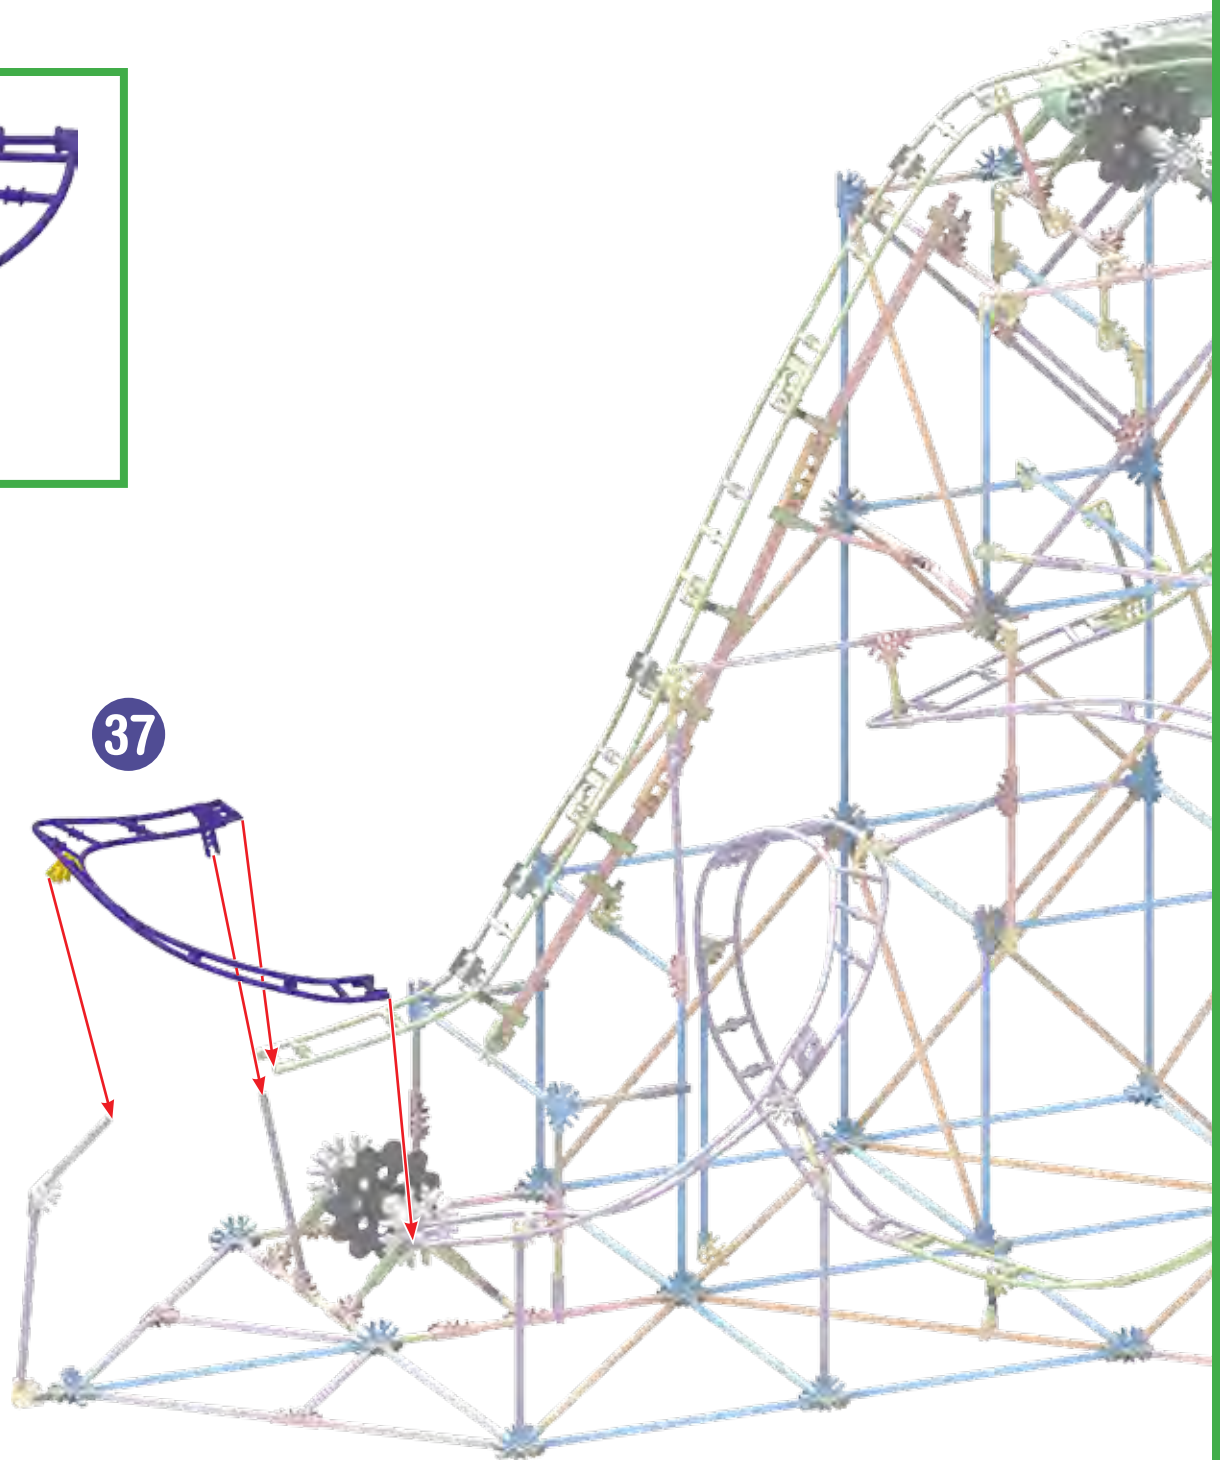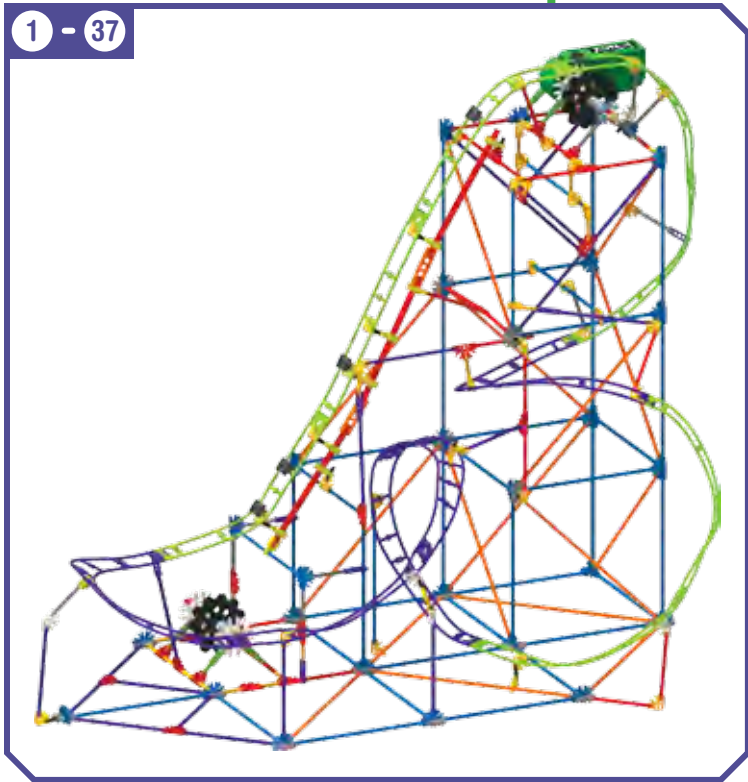
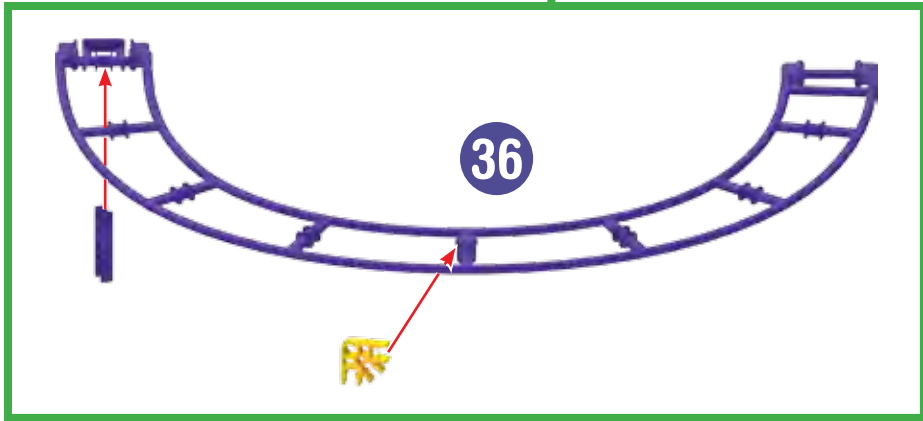


IMPORTANT:
Attach all the chain links
in the same direction.

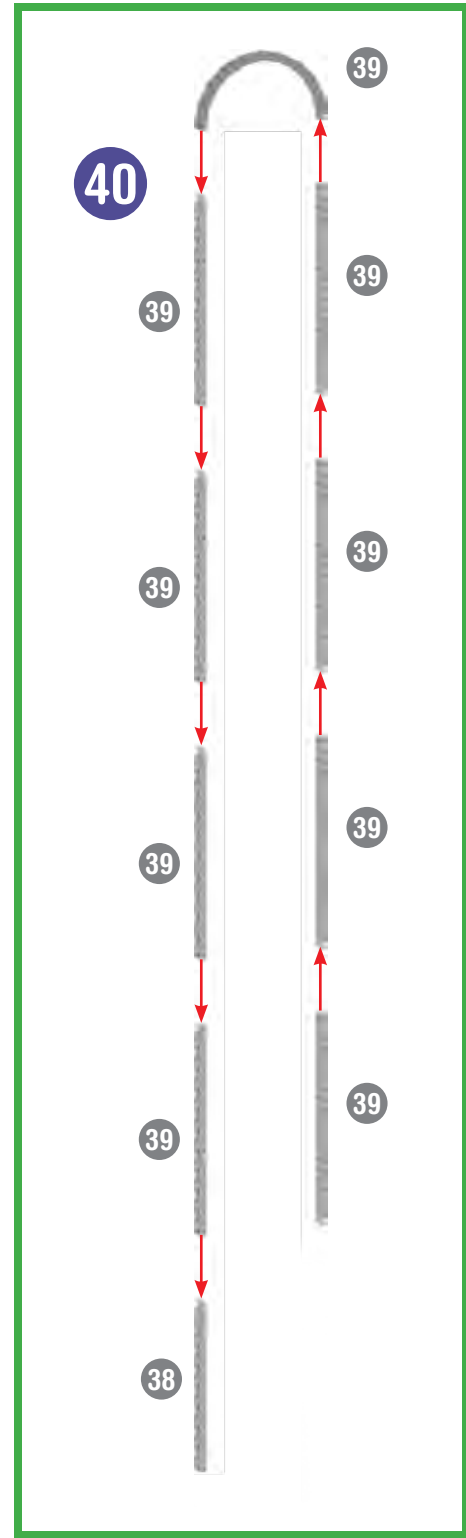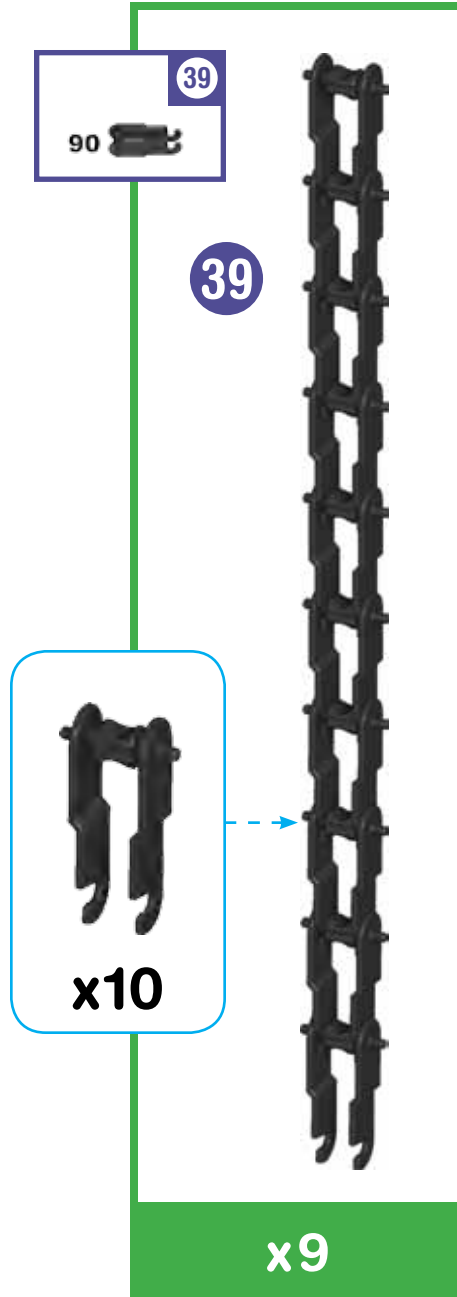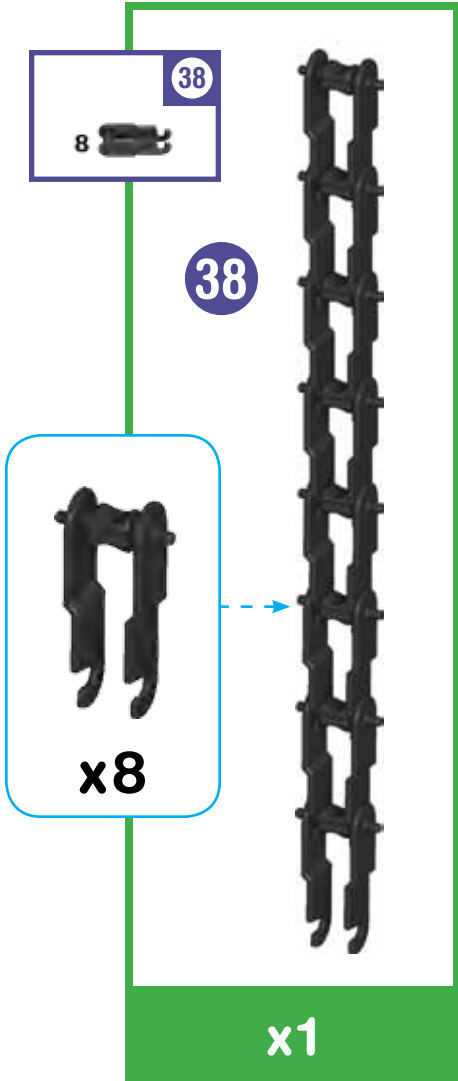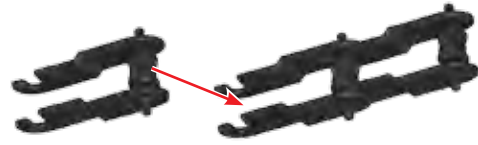




41

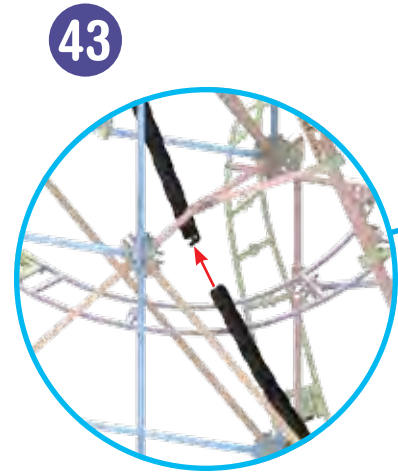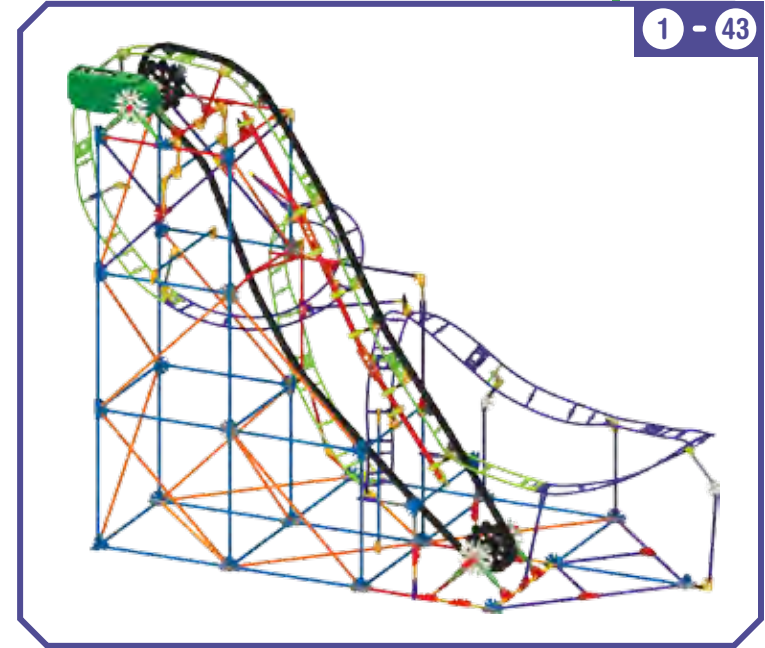

43

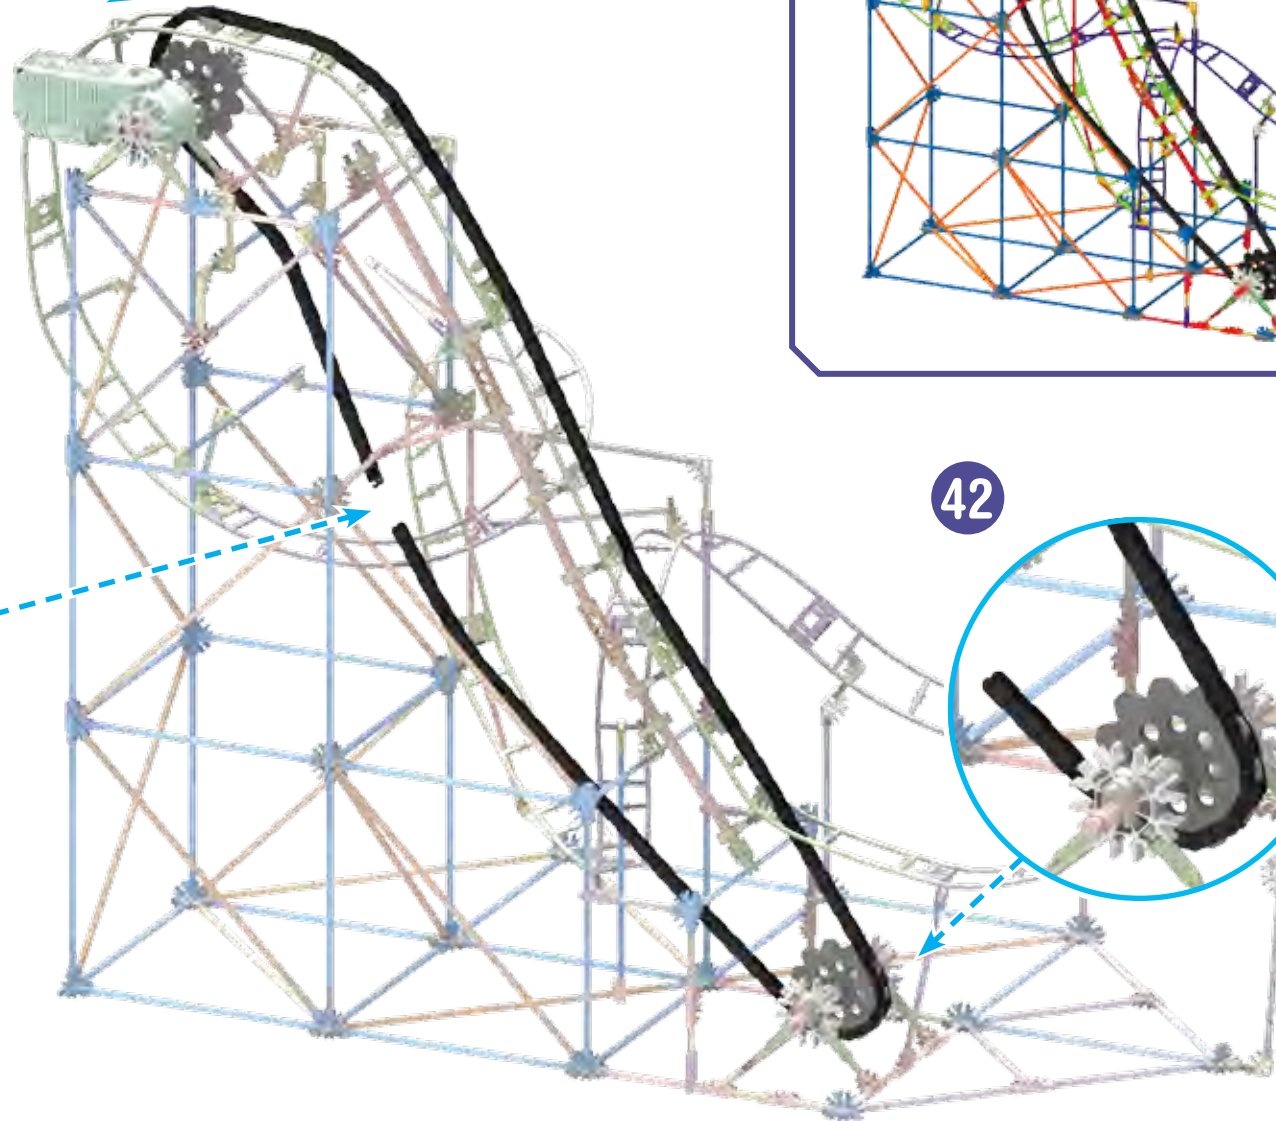

42



K'NEX
WILD WHIPLASH
Additional Build

To attach the car, undo a piece of track and then thread the car wheels over the top side of the track. Then join the track pieces together. If the car gets stuck on the way down, make sure it is not hitting any K'NEX parts.

